


## SENSOR REMOVAL

### 1. REMOVE SOLAR SENSOR

Using a screw driver, pull out the sensor and disconnect the connector.

HINT:


- □ Tape the screwdriver tip before use.
- □ At the time of installation, please refer to the following item.  
Insert the sensor to instrument panel as shown in the illustration.

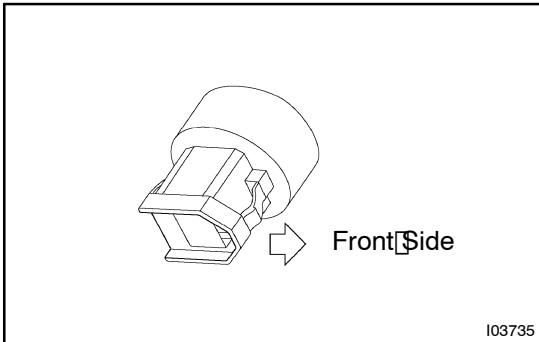

### 2. REMOVE ROOM TEMPERATURE SENSOR


(a) Remove the No. 1 under cover.

(See [page BO-91](#))

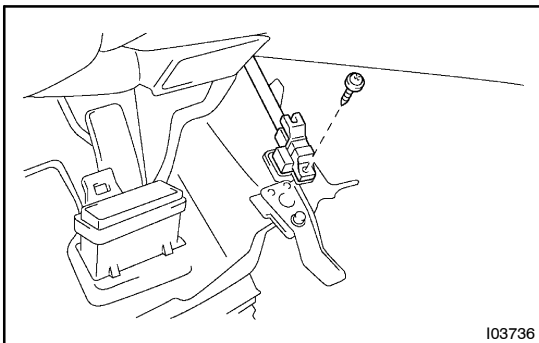

(b) Remove the room temperature sensor.

- (1) Remove the No. 1 safety pad set bolts and screws.
- (2) Disconnect the connector and aspirator hose.
- (3) Remove the screw and sensor.

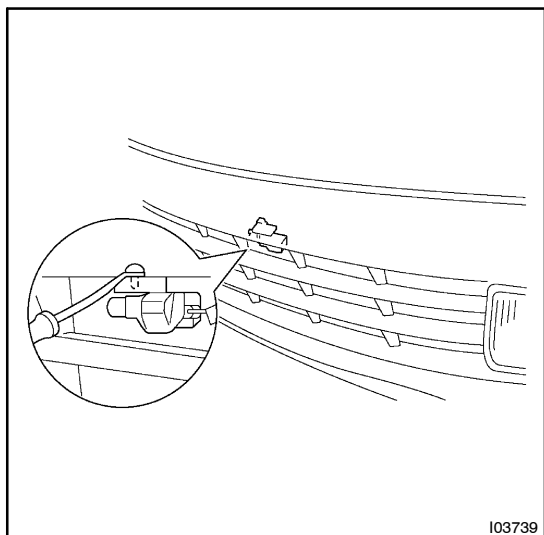

I03739

**3. REMOVE AMBIENT TEMPERATURE SENSOR**


- (a) Disconnect the connector.
- (b) Using a clip remover, pull out the sensor from bumper reinforcement.

**4. REMOVE EVAPORATOR TEMPERATURE SENSOR**


- (a) Remove these parts:
  - (1) No. 1 under cover
  - (2) No. 1 safety pad
 (See page BO-91)
- (b) Remove the evaporator temperature sensor.
  - (1) Using a screwdriver, pull out the sensor with bracket plate.

**HINT:**

Tape the screwdriver tip before use.

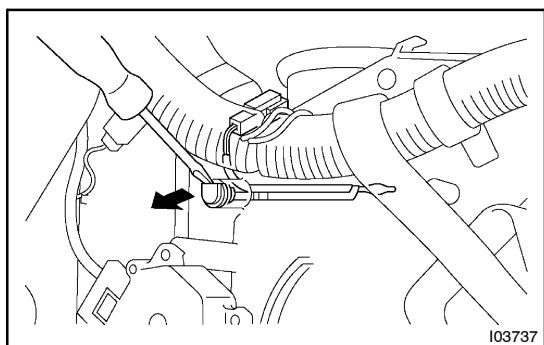


I03737

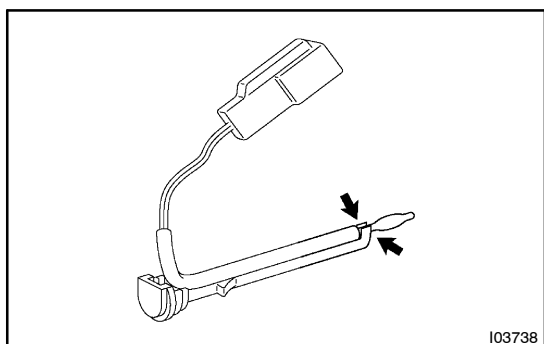

I03738

- (2) Release the 2 claws and remove the sensor from bracket plate.

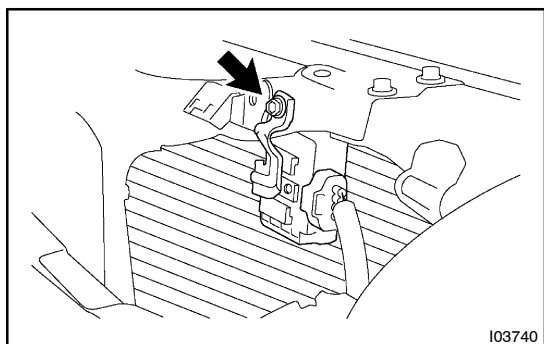

I03740

**5. REMOVE SMOG VENTILATION SENSOR**

- (a) Disconnect the connector.
- (b) Remove the bolt and sensor.