
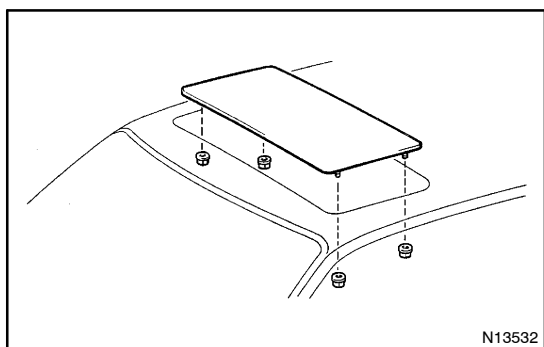


INSTALLATION


1. INSTALL SLIDING ROOF HOUSING

- (a) Install the sliding roof housing with the 6 nuts to the body.
Torque: 5.5 N·m (56 kgf·cm, 49 in·lbf)
- (b) Install the 6 brackets with the 12 bolts.
Torque: 8.0 N·m (82 kgf·cm, 71 in·lbf)
- (c) Connect the 4 drain hoses with the 4 clips to the housing.

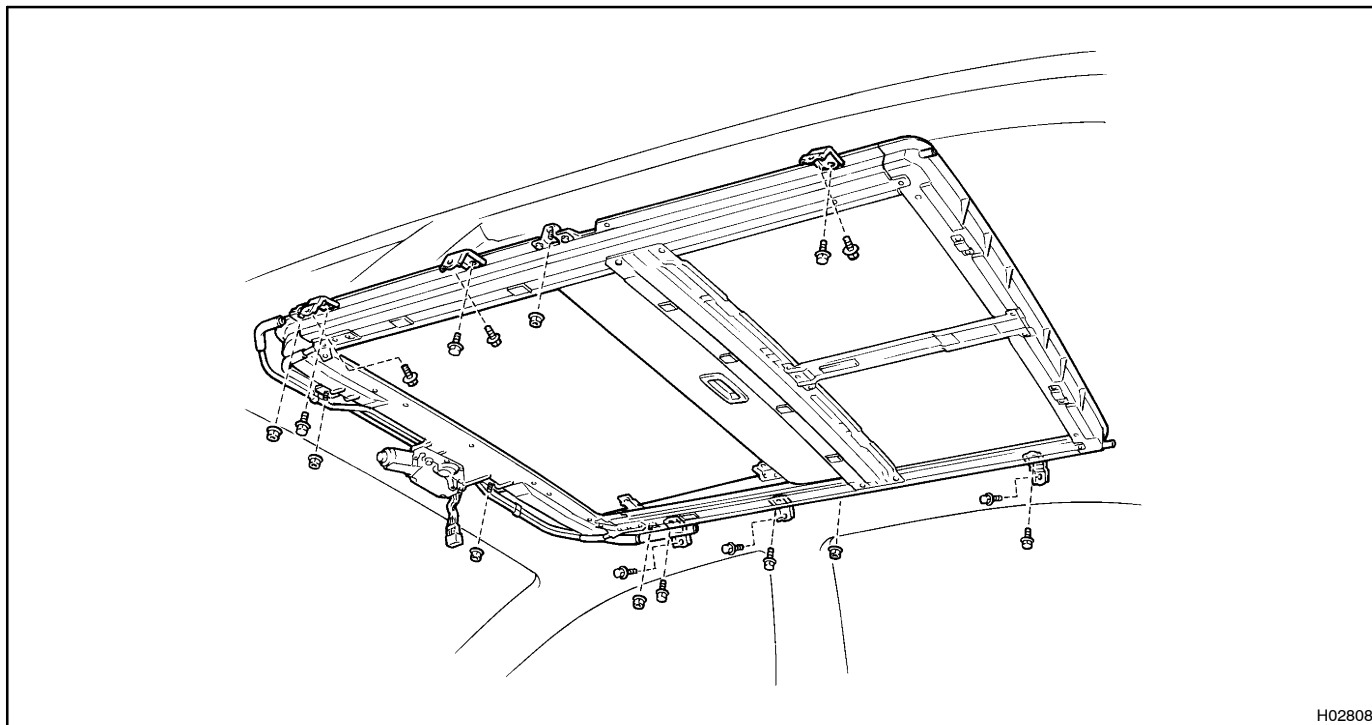

2. INSTALL SLIDING ROOF GLASS

- Install the sliding roof glass with the 4 nuts.
Torque: 5.5 N·m (56 kgf·cm, 49 in·lbf)


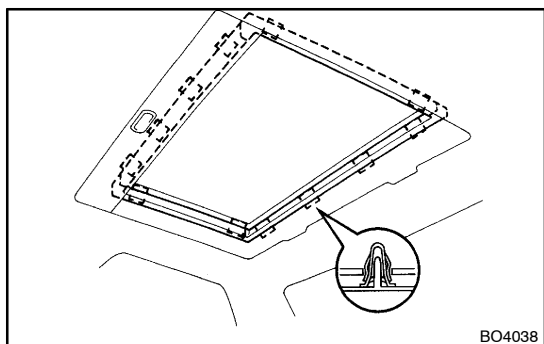


3. INSTALL SLIDING ROOF GARNISHES


- Install the sliding roof garnishes to the body.

4. INSTALL ROOF HEADLINING


- (a) Slide the roof headlining rearward to connect the hook to the body.
- (b) Put the fastener tape and install the 3 clips to the body.

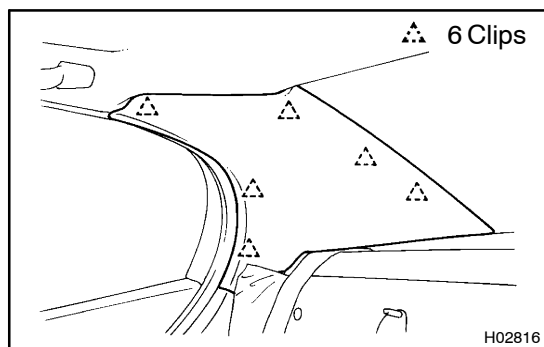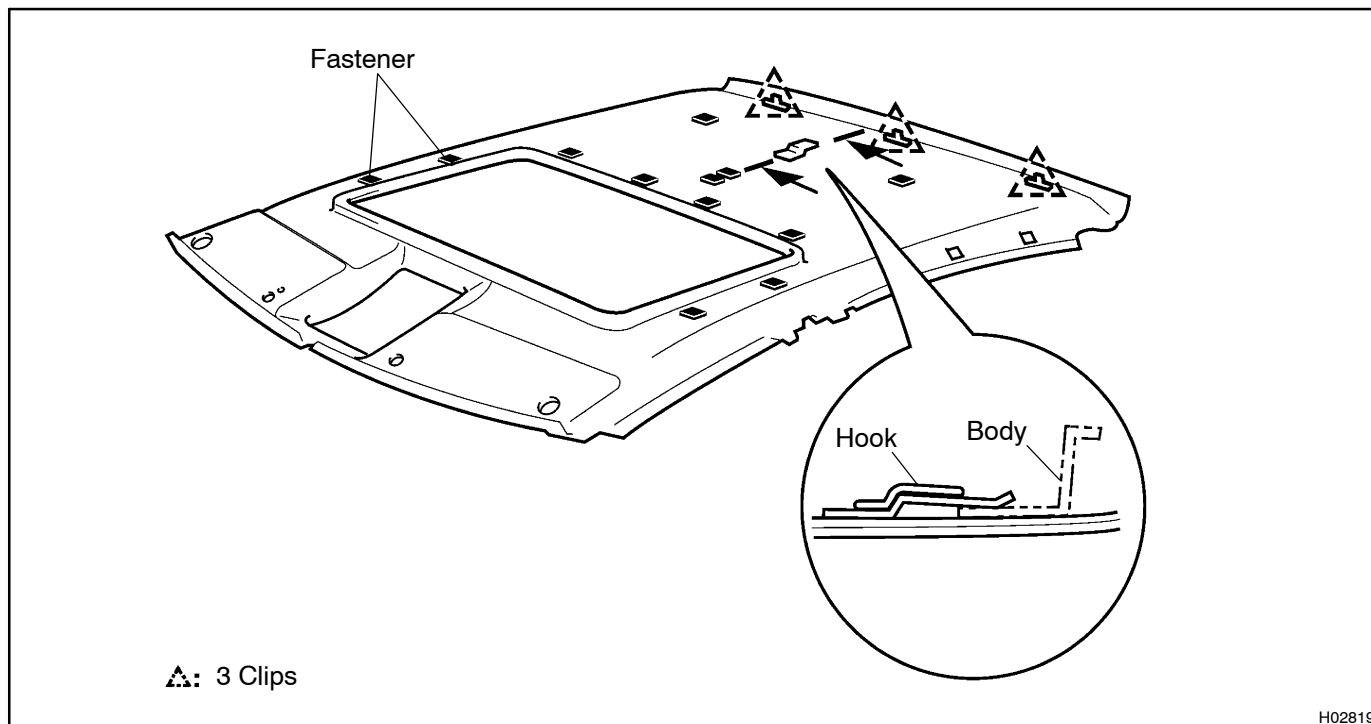**5. INSTALL ROOF SIDE INNER GARNISHES**

Install the roof side inner garnishes to the body.

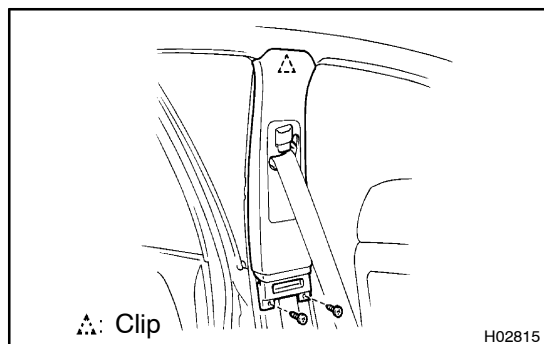
**6. INSTALL CENTER PILLAR UPPER GARNISHES**

Install center pillar upper garnishes with the 4 screws.

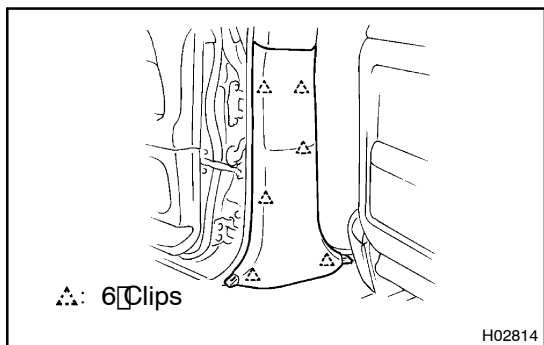

7. INSTALL CENTER PILLAR LOWER GARNISHES

Install the center pillar lower garnishes to the body.

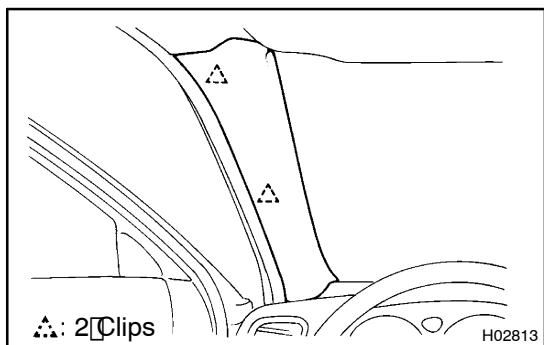

8. INSTALL THESE PARTS:

- (a) Rear seat side garnishes
- (b) Rear personal lights
- (c) Front pillar garnishes
- (d) Rear door opening trims
- (e) Front door opening trims
- (f) Rear door inside scuff plates
- (g) Front door inside scuff plates
- (h) Assist grips
- (i) Sun visors and holders
- (j) Rear seat

(See page BO-120)

9. INSTALL MAP LAMP ASSEMBLY

- (a) Connect the connector.
- (b) Install the map lamp assembly with the 4 screws.
- (c) Install the lens and cover.