


INSPECTION

1. REMOVE V-BANK COVER
2. REMOVE VSV

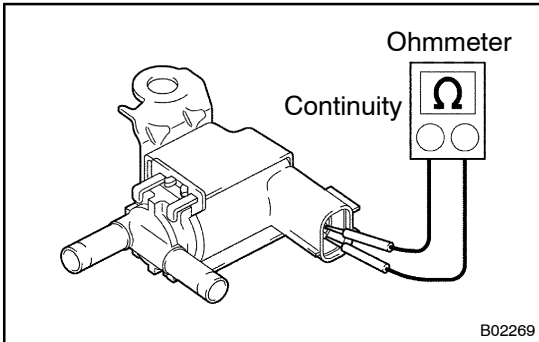


3. INSPECT VSV

- (a) Inspect the VSV for open circuit.
Using an ohmmeter, check that there is continuity between the terminals.


Resistance: 30 – 34 Ω at 20°C (68°F)

If there is no continuity, replace the VSV.

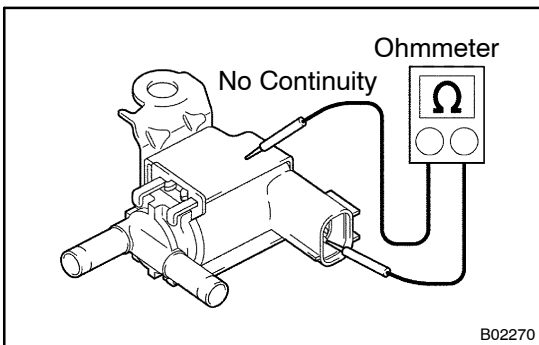


- (b) Inspect the VSV for ground.
Using an ohmmeter, check that there is no continuity between each terminal and the body.

If there is continuity, replace the VSV.

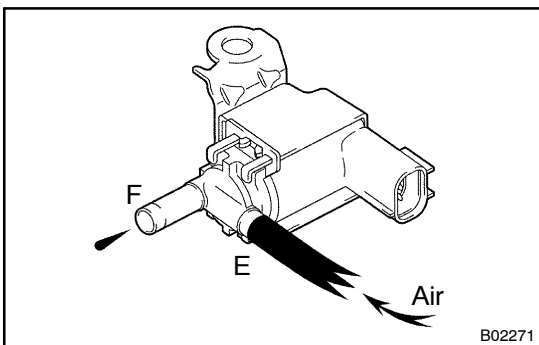

- (c) Inspect the VSV operation.

- (1) Check that air does not flow from ports E to F.

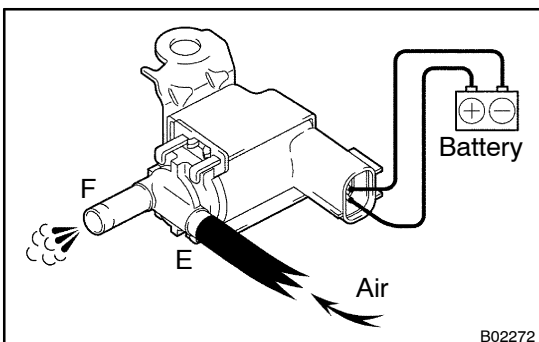

- (2) Apply battery positive voltage across the terminals.

- (3) Check that air flows from ports E to F.

If operation is not as specified, replace the VSV.

4. REINSTALL VSV
5. REINSTALL V-BANK COVER