


ELECTRICAL WIRING ROUTING

Position of Parts in Body

[LHD]

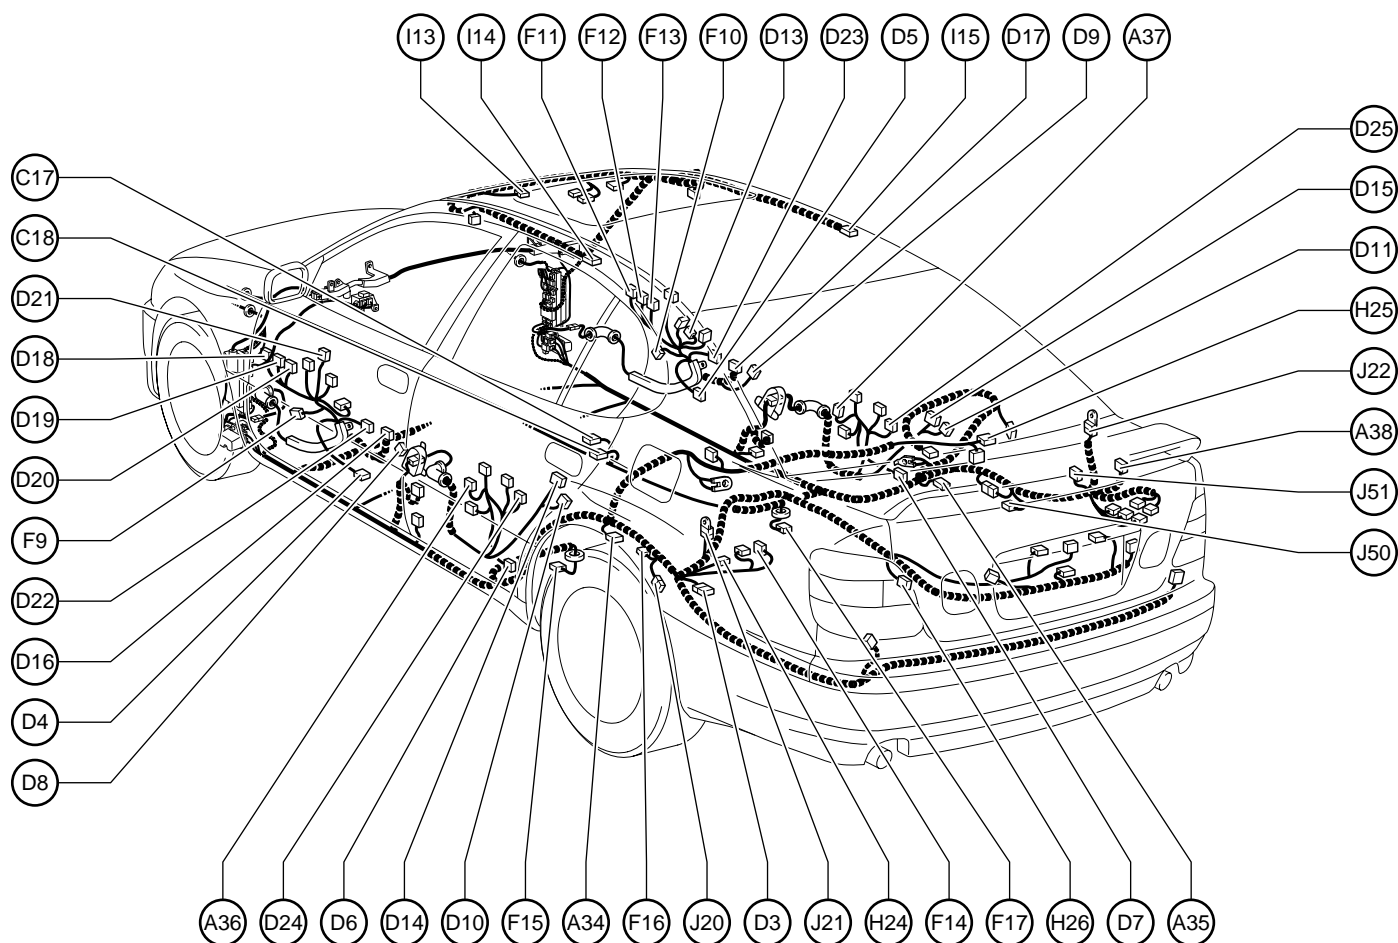

A34 ABS Speed Sensor Rear LH
 A35 ABS Speed Sensor Rear RH
 A36 Ashtray Illumination Rear LH
 A37 Ashtray Illumination Rear RH
 A38 Auto Antenna Control Relay and Motor

C17 Cellular Phone (Hand Set)
 C18 Cellular Phone (Hand Set)

D 3 Diode (Luggage Door Open Detection)
 D 4 Door Courtesy Light Front LH
 D 5 Door Courtesy Light Front RH
 D 6 Door Courtesy Light Rear LH
 D 7 Door Courtesy Light Rear RH
 D 8 Door Courtesy SW Front LH
 D 9 Door Courtesy SW Front RH
 D10 Door Courtesy SW Rear LH
 D11 Door Courtesy SW Rear RH
 D13 Door Lock Control SW RH
 D14 Door Lock Motor and Door Lock Detection SW Rear LH
 D15 Door Lock Motor and Door Lock Detection SW Rear RH
 D16 Door Lock Motor, Door Key Lock and Unlock SW and Door Lock Detection SW Front LH
 D17 Door Lock Motor, Door Key Lock and Unlock SW and Door Lock Detection SW Front RH
 D18 Driver Door ECU
 D19 Driver Door ECU
 D20 Driver Door ECU
 D21 Driving Position Memory SW

D22 Door Lock Motor and SW Front LH
 D23 Door Lock Motor and SW Front RH
 D24 Door Lock Motor and SW Rear LH
 D25 Door Lock Motor and SW Rear RH

F 9 Front Door Speaker LH
 F 10 Front Door Speaker RH
 F 11 Front Passenger Door ECU
 F 12 Front Passenger Door ECU
 F 13 Front Passenger Door ECU
 F 14 Fuel Lid Opener Motor
 F 15 Fuel Pump and Sender
 F 16 Fuel Pump Control ECU
 F 17 Fuel Sender (Sub)

H24 Height Control Sensor (Rear)
 H25 High Mounted Stop Light (Bulb Type)
 H26 High Mounted Stop Light (LED Type)

I 13 Inner Mirror
 I 14 Interior Light Rear LH
 I 15 Interior Light Rear RH

J 20 Junction Connector
 J 21 Junction Connector
 J 22 Junction Connector
 J 50 Junction Connector
 J 51 Junction Connector