

POWER SOURCE

SERVICE HINTS

HEAD LP RELAY

2-1 : Closed with light control SW at **HEAD** position or dimmer SW at **FLASH** position

TAIL RELAY

5-3 : Closed with light control SW at **TAIL** or **HEAD** position

ENG MAIN RELAY

1-2 : Closed with ignition SW at **ON** or **ST** position

I12 IGNITION SW

2-3 : Closed with ignition key at **ACC** or **ON** position

2-4 : Closed with ignition key at **ON** or **ST** position

7-6 : Closed with ignition key at **ON** or **ST** position

7-6 : Closed with ignition key at **ST** position

: PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
I12	72 (LHD)	J16	74 (LHD)		
	86 (RHD)	J39	88 (RHD)		

: RELAY BLOCKS

Code	See Page	Relay Blocks (Relay Block Location)
1	54 (LHD)	Engine Room No.1 R/B (Engine Compartment Right)
	54 (RHD)	Engine Room No.1 R/B (Engine Compartment Left)
3	56	Engine Room No.3 R/B (Engine Compartment Left)


: JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	58 (LHD)	Engine Room Main Wire and Driver Side J/B (Left Kick Panel)
	58 (RHD)	Engine Room Main Wire and Driver Side J/B (Right Kick Panel)
1F	58 (LHD)	Cowl Wire and Driver Side J/B (Left Kick Panel)
	58 (RHD)	Cowl Wire and Driver Side J/B (Right Kick Panel)
1J	59 (LHD)	Cowl Wire and Driver Side J/B (Left Kick Panel)
	59 (RHD)	Cowl Wire and Driver Side J/B (Right Kick Panel)
2A	60 (LHD)	Engine Room Main Wire and Passenger Side J/B (Right Kick Panel)
	60 (RHD)	Engine Room Main Wire and Passenger Side J/B (Left Kick Panel)
2B	60 (LHD)	Engine Room Main Wire and Passenger Side J/B (Right Kick Panel)
	60 (RHD)	Engine Room Main Wire and Passenger Side J/B (Left Kick Panel)


: CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
EB1	96 (LHD)	Cowl Wire and Relay Block Wire (Inside of the Engine Room No.3 R/B)
IA1	98 (LHD)	Engine Room Main Wire and Cowl Wire (Near the Driver Side J/B)
II4	100 (LHD)	Engine Room Main Wire and Cowl Wire (Near the Passenger Side R/B)
IK1	110 (RHD)	Engine Room Main Wire and Cowl Wire (Near the Driver Side J/B)

I12

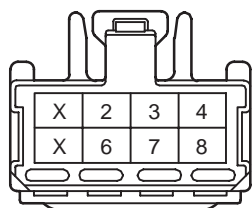


J16

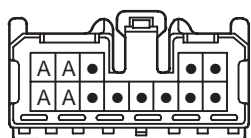

(Hint : See Page 7, 23, 39)

J39

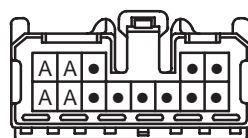

(Hint : See Page 7, 23, 39)