

## CAUTION / NOTICE / HINT

### HINT:

- Use the same procedure for the RH side and LH side.
- The following procedure is for the LH side.

## PROCEDURE


### 4.REMOVE FRONT NO. 2 SPEAKER ASSEMBLY

86160P

### NOTICE:

Do not touch the speaker cone.

a.

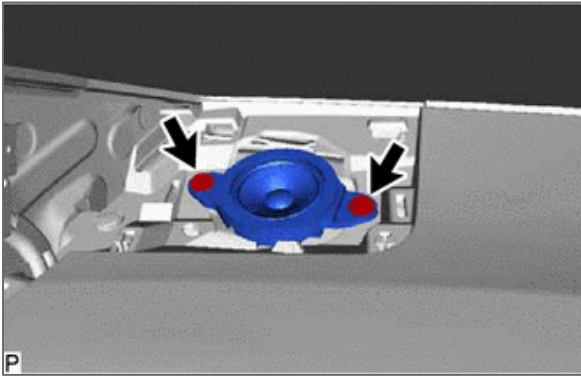

Remove the 2 screws.

b. Lift the front No. 2 speaker assembly and disconnect the connector to remove it.