


Front fog light switch circuit

WIRING DIAGRAM

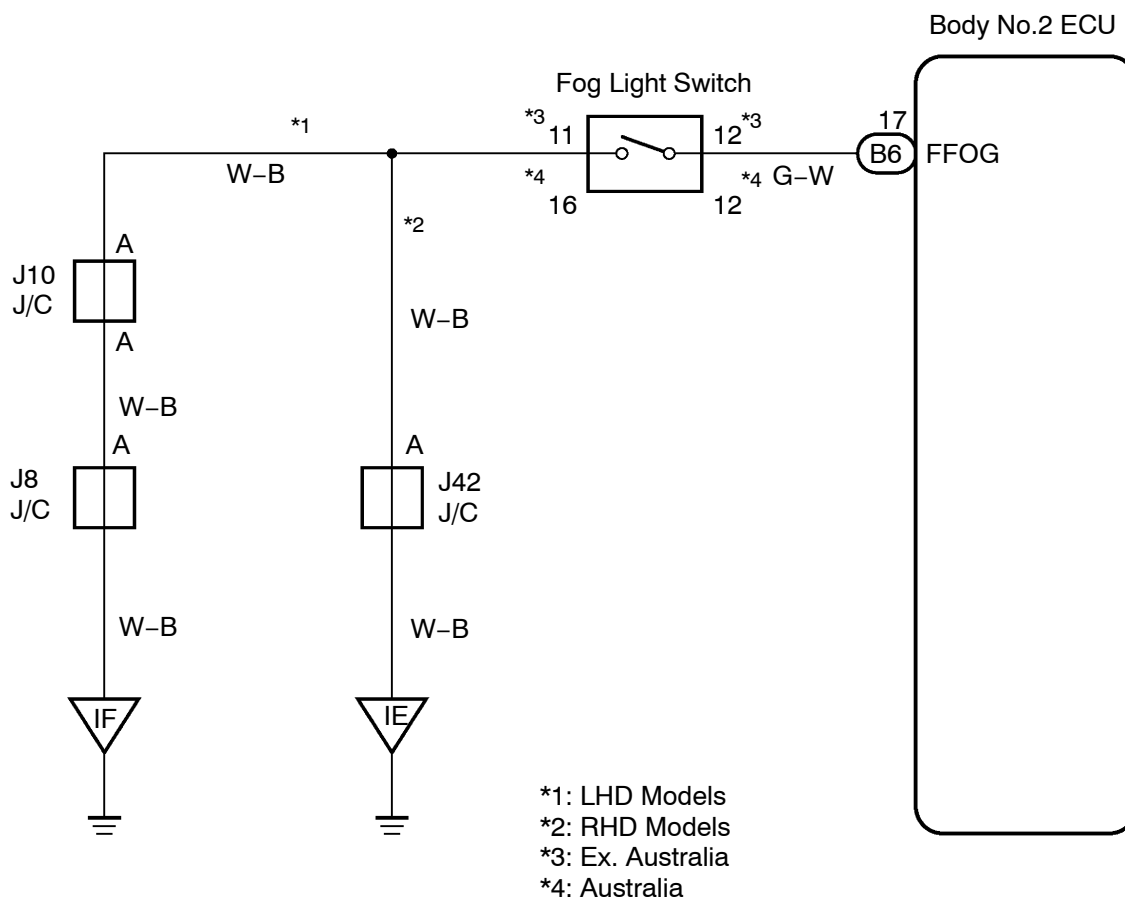

I05622

INSPECTION PROCEDURE

HINT:

In case of using the hand-held tester, start the inspection from step 1 and in case of not using the hand-held tester, start from step 2.

1 Check front fog light operating using hand-held tester.

PREPARATION:

Connect the hand-held tester to the DLC3.

CHECK:

Check that the front fog light can operate in an ACTIVE TEST.

OK

Proceed to next circuit inspection shown on problem symptoms table. (See page DI-660)

NG

2 Check front fog light switch. (See page BE-61)

NG

Replace the front fog light switch.

OK

3 Check wire harness and connector between front fog light switch and Body ECU.

NG

Repair or replace wire harness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table. (See page DI-660)