


BLOWER MOTOR CONTROL RELAY REMOVAL

AC16Q-01

1. REMOVE THESE PARTS:


- (a) Front door scuff plate on the passenger side
 - (b) Cowl side trim on the passenger side
 - (c) No. 2 under cover
 - (d) Glove compartment door
 - (e) Glove compartment panel
- (See page BO-91)

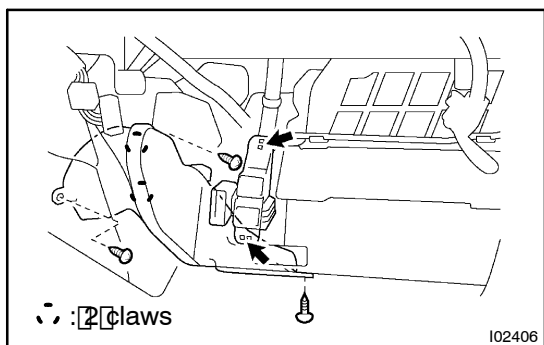

2. REMOVE AIR DUCT

Remove the screw and release the 2 claws, then pull out the air duct.

3. DISCONNECT WIRE HARNESS

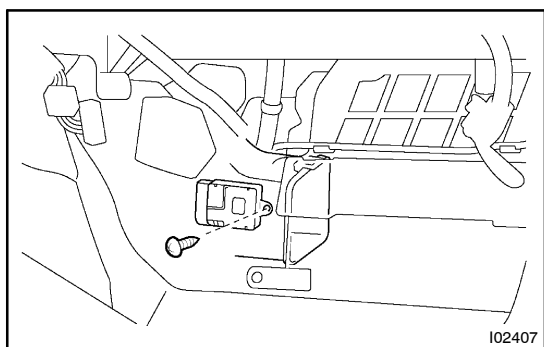

4. REMOVE BLOWER MOTOR CONTROL RELAY

Remove the screw and blower motor control relay, then disconnect the connectors.