












# Position of Parts in Engine Compartment (LHD)

- \* 1:w/ Grille Shutter System
- \* 2:w/o Grille Shutter System
- \* 3:Before Dec. 2018 Production
- \* 4:From Dec. 2018 Production













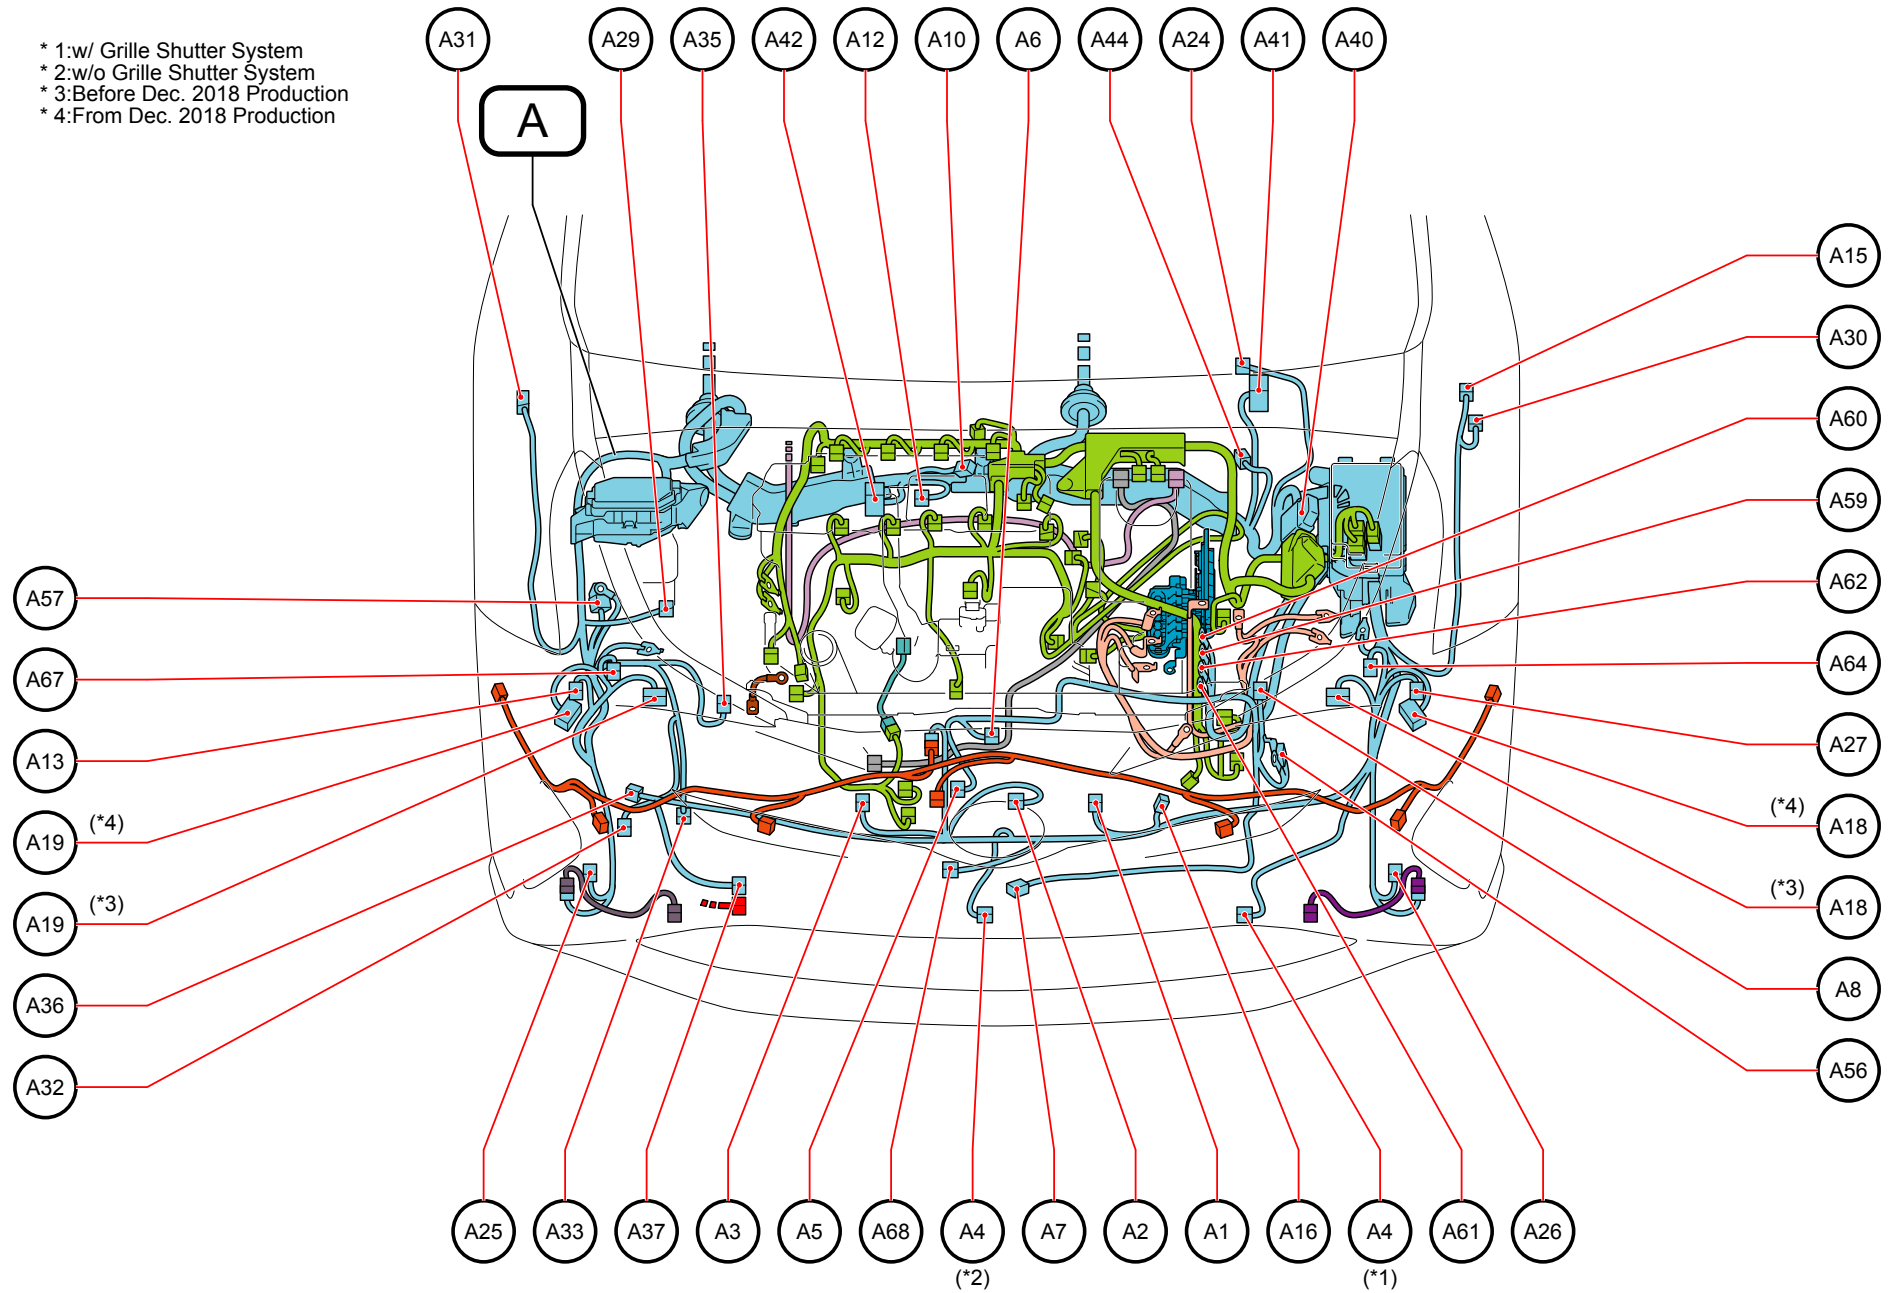


A1	Low Pitched Horn Assembly
A2	Millimeter Wave Radar Sensor Assembly
A3	High Pitched Horn Assembly
A4	No. 1 Cooler Thermistor
A5	Cooling Fan Motor RH
A6	Cooling Fan Motor LH
A7	Inverter Water Pump Assembly (with Motor)
A8	Front Airbag Sensor LH
A10	Engine Coolant Temperature Sensor (for Exhaust Heat Recirculation System)
A12	Brake Booster Pump Assembly
A13	Front Turn Signal Light Assembly RH (Headlight Assembly RH)
A15	Front Speed Sensor LH
A16	Vehicle Approaching Speaker Assembly
A18	Headlight Light Control ECU Assembly LH (Headlight Assembly LH)
A19	Headlight Light Control ECU Assembly RH (Headlight Assembly RH)
A24	Windshield Wiper Motor Assembly
A25	Fog Light Assembly RH
A26	Fog Light Assembly LH
A27	Front Turn Signal Light Assembly LH (Headlight Assembly LH)
A29	A/C Tube & Accessory Assembly
A30	Wireless Door Lock Buzzer
A31	Front Speed Sensor RH
A32	Level Warning Switch Assembly
A33	Windshield Washer Motor and Pump Assembly
A35	Front Airbag Sensor RH
A36	Radiator Shutter Sub-Assembly
A37	Swing Grille Actuator Assembly
A40	ECM
A41	Brake Booster with Master Cylinder Assembly
A42	Brake Actuator Assembly
A44	Brake Fluid Level Warning Switch (Brake Master Cylinder Reservoir Assembly)
A56	No. 1 Ground Junction Connector
A57	No. 2 Ground Junction Connector
A59	Fusible Link Block Assembly
A60	Fusible Link Block Assembly
A61	Fusible Link Block Assembly
A62	Fusible Link Block Assembly
A64	Front Turn Signal Light Assembly LH (Headlight Assembly LH)
A67	Front Turn Signal Light Assembly RH (Headlight Assembly RH)
A68	Radiator Shutter Sub-Assembly







Position of Parts in Engine Compartment (LHD)

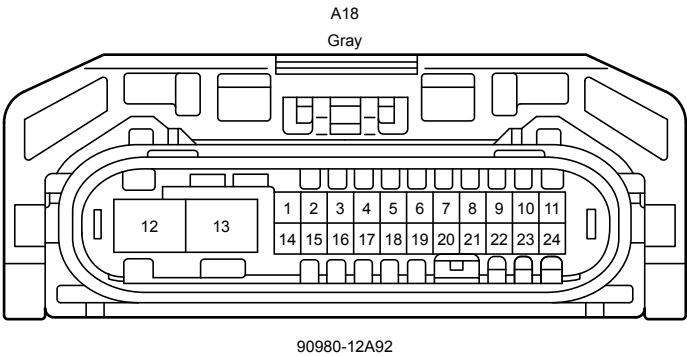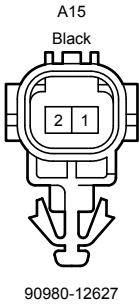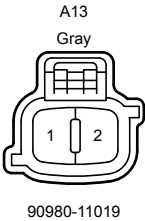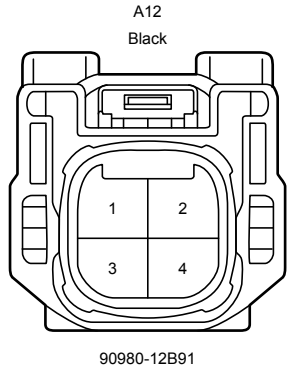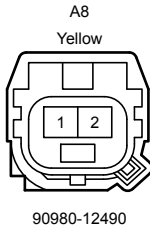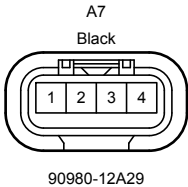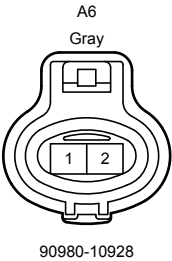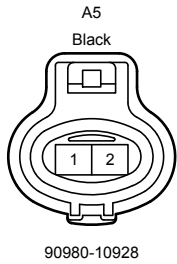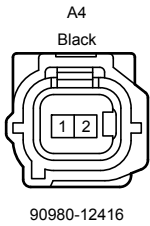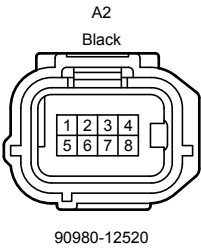

Position of Parts in Engine Compartment (LHD)

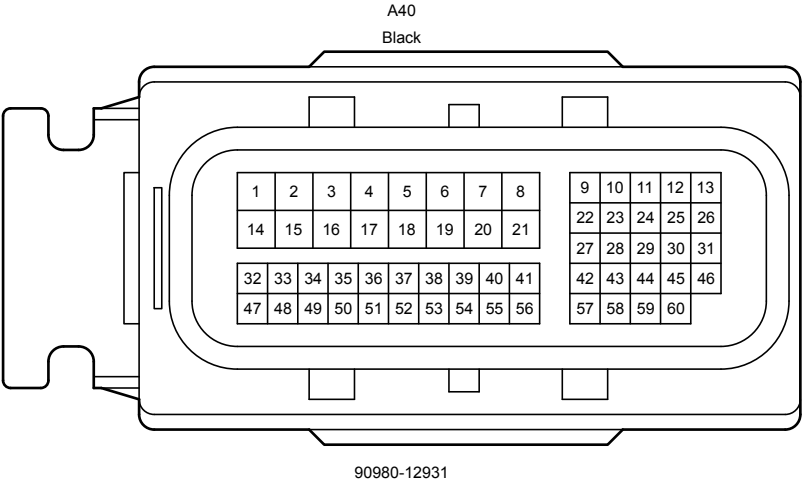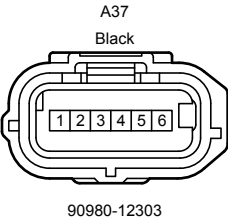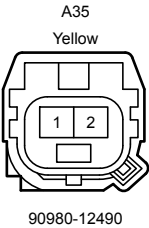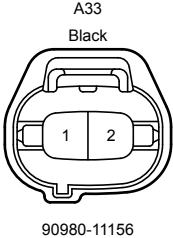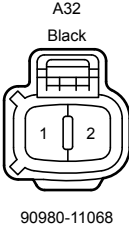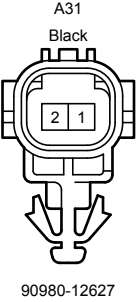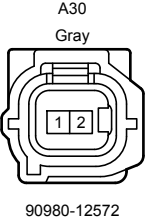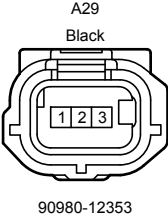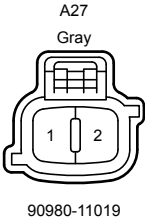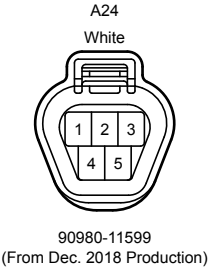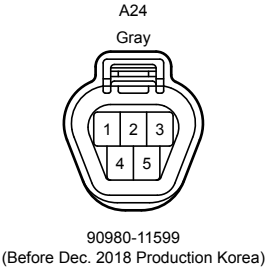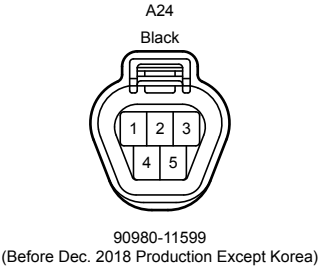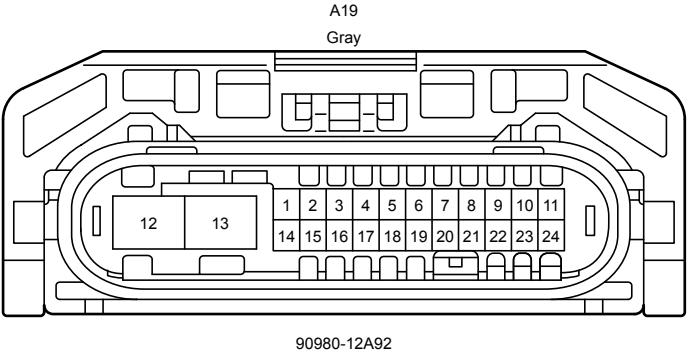

Position of Parts in Engine Compartment (LHD)

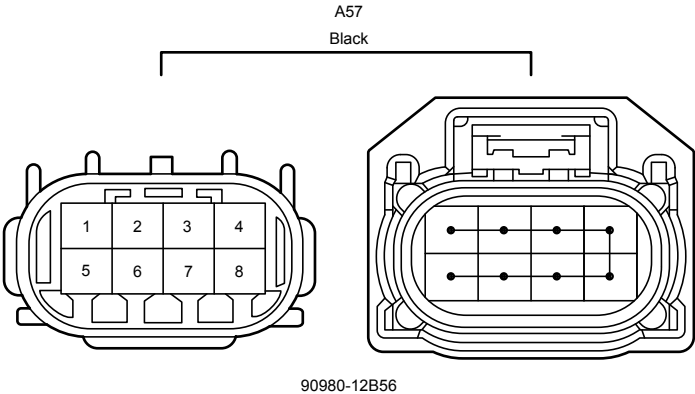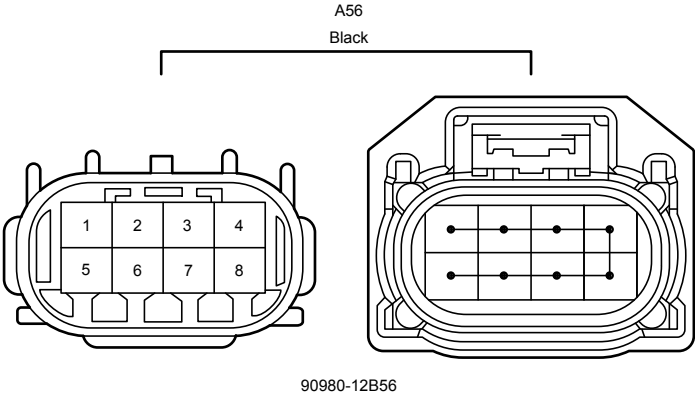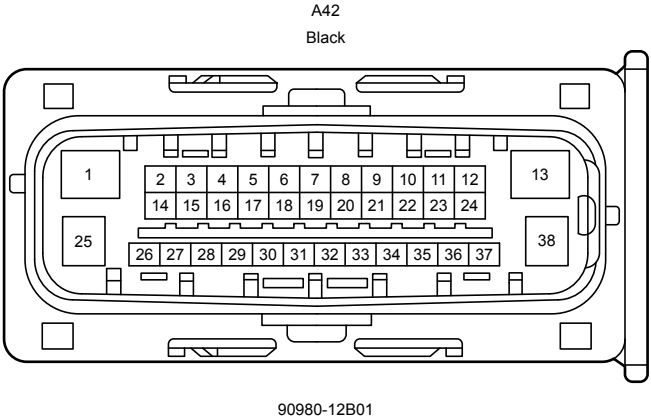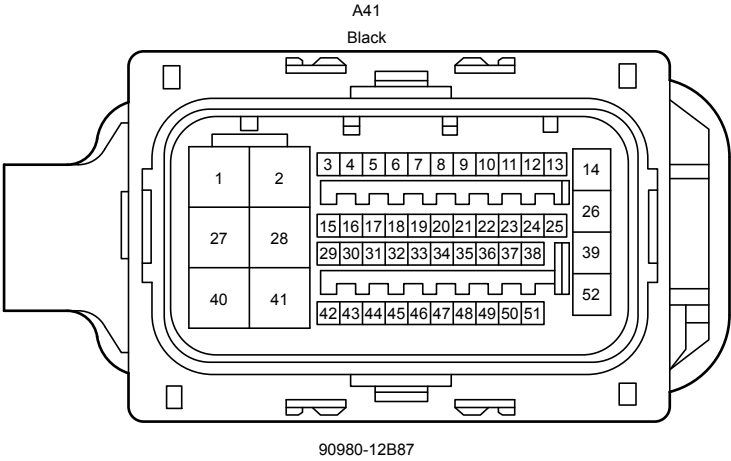

Position of Parts in Engine Compartment (LHD)

