


Connector Joining Wire Harness and Wire Harness

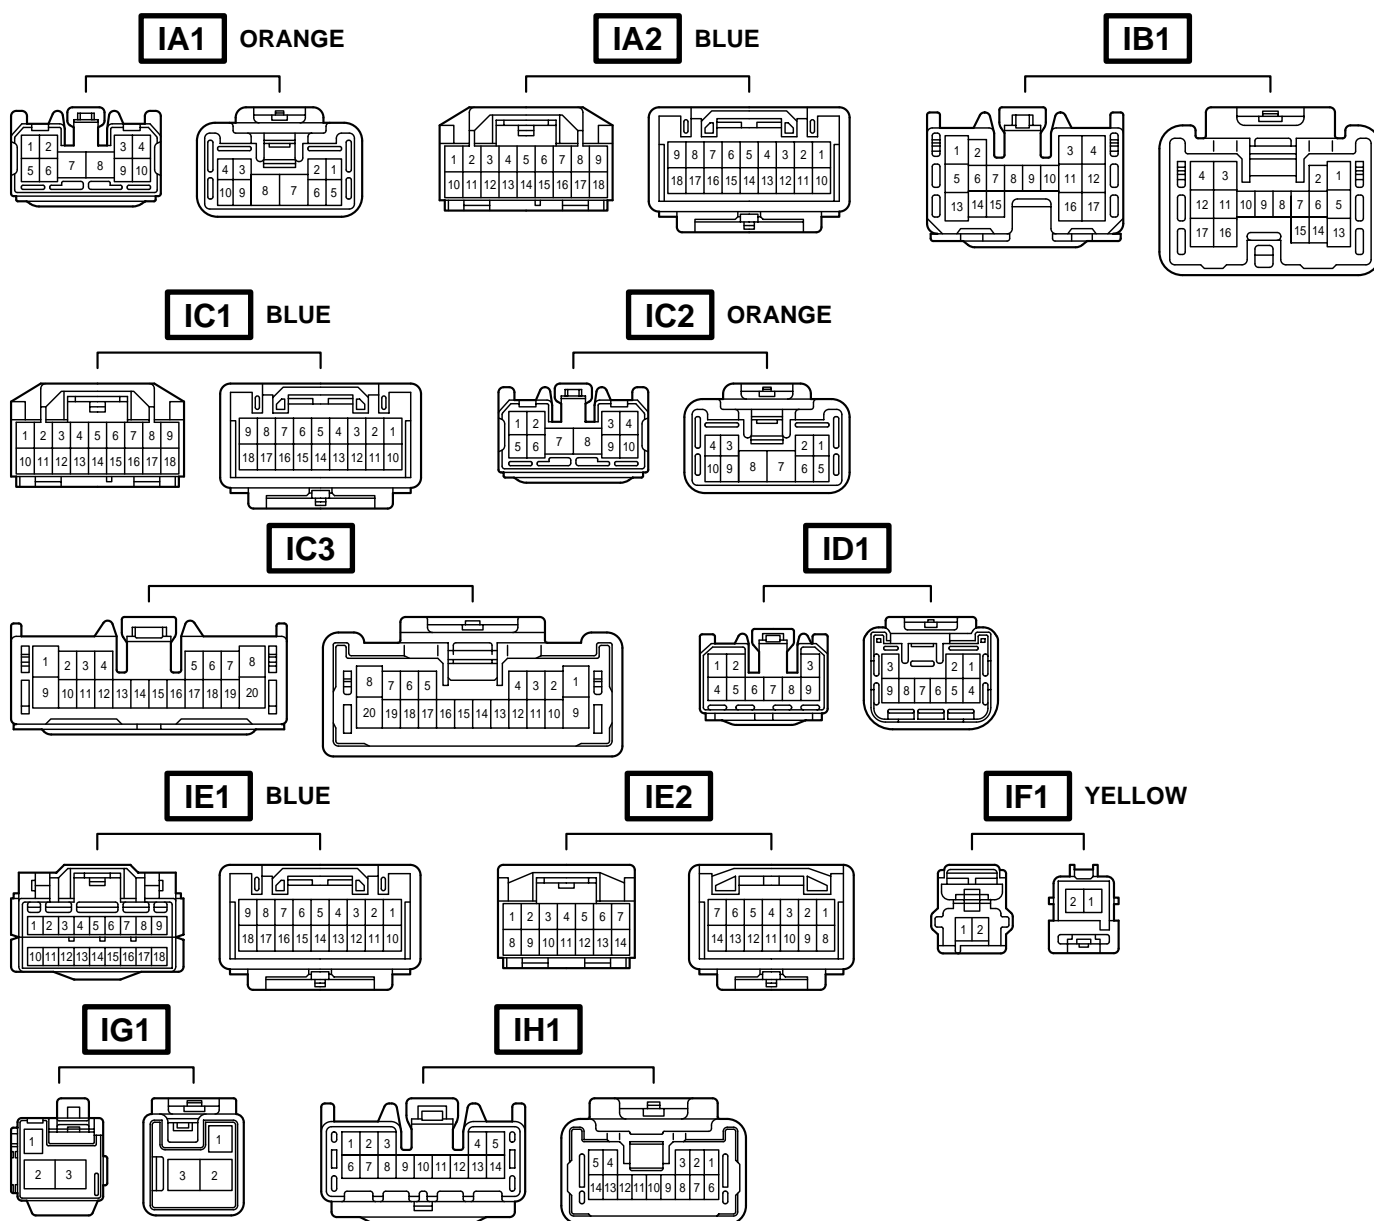

Code	Joining Wire Harness and Wire Harness (Connector Location)
IA1	Engine Room Main Wire and Cowl Wire (Near the Driver Side R/B)
IA2	Engine Room Main Wire and Cowl Wire (Near the Driver Side R/B)
IB1	Front Door LH Wire and Cowl Wire (Left Kick Panel)
IC1	Floor No.2 Wire and Cowl Wire (Left Kick Panel)
IC2	Floor No.2 Wire and Cowl Wire (Left Kick Panel)
IC3	Floor No.2 Wire and Cowl Wire (Left Kick Panel)
ID1	Cowl Wire and Cowl Wire (Left Side of the Instrument Panel Reinforcement)
IE1	Instrument Panel Wire and Cowl Wire (Left Side of the Steering Column)
IE2	Instrument Panel Wire and Cowl Wire (Left Side of the Steering Column)
IF1	Cowl Wire and Cowl Wire (Right Side of the Steering Column)
IG1	Cowl Wire and A/C Sub No.1 Wire (Left Side of the Blower Unit)
IH1	Instrument Panel Wire and A/C Sub No.2 Wire (Left Side of the Blower Unit)