


Front fog light relay circuit

WIRING DIAGRAM

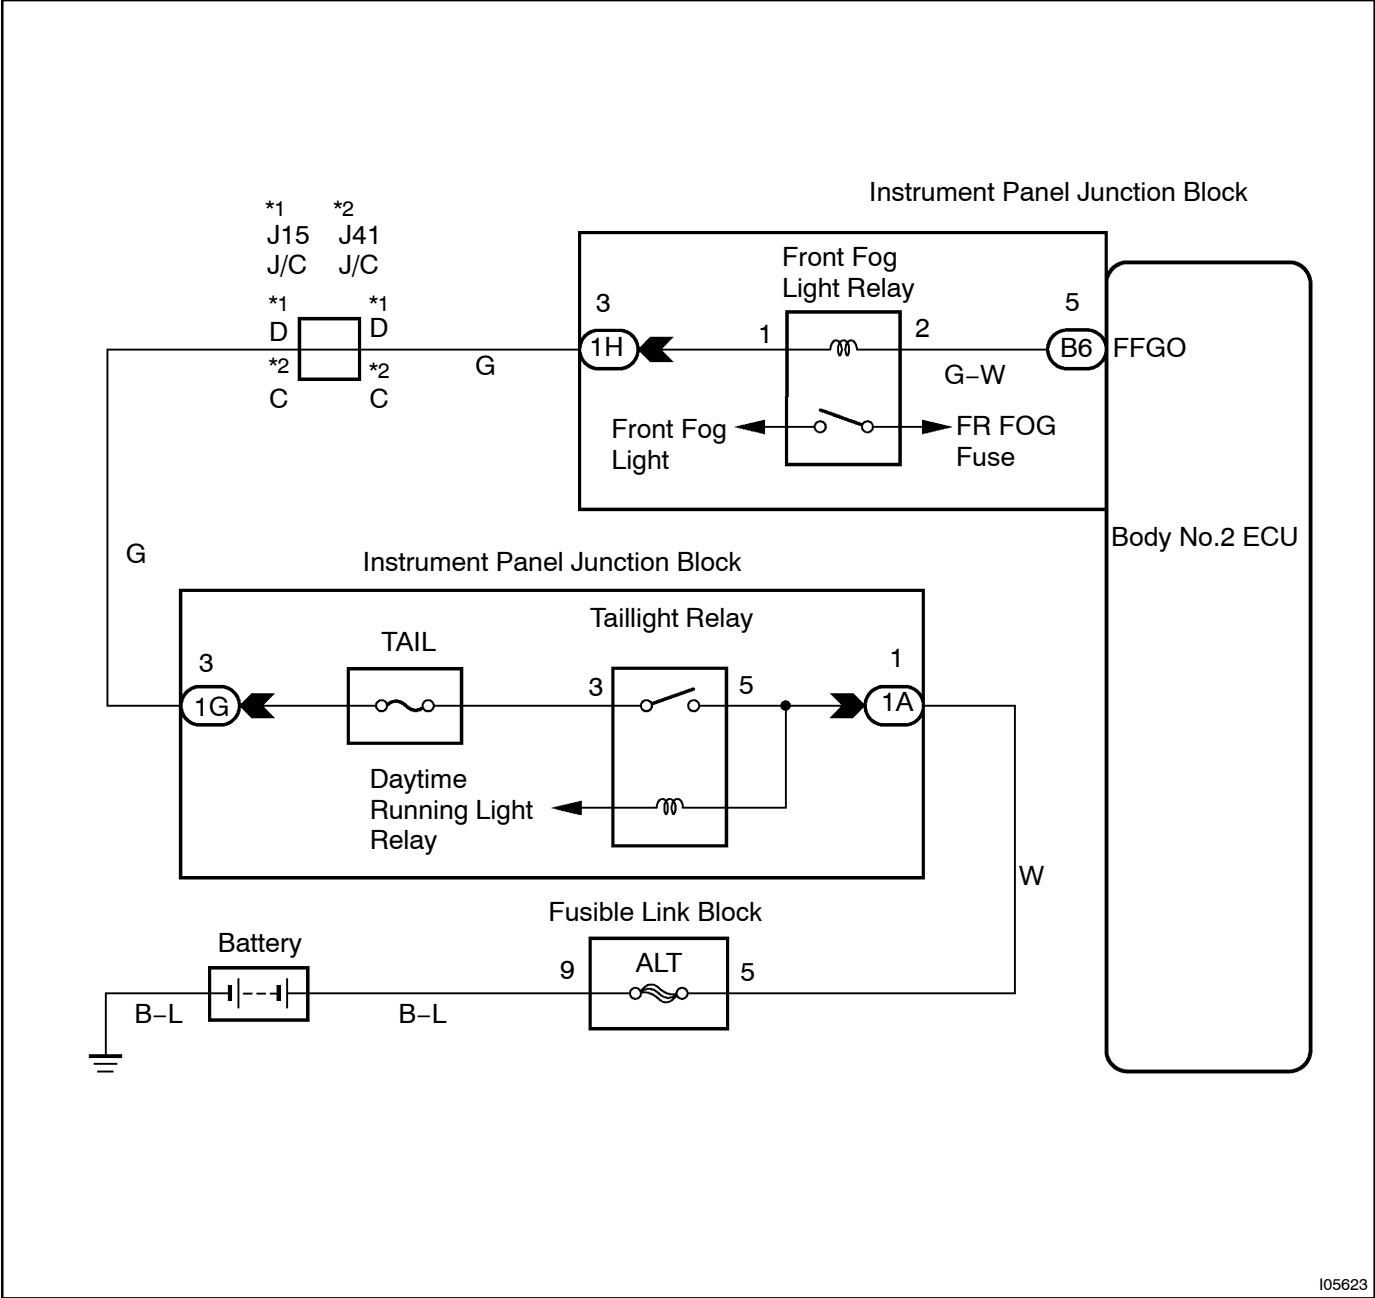

INSPECTION PROCEDURE

HINT:
In case of using the hand-held tester, start the inspection from step 1 and in case of not using the hand-held tester, start from step 2.

1

Check front fog light relay using hand-held tester.

PREPARATION:
Connect the hand-held tester to the DLC3.
CHECK:
Check that the front fog light relay can operate in an ACTIVE TEST.

OK

Proceed to next circuit inspection shown on problem symptoms table. (See page DI-660)

NG

2

Check front fog light relay. (See page BE-38)

NG

Replace the front fog light relay.

OK

3

Check wire harness and connector between front fog light relay and Body ECU, battery and front fog light relay.

NG

Repair or replace wire harness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table. (See page DI-660)