

SERVICE HINTS

HORN RELAY

5-3 : Closed horn SW on

○ : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
B5	72 (LHD)	C15	86 (RHD)	H19	68 (LHD)
	86 (RHD)	H18	68 (LHD)		82 (RHD)
C15	72 (LHD)		82 (RHD)	J19	74 (LHD)

○ : RELAY BLOCKS




Code	See Page	Relay Blocks (Relay Block Location)
1	54 (LHD)	Engine Room No.1 R/B (Engine Compartment Right)
	54 (RHD)	Engine Room No.1 R/B (Engine Compartment Left)
2	55 (LHD)	Engine Room No.2 R/B (Engine Compartment Left)
	55 (RHD)	Engine Room No.2 R/B (Engine Compartment Right)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
II2	100 (LHD)	Engine Room Main Wire and Cowl Wire (Near the Passenger Side R/B)
IK3	110 (RHD)	Engine Room Main Wire and Cowl Wire (Near the Driver Side J/B)

○ : SPLICE POINTS

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
I8	110 (RHD)	Cowl Wire			

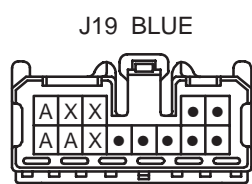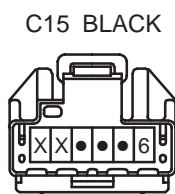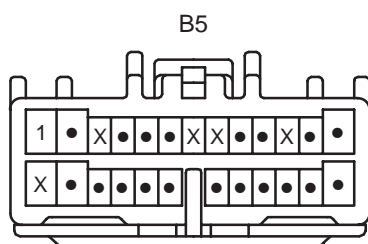

(Hint : See Page 7, 23, 39)