


Memory switch circuit (W/ memory)

WIRING DIAGRAM

(): RHD Models

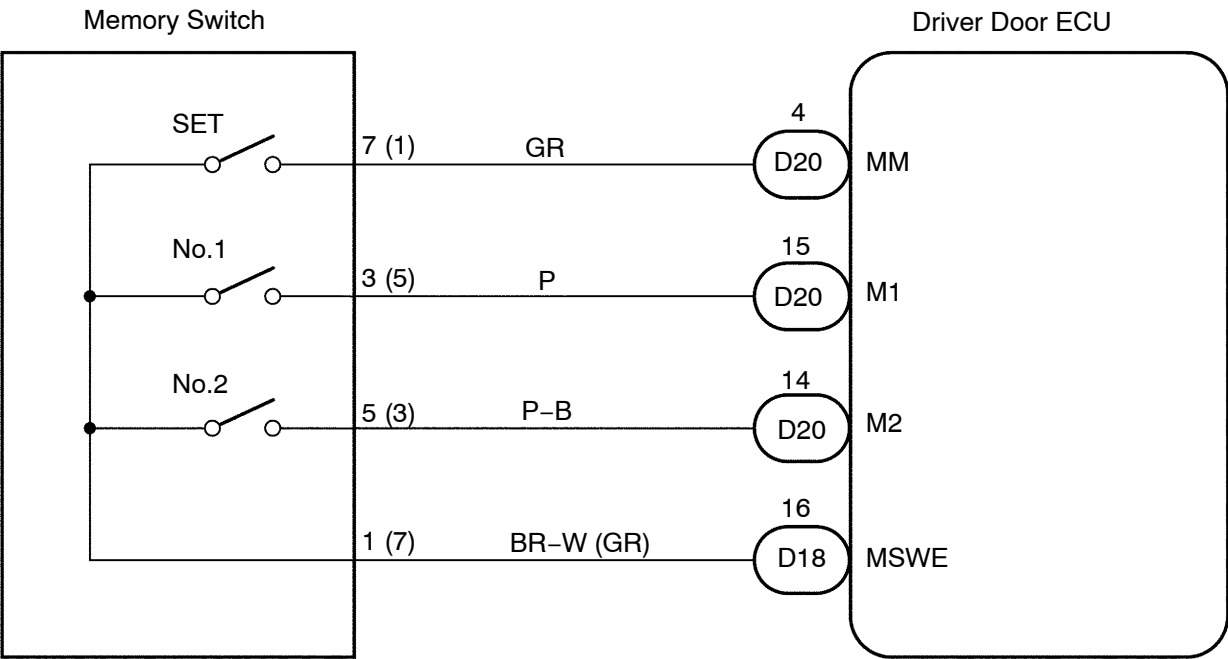

I04892

INSPECTION PROCEDURE

1 Check memory switch. (See page BE-192)

NG

Replace the memory switch.

OK

2 Check wireharness and connector between memory switch and driver door ECU.

NG

Repair or replace wireharness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table.
(See page DI-706)