


Connector Joining Wire Harness and Wire Harness

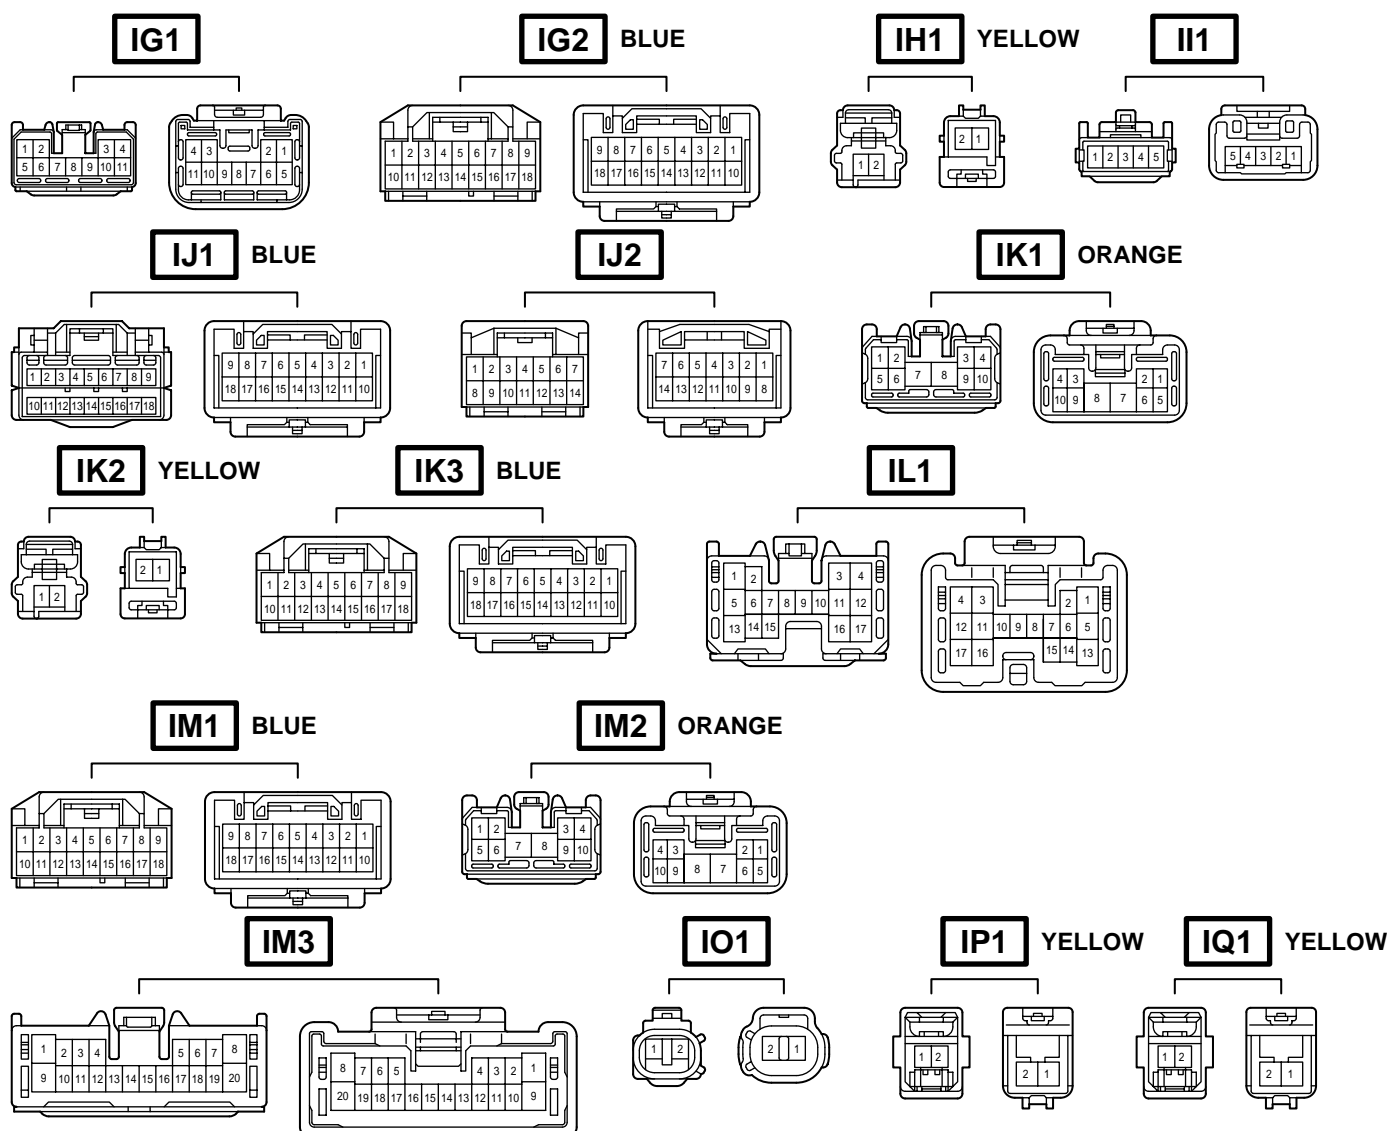

Code	Joining Wire Harness and Wire Harness (Connector Location)
IG1	Instrument Panel Wire and Floor No.1 Wire (Front LH Side of the Shift Lever)
IG2	
IH1	Cowl Wire and Cowl Wire (Left Side of the Steering Column)
II1	
IJ1	Instrument Panel Wire and Cowl Wire (Right Side of the Steering Column)
IJ2	
IK1	
IK2	Engine Room Main Wire and Cowl Wire (Near the Driver Side J/B)
IK3	
IL1	Front Door RH Wire and Cowl Wire (Right Kick Panel)
IM1	
IM2	Floor No.1 Wire and Cowl Wire (Right Kick Panel)
IM3	
IO1	Floor No.2 Wire and Cowl Wire (Front RH Side of the Shift Lever)
IP1	Floor No.2 Wire and Curtain Shield Airbag No.1 Wire (Left Side of Instrument Panel)
IQ1	Floor No.1 Wire and Curtain Shield Airbag No.2 Wire (Right Side of Instrument Panel)