

RADIO AND PLAYER (RHD)

SERVICE HINTS

R2 (A) RADIO AND PLAYER

- (A) 1-GROUND : Approx. **12** volts with ignition SW at **ACC** or **ON** position
- (A) 4-GROUND : Always approx. **12** volts
- (A) 2-GROUND : Always continuity

S10 (C) STEREO COMPONENT AMPLIFIER

- (C) 4-GROUND : Always approx. **12** volts
- (C) 7-GROUND : Always continuity

○ : PARTS LOCATION

Code	See Page	Code		See Page	Code		See Page
A38	90 (RHD)	R2	A	88 (RHD)	S10	C	88 (RHD)
C5	86 (RHD)	R3	B	88 (RHD)	S11	D	88 (RHD)
F9	90 (RHD)	R4	C	88 (RHD)	T8	A	92 (RHD)
F10	90 (RHD)	R15		92 (RHD)	T9	B	92 (RHD)
J40	88 (RHD)	R16		92 (RHD)	W7		92 (RHD)
M3	88 (RHD)	S8	A	88 (RHD)			
N3	92 (RHD)	S9	B	88 (RHD)			

○ : RELAY BLOCKS

Code	See Page	Relay Blocks (Relay Block Location)
1	54 (RHD)	Engine Room No.1 R/B (Engine Compartment Left)

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR








Code	See Page	Junction Block and Wire Harness (Connector Location)
1C	58 (RHD)	Instrument Panel Wire and Driver Side J/B (Right Kick Panel)
1F	58 (RHD)	Cowl Wire and Driver Side J/B (Right Kick Panel)
2H	61 (RHD)	Cowl Wire and Passenger Side J/B (Left Kick Panel)
3A	62	Instrument Panel Wire and Instrument Panel J/B (Instrument Panel Reinforcement Center)
3G	63	
3H		

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS


Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA1	108 (RHD)	Engine Room Main Wire and Cowl Wire (Near the Passenger Side R/B)
IB1	108 (RHD)	Front Door LH Wire and Cowl Wire (Left Kick Panel)
ID2	108 (RHD)	Instrument Panel Wire and Cowl Wire (Right Side of the Blower Unit)
ID3		
IG1	108 (RHD)	Instrument Panel Wire and Floor No.1 Wire (Front LH Side of the Shift Lever)
IL1	110 (RHD)	Front Door RH Wire and Cowl Wire (Right Kick Panel)
IM1	110 (RHD)	Floor No.1 Wire and Cowl Wire (Right Kick Panel)
IM2		
IM3		
BA1	112 (RHD)	Rear Door LH Wire and Floor No.2 Wire (Under the Center Pillar LH)
BB1	112 (RHD)	Rear Door RH Wire and Floor No.1 Wire (Under the Center Pillar RH)

▽ : GROUND POINTS


Code	See Page	Ground Points Location
IH	108 (RHD)	Instrument Panel Brace LH

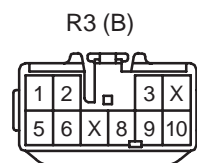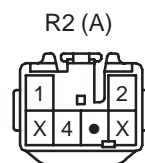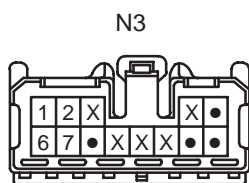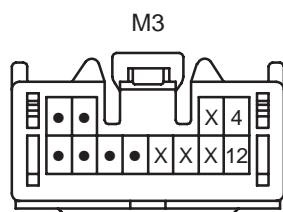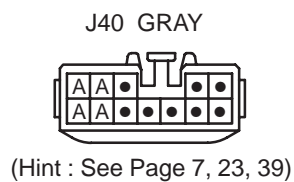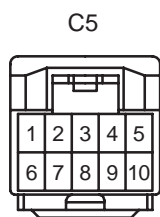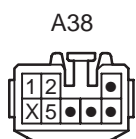

(w/ LEXUS Navigation System) R4 (C)

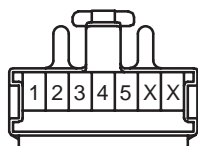

(w/o LEXUS Navigation System) R4 (C)

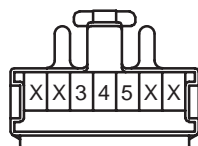

R15



R16

