



# Connector Joining Wire Harness and Wire Harness


(w/ Driving Position Memory) **BC1**

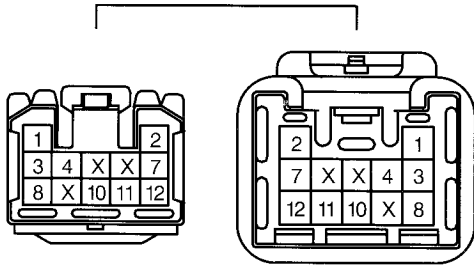

(w/o Driving Position Memory) **BC1**

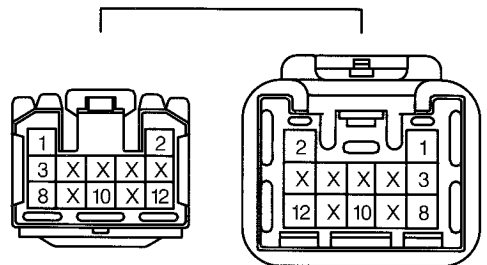

**BD1**

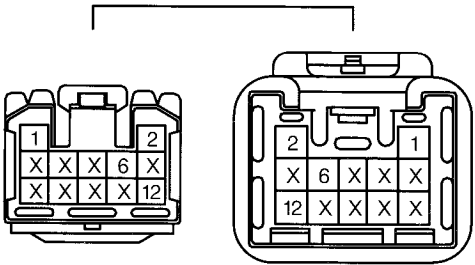

English

Code	Joining Wire Harness and Wire Harness (Connector Location)
BC1	Floor No.2 Wire and Front Seat LH Wire (Under the Driver's Seat)
BD1	Floor No.1 Wire and Front Seat RH Wire (Under the Front Passenger's Seat)