


AIR REFINER FILTER REMOVAL

AC0Y0-02

1. REMOVE GLOVE COMPARTMENT DOOR
(See page BO-91)

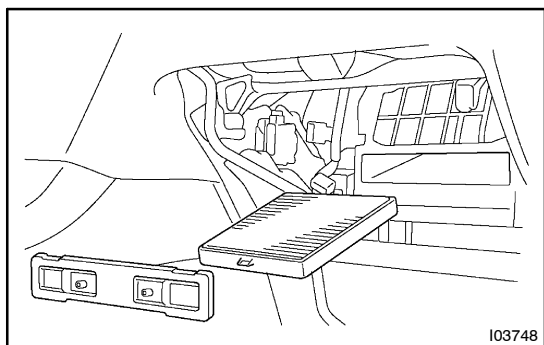

2. REMOVE AIR REFINER FILTER

- (a) Remove the cover.
- (b) Pull out the air refiner filter.