

SERVICE HINTS

N1 BACK-UP LIGHT SW [NEUTRAL START SW]

4-8 : Closed with shift lever in R position

: PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
J1	70 (LHD)	J25	84 (RHD)	N1	70 (LHD)
J3	A 70 (LHD)	J27	A 84 (RHD)		84 (RHD)
J4	B 70 (LHD)	J28	B 84 (RHD)	R10	78 (LHD)
J18	74 (LHD)	J35	88 (RHD)		92 (RHD)
J20	78 (LHD)	J43	90 (RHD)	R12	78 (LHD)
J21	78 (LHD)	J44	90 (RHD)		92 (RHD)

: JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1H	59 (LHD)	Cowl Wire and Driver Side J/B (Left Kick Panel)
	59 (RHD)	Cowl Wire and Driver Side J/B (Right Kick Panel)

: CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
EA1	96 (LHD)	Engine Wire and Cowl Wire (Inside of the ECU Box)
	106 (RHD)	
EA3	96 (LHD)	
	106 (RHD)	
IC3	98 (LHD)	Floor No.2 Wire and Cowl Wire (Left Kick Panel)
	108 (RHD)	

: GROUND POINTS

Code	See Page	Ground Points Location
BJ	102 (LHD)	Rear Floor Partition Panel LH
	112 (RHD)	
BK	102 (LHD)	Quarter Panel LH
	112 (RHD)	

: SPLICE POINTS

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
B4	102 (LHD)	Floor No.2 Wire	B4	112 (RHD)	Floor No.2 Wire


BACK-UP LIGHT

J1 BLACK




(Hint : See Page 7, 23, 39)

J3 (A)

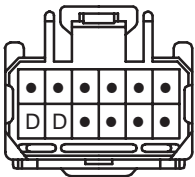

(Hint : See Page 7, 23, 39)

J4 (B)

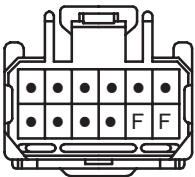


(Hint : See Page 7, 23, 39)

J18




(Hint : See Page 7, 23, 39)

J20 BLUE

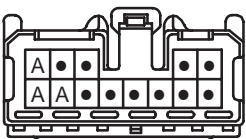

(Hint : See Page 7, 23, 39)

J21

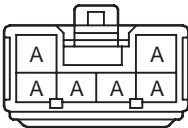


(Hint : See Page 7, 23, 39)

J25 BLACK




(Hint : See Page 7, 23, 39)

J27 (A)

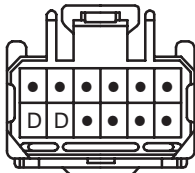


(Hint : See Page 7, 23, 39)

J28 (B)

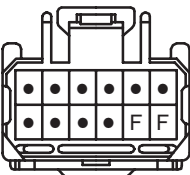


(Hint : See Page 7, 23, 39)

J35

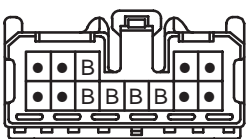


(Hint : See Page 7, 23, 39)

J43 BLUE

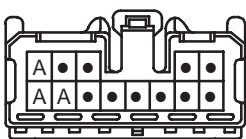


(Hint : See Page 7, 23, 39)

J44

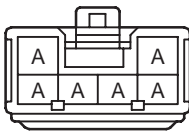


(Hint : See Page 7, 23, 39)

N1 GRAY

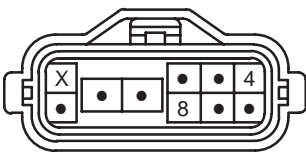

R10



R12

