


INSTALLATION

1. INSTALL STARTER

- (a) Install the starter with the 2 bolts.

Torque: 37 N·m (380 kgf·cm, 27 ft·lbf)

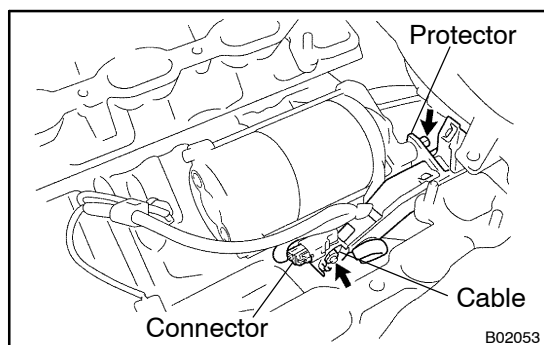

- (b) Connect the starter cable with the nut.

Torque: 9.8 N·m (100 kgf·cm, 87 in·lbf)

- (c) Install the engine wire protector to the starter with the bolt.

- (d) Connect the starter connector.

2. INSTALL REAR WATER BYPASS JOINT

(See page EM-60)

3. □ INSTALL WATER BYPASS PIPE (See page EM-60)

4. □ INSTALL UPPER AND LOWER INTAKE MANIFOLDS ASSEMBLY (See page EM-60)

5. □ INSTALL THROTTLE BODY (See page FI-39)

6. □ INSTALL INTAKE AIR CONNECTOR PIPE

7. □ FILL WITH ENGINE COOLANT (See page CO-2)

8. □ CHECK THAT ENGINE STARTS

9. □ START ENGINE AND CHECK FOR ENGINE COOLANT AND FUEL

10. □ INSTALL V-BANK COVER