


DRIVE SHAFT

■ DESCRIPTION

The cross-groove type CVJ (Constant-Velocity Joint) is used both the wheel and differential side as in the previous model.

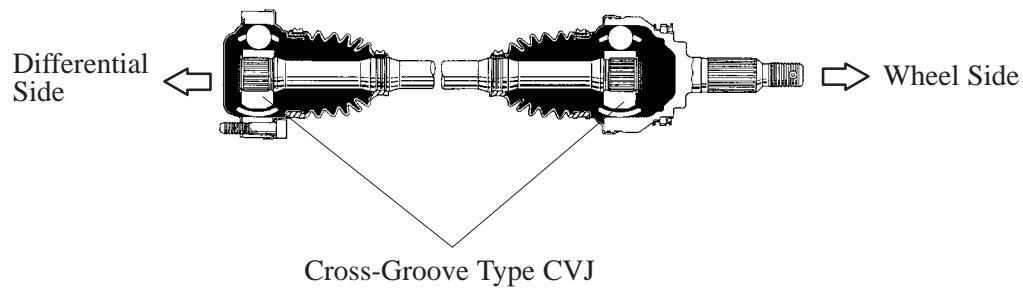


152CH07

AXLES

CH


■ DESCRIPTION

The double-row angular ball bearing is used both front and rear axles as in the previous model. The size of the rear axle bearing has been changed for this new model.

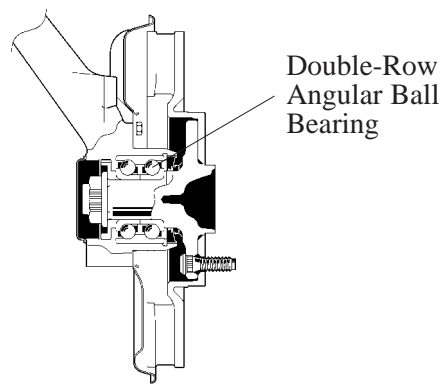

152CH08

Front Axle

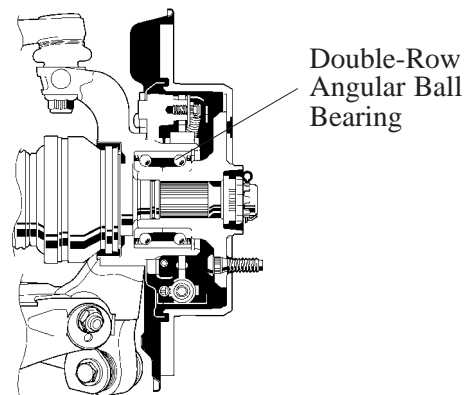

152CH09

Rear Axle