


Position of Parts in Engine Compartment

[LHD : 2JZ-GE]

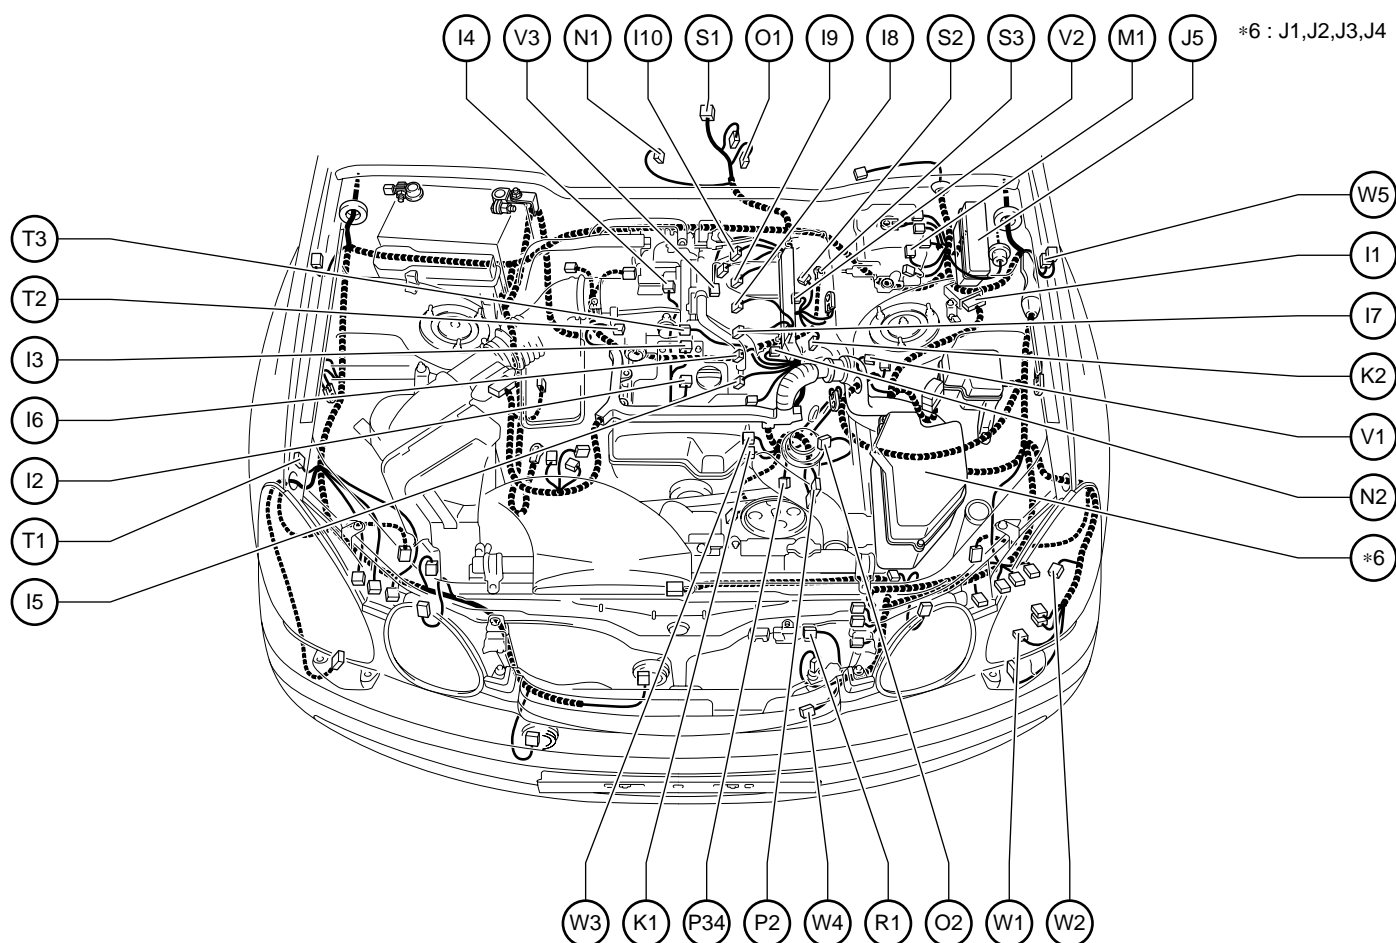

- I 1 Igniter
- I 2 Ignition Coil No.1
- I 3 Ignition Coil No.2
- I 4 Ignition Coil No.3
- I 5 Injector No.1
- I 6 Injector No.2
- I 7 Injector No.3
- I 8 Injector No.4
- I 9 Injector No.5
- I 10 Injector No.6

- J 1 Junction Connector
- J 2 Junction Connector
- J 3 Junction Connector
- J 4 Junction Connector
- J 5 Junction Connector

- K 1 Knock Sensor 1
- K 2 Knock Sensor 2

- M 1 Master Cylinder Pressure Sensor

- N 1 Neutral Start SW
- N 2 Noise Filter (Ignition)

- O 1 O/D Direct Clutch Speed Sensor
- O 2 Oil Pressure SW

- P 2 PPS Solenoid
- P34 Power Steering Oil Pressure Sensor

- R 1 Radiator Fan Motor

- S 1 Speed Sensor (ECT)
- S 2 Starter
- S 3 Starter

- T 1 Theft Deterrent Horn
- T 2 Throttle Control Motor
- T 3 Throttle Position Sensor

- V 1 Variable Resistor
- V 2 VSV (ACIS)
- V 3 VSV (EVAP)

- W 1 Washer Level Warning SW
- W 2 Washer Motor
- W 3 Water Temp. Sensor
- W 4 Water Temp. SW
- W 5 Wireless Door Lock Buzzer