

## INSTALLATION

### NOTICE:


**Never use seat belt pretensioner from another vehicle.  
When replacing parts, replace them with new parts.**

#### 1. INSTALL FRONT SEAT OUTER BELT

- (a) Install the front seat belt parts by following the reverse order of removal and torque the following bolts.
  - (1) Front seat outer belt retractor upper bolt  
**Torque: 7.5 N·m (76 kgf·cm, 66 in·lbf)**
  - (2) Front seat outer belt retractor lower bolt  
**Torque: 42 N·m (430 kgf·cm, 31 ft·lbf)**
  - (3) Seat belt shoulder anchor  
**Torque: 42 N·m (430 kgf·cm, 31 ft·lbf)**
  - (4) Seat belt floor anchor  
**Torque: 42 N·m (430 kgf·cm, 31 ft·lbf)**

### NOTICE:

- **Make sure that the front seat outer belt is installed with the specified torque.**
- **If the front seat outer belt has been dropped, or there are cracks, dents or other defects in the case or connector, replace the front seat outer belt with a new one.**
- **When installing the front seat outer belt, take care that the wiring does not interfere with other parts and is not pinched between other parts.**

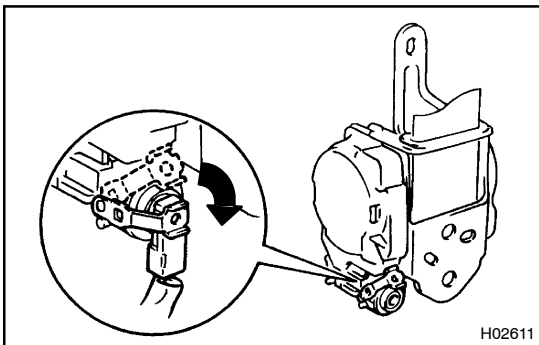

- (b) Connect the pretensioner connector as shown in the illustration.

#### 2. INSTALL THESE PARTS:

- (a) Center pillar upper garnish
- (b) Center pillar lower garnish
- (c) Rear door opening trim
- (d) Rear door inside scuff plate
- (e) Front door opening trim
- (f) Front door inside scuff plate