

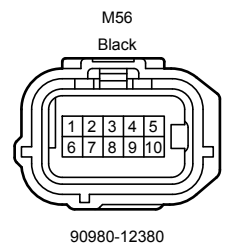
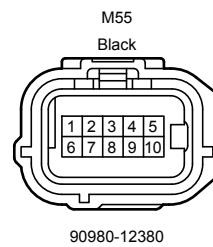
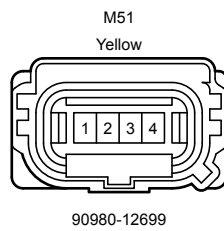
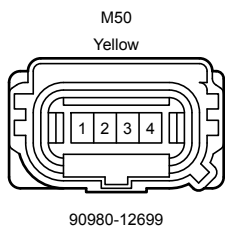
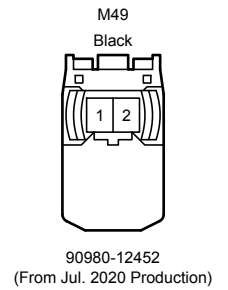
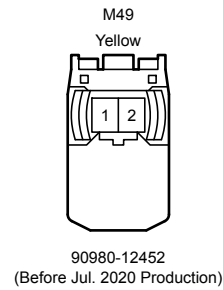



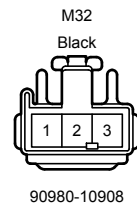
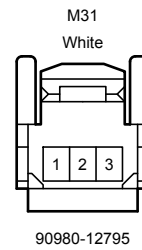
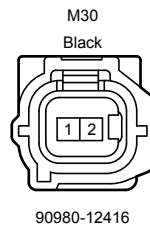
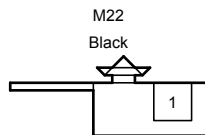
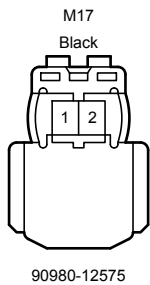
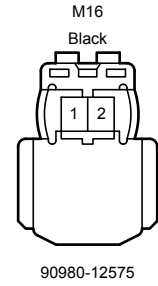
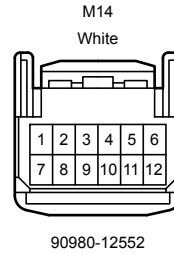
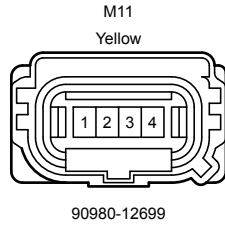
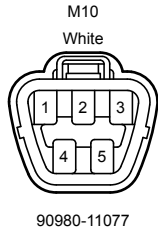
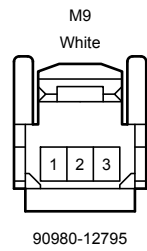
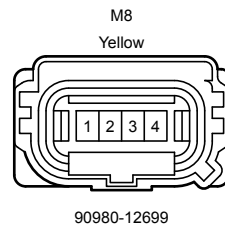


M6	Front Door Courtesy Light Switch Assembly LH
M7	Front Seat Outer Belt Assembly LH
M8	Side Airbag Sensor Assembly LH
M9	No. 2 Indoor Electrical Key Antenna Assembly
M10	Fuel Suction Tube with Pump & Gage Assembly
M11	Rear Airbag Sensor LH
M12	Rear Door Courtesy Light Switch Assembly LH
M14	Tire Pressure Warning Antenna and Receiver (Electrical Key & Tire Pressure Monitoring System Receiver Assembly)
M16	Curtain Shield Airbag Assembly LH
M17	Curtain Shield Airbag Assembly RH
M22	Radio Setting Condenser
M30	Electrical Key Antenna
M31	No. 3 Indoor Electrical Key Antenna Assembly
M32	Fuel Lid Lock with Motor Assembly
M33	No. 1 Luggage Compartment Light Assembly
M42	Rear Combination Light Assembly RH
M43	Rear Combination Light Assembly LH
M48	Front Door Courtesy Light Switch Assembly RH
M49	Front Seat Outer Belt Assembly RH
M50	Side Airbag Sensor Assembly RH
M51	Rear Airbag Sensor RH
M52	Rear Door Courtesy Light Switch Assembly RH
M55	Blind Spot Monitor Sensor LH
M56	Blind Spot Monitor Sensor RH
M61	Purge Flow Switching Valve
M62	Vapor Pressure Sensor
M73	No. 6 CAN Junction Connector
M75	No. 15 Junction Connector
M76	No. 16 Junction Connector
M78	No. 7 CAN Junction Connector
M87	Rear Seat Inner Belt Assembly RH
M88	Rear Seat Inner Belt with Center Assembly LH
M89	Rear Seat Inner Belt with Center Assembly LH

Position of Parts in Body (Before Dec. 2018 Production)

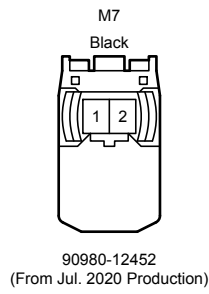

Position of Parts in Body (Before Dec. 2018 Production)

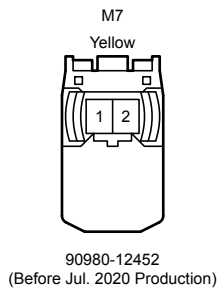