


# TERMINALS OF ECU

## BODY ECU No. 1

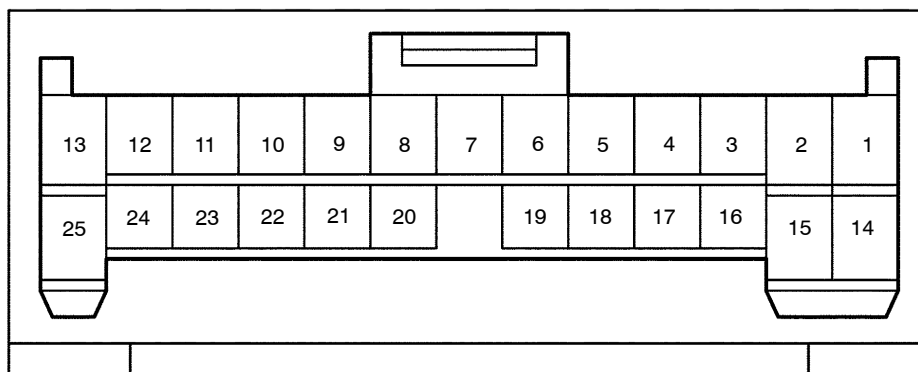

I05039

Symbols (Terminals No.)	Wiring Color	Condition	STD Voltage (V)
ACC ↔ GND (B5-15 ↔ B5-11)	GR ↔ W-B	Ignition switch position is ACC.	10 – 14 V
TR+ ↔ GND (B5-2 ↔ B5-11)	L ↔ W-B	Luggage compartment door opener switch ON.	10 – 14 V (for 250 ms)
HORN ↔ GND (B5-1 ↔ B5-11)	G-B ↔ W-B	Theft Deterrent System is set, luggage compartment door key lock and unlock switch OFF. Luggage compartment door open.	Voltage change 10 – 14 V ↔ Below 1 V
IND ↔ GND (B5-22 ↔ B5-11)	V ↔ W-B	Security indicator light lights up. (Only for 30 secs. in arming mode. (When the indicator light flashes, engine immobilizer system operates.))	3 – 6 V
		Security indicator light does not light up. (Only for 30 secs. in arming mode. (When the indicator light flashes, engine immobilizer system operates.))	Below 1 V
HDCY ↔ GND (B5-9 ↔ B5-11)	V-G ↔ W-B	Hood is open.	Below 1 V
		Hood is closed.	10 – 14 V
LGCY ↔ GND (B5-10 ↔ B5-11)	R-W ↔ W-B	Luggage door is open.	Below 1 V
		Luggage door is closed.	10 – 14 V
TKUL ↔ GND (B5-16 ↔ B5-11)	LG-B ↔ W-B	Luggage door unlock switch is turned.	Below 1 V
		Luggage door unlock switch is not turned.	10 – 14 V
TSW ↔ GND (B5-17 ↔ B5-11)	V-Y ↔ W-B	Luggage opener S/W is operated.	Below 1 V
		Luggage opener S/W is not operated.	10 – 14 V
B2R ↔ B2R2 (B5-12 ↔ B5-13)	P-B ↔ W-B	When buzzer is not sounded.	Below 1 V
SNOW ↔ GND (B5-24 ↔ B5-11)	G-R ↔ W-B	Snow switch (ECT pattern select switch) is SNOW.	Below 1 V
		Snow switch (ECT pattern select switch ) is NORM.	10 – 14 V
PWR ↔ GND (B5-23 ↔ B5-11)	G-W ↔ W-B	PWR switch (ECT pattern select switch ) is PWR.	Below 1 V
		PWR switch (ECT pattern select switch ) is NORM.	10 – 14 V
RET ↔ GND (*) (B5-7 ↔ B5-11)	P-G ↔ W-B	Retract switch ON	Below 1V
		Retract switch ON	10 – 14 V
RSSI (B5-4)	LG	Wireless door lock ECU communication circuit	-
RCO (B5-5)	LG-R	Wireless door lock ECU communication circuit	-

**DIAGNOSTICS** – BODY NO.1 CONTROL SYSTEM

RDA (B5-6)	P	Wireless door lock ECU communication circuit	–
MPX1 (B5-19)	W	Multiplex communication circuit	–

(\*): G.C.C. countries only