


# VEHICLE LIFT AND SUPPORT LOCATIONS

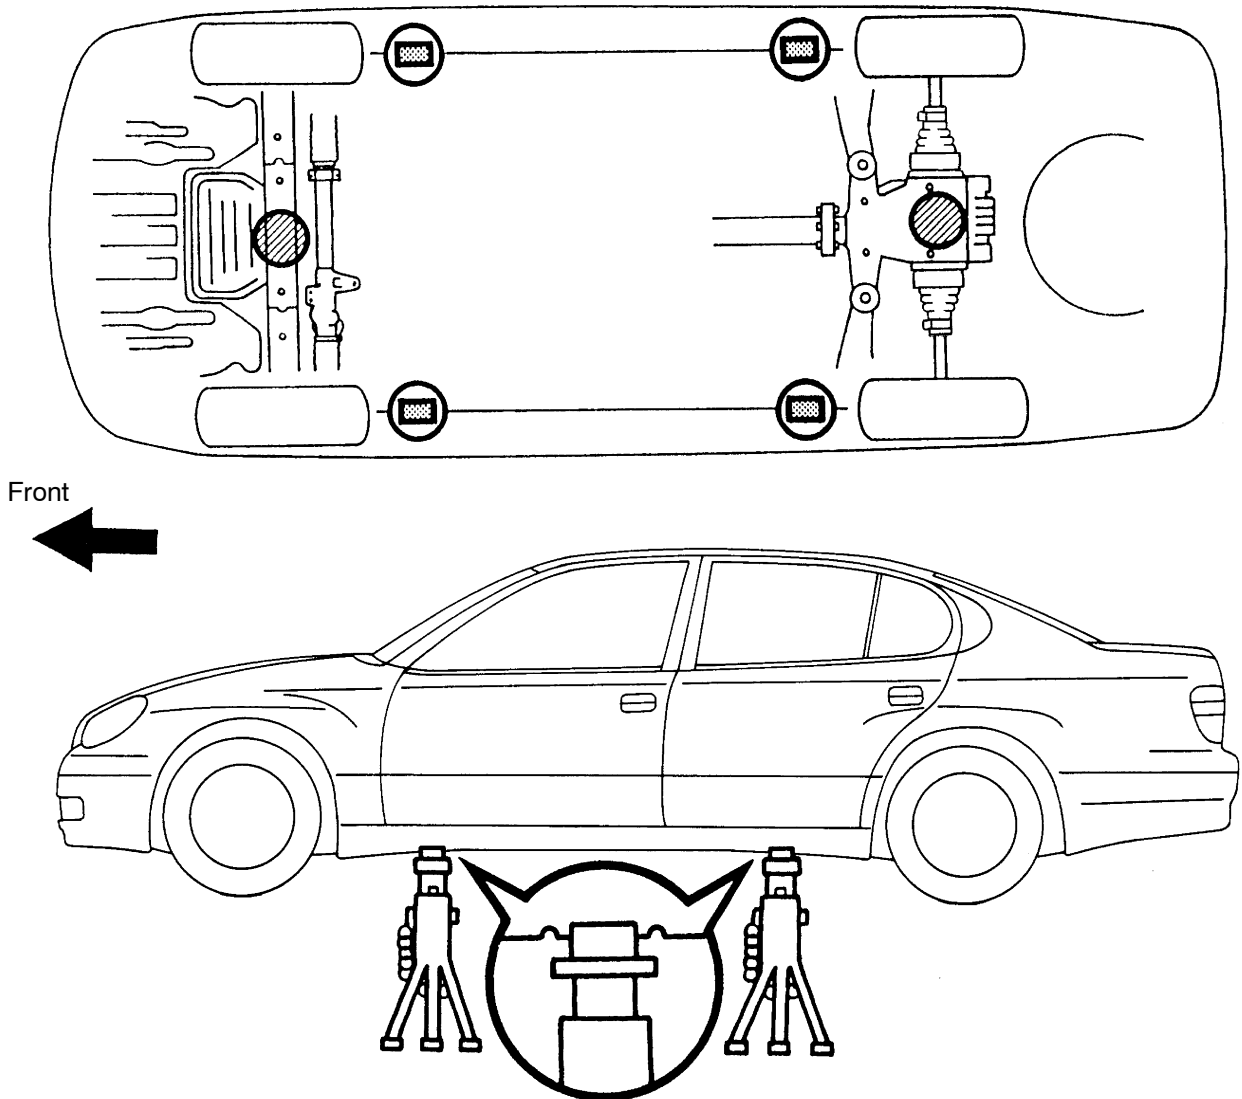

## JACK POSITION

Front - - - - - Front crossmember  
Rear - - - - - Differential carrier


**CAUTION :** When jacking-up the rear and front, make sure the car is not carrying any extra weight.

## PANTOGRAPH JACK POSITION

## SUPPORT POSITION

Safety stand and swing arm type lift - - - - -

## PLATE TYPE LIFT

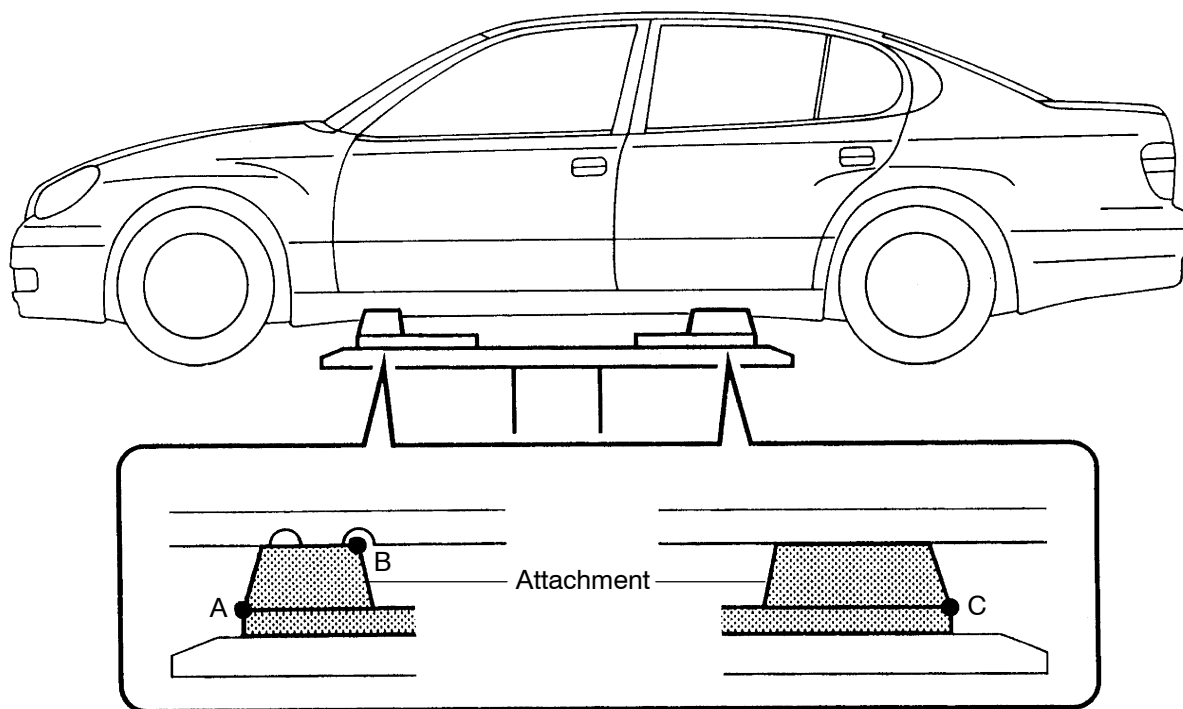**HINT :**

Left and right set position

Place the vehicle over the center of the lift.

Front and rear set position

- When using attachments, place the one for front side vertically and the one for rear side horizontally to the vehicle.
- Align the cushion gum ends of the plate with the attachment lower ends (A, C).
- Align the attachment upper end (B) with the rocker flange rear side notch.

## Attachment dimensions

