


Shift lock solenoid circuit

CIRCUIT DESCRIPTION

Body No.2 ECU performs ON/OFF of the shift lock solenoid.

WIRING DIAGRAM

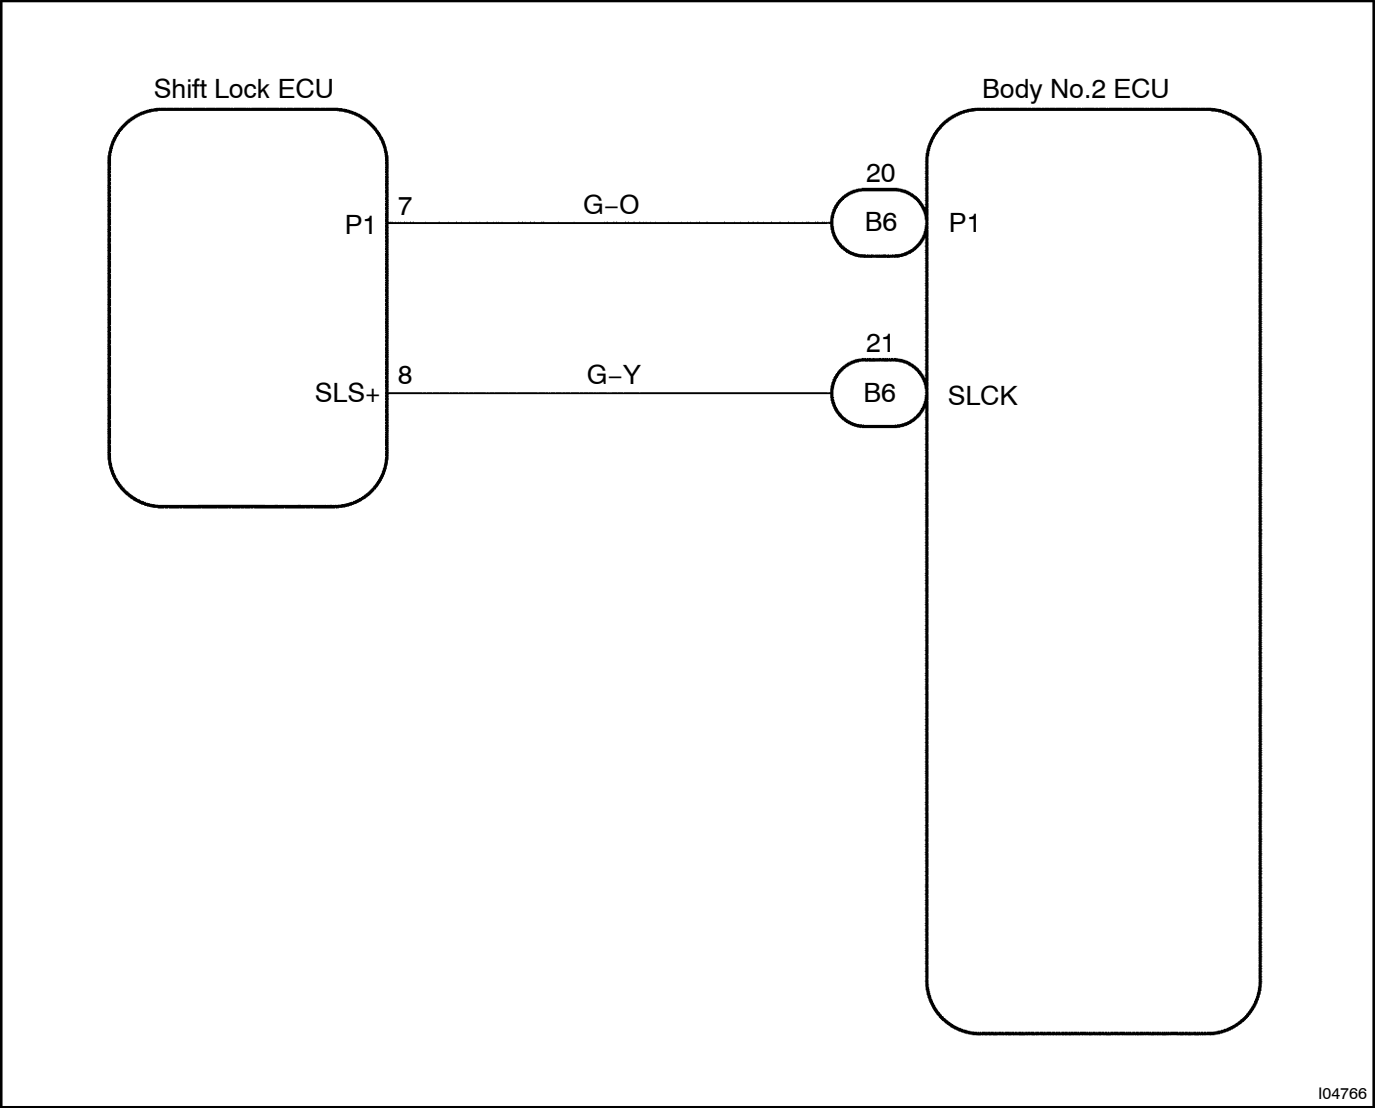

INSPECTION PROCEDURE

1	Check shift lock solenoid. (See page AT-13)
---	---

NG	Replace the shift lock solenoid.
----	----------------------------------

OK

2	Check wireharness and connector between shift lock solenoid and body No.2 ECU.
---	--

NG	Repair or replace wireharness or connector.
----	---

OK

Proceed to next circuit inspection shown on problem symptoms table. (See page DI-660)
--