


SLIDING ROOF REMOVAL

1. REMOVE ROOF HEADLINING (See page BO-29)

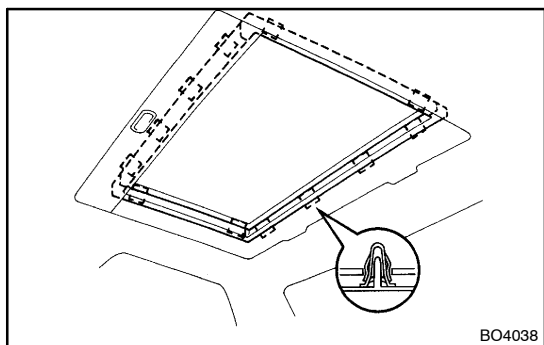


BO4038

2. REMOVE SLIDING ROOF GARNISHES

Using a screwdriver, remove the sliding roof garnishes.

HINT:

- Tape the screwdriver tip before use.
- Be careful not to scratch the glass or garnishes.

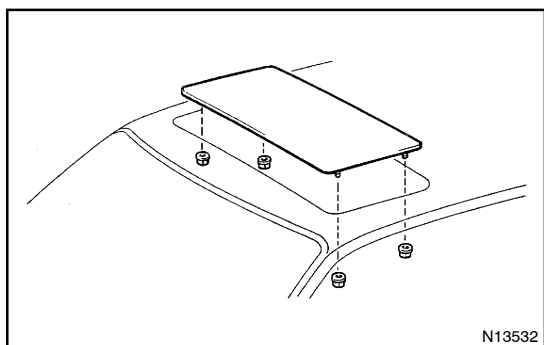


N13532

3. REMOVE SLIDING ROOF GLASS

- Remove the 4 nuts.
- Pull the glass upward to remove it.

4. REMOVE SLIDING ROOF HOUSING

- Disconnect the connector.
- Remove the 4 clips and disconnect the 4 drain hoses from the housing.
- Remove the 12 bolts and 6 brackets.
- Remove the 6 nuts and sliding roof housing from the body.

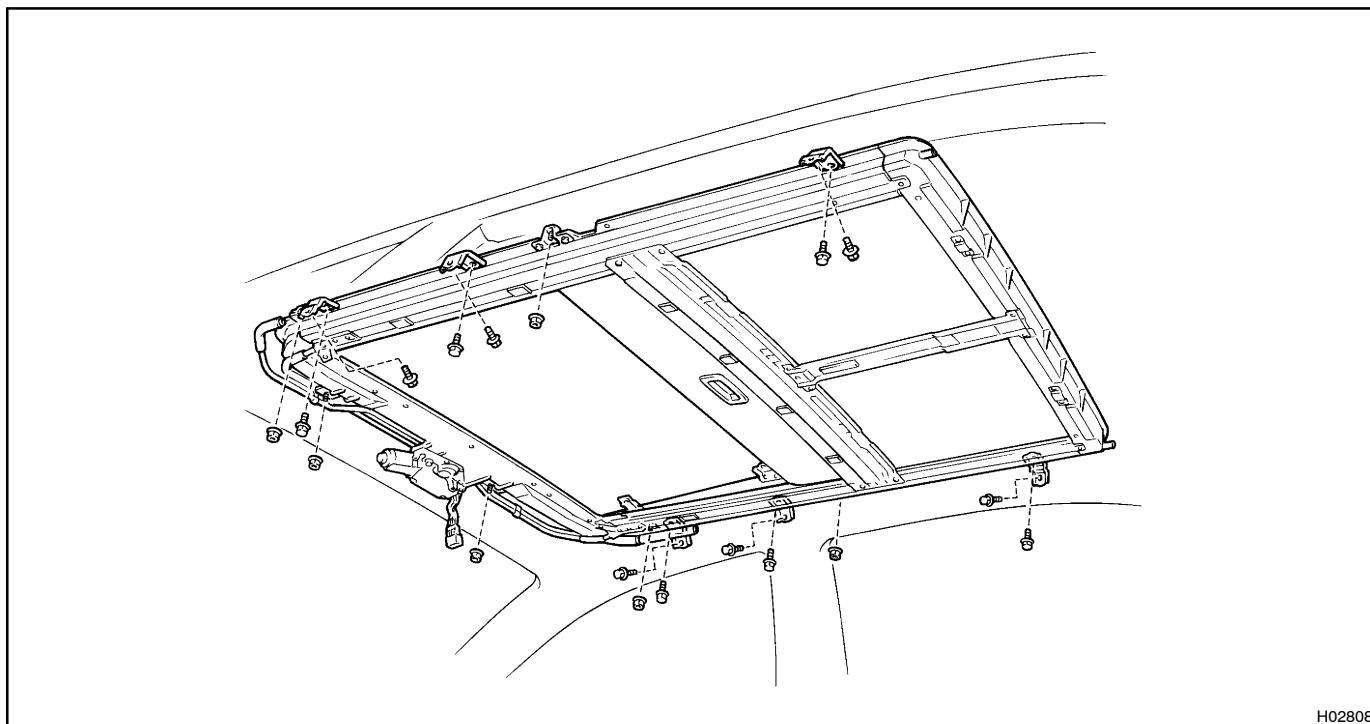

H02808