


ELECTRICAL WIRING ROUTING

Position of Parts in Body

[LHD]

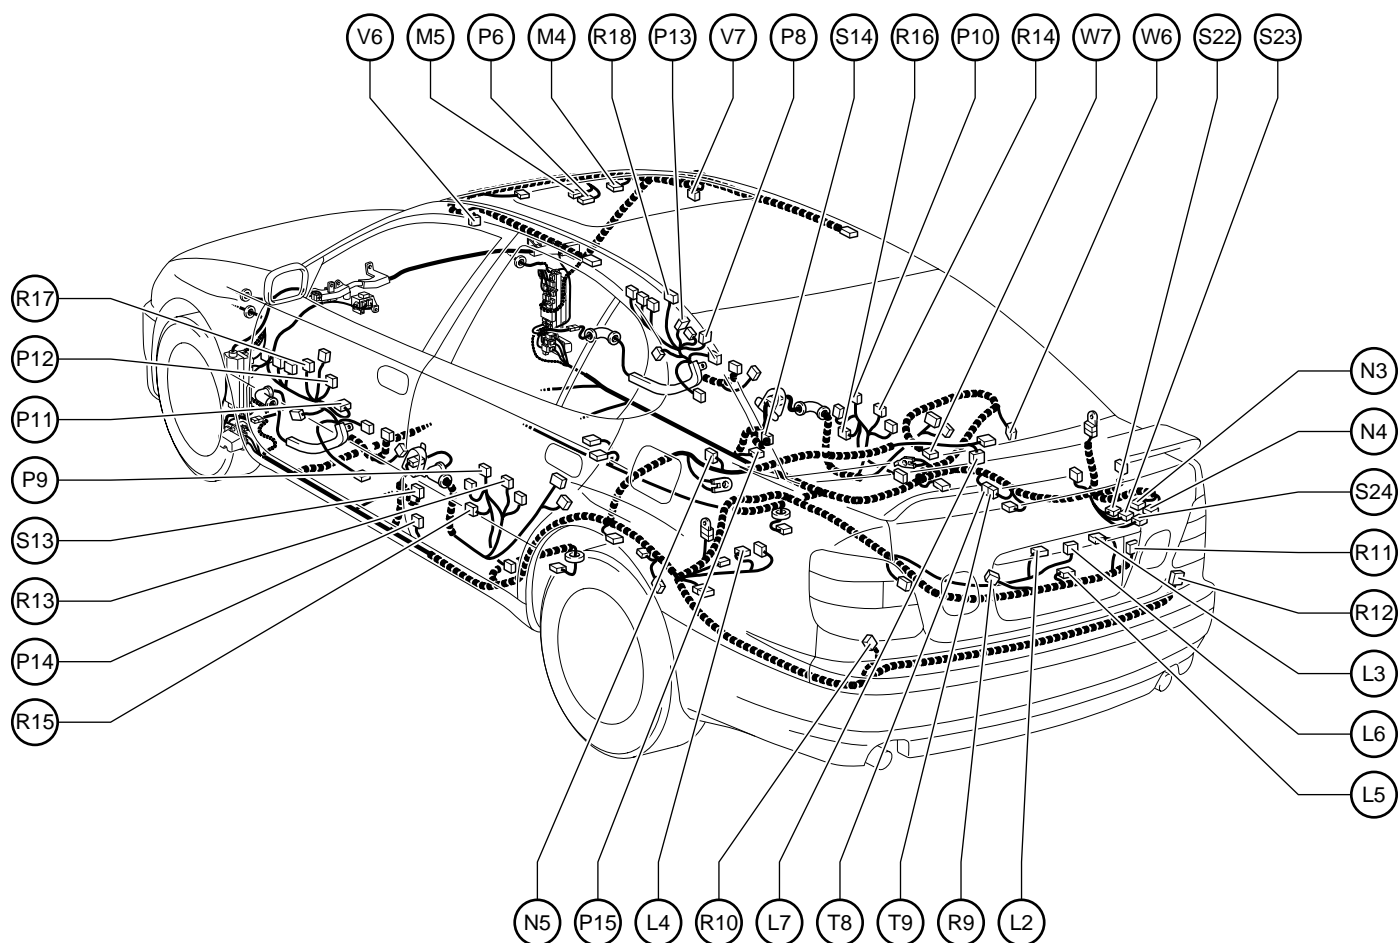

L 2 License Plate Light LH
 L 3 License Plate Light RH
 L 4 Light Failure Sensor
 L 5 Luggage Compartment Door Courtesy SW and Opener Motor
 L 6 Luggage Compartment Door Key Unlock SW
 L 7 Luggage Compartment Light

M 4 Moon Roof Control ECU
 M 5 Moon Roof Control SW

N 3 Navigation ECU
 N 4 Navigation ECU
 N 5 Noise Filter (Rear Window Defogger)

P 6 Personal Light
 P 8 Power Window Control SW Front RH
 P 9 Power Window Control SW Rear LH
 P10 Power Window Control SW Rear RH
 P11 Power Window Master SW
 P12 Power Window Motor Front LH
 P13 Power Window Motor Front RH
 P14 Pretensioner LH
 P15 Pretensioner RH

R 9 Rear Combination Light LH
 R10 Rear Combination Light LH
 R11 Rear Combination Light RH
 R12 Rear Combination Light RH
 R13 Rear Door LH ECU
 R14 Rear Door RH ECU
 R15 Rear Door Speaker LH
 R16 Rear Door Speaker RH
 R17 Remote Control Mirror LH
 R18 Remote Control Mirror RH

S13 Side Airbag Sensor LH
 S14 Side Airbag Sensor RH
 S22 Stereo Component Amplifier
 S23 Stereo Component Amplifier
 S24 Stereo Component Amplifier

T 8 Telephone Transceiver and Speaker Relay
 T 9 Telephone Transceiver and Speaker Relay

V 6 Vanity Light LH
 V 7 Vanity Light RH

W 6 Wireless Door Lock Control ECU
 W 7 Woofer (Speaker)