


Parking brake switch circuit

WIRING DIAGRAM

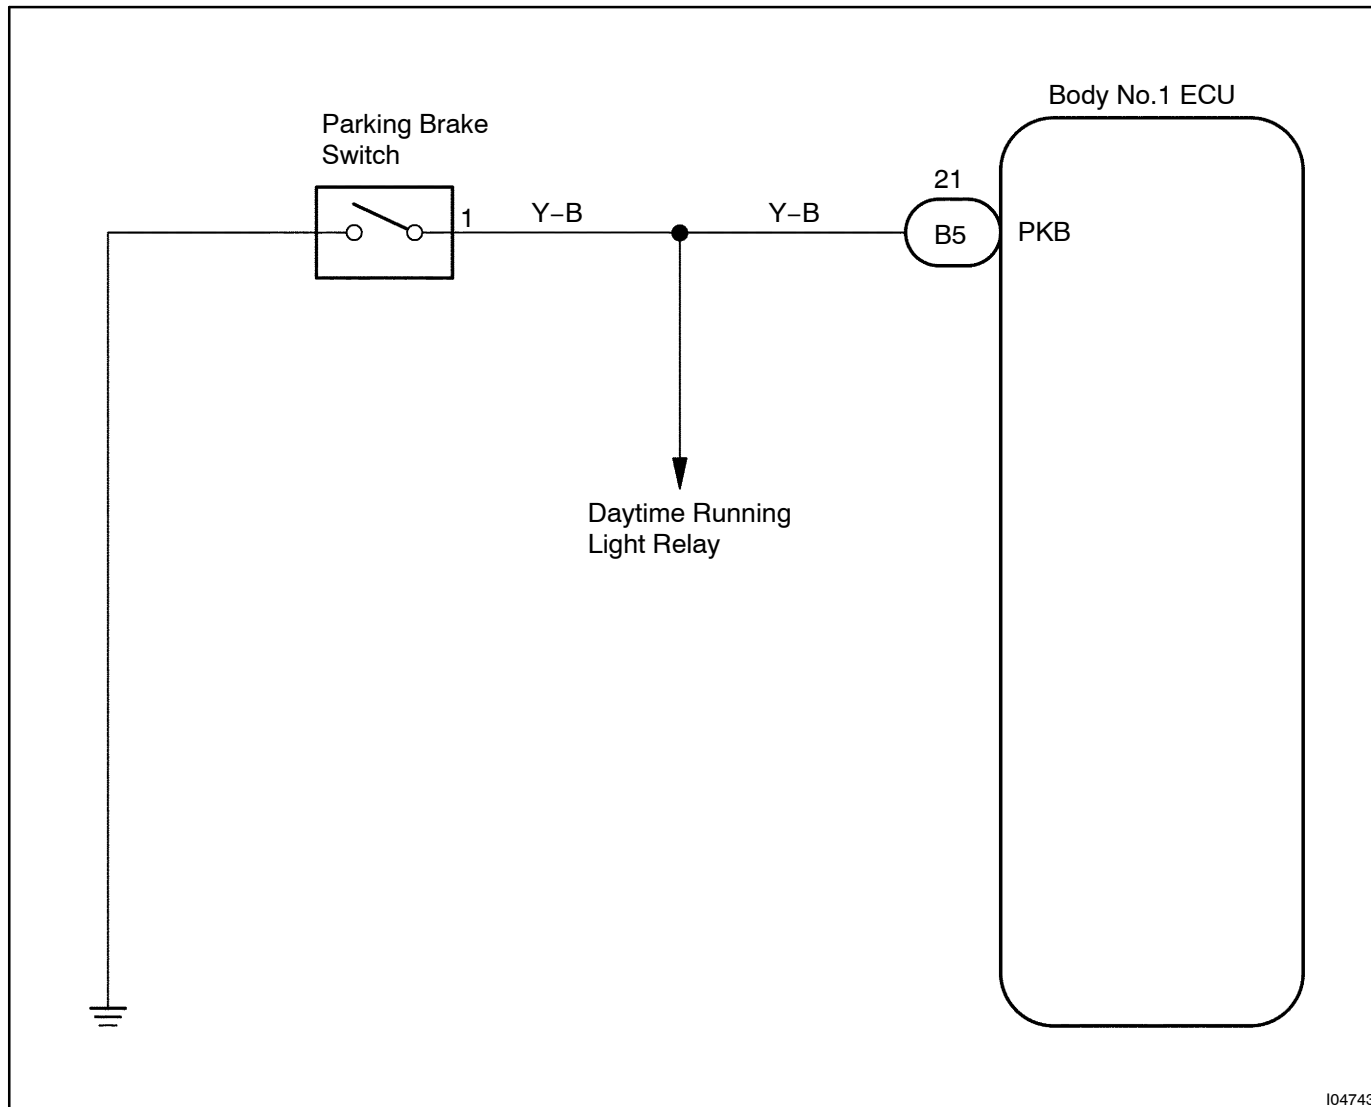

INSPECTION PROCEDURE

HINT:

In case of using the LEXUS hand-held tester, start the inspection from step 1 and in case of not using the LEXUS hand-held tester, start from step 2.

1 Check parking brake switch using LEXUS hand-held tester.

PREPARATION:

Connect the LEXUS hand-held tester to the DLC3.

CHECK:

Check the parking brake switch using DATA LIST.

OK

Proceed to next circuit inspection shown on problem symptoms table (See page DI-584).

NG

2 Check parking brake switch (See page BE-105).

NG

Replace the parking brake switch.

OK

3 Check wireharness and connector between parking brake switch and body No.1 ECU.

NG

Repair or replace wireharness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table.
(See page DI-584)