


## Connector Joining Wire Harness and Wire Harness

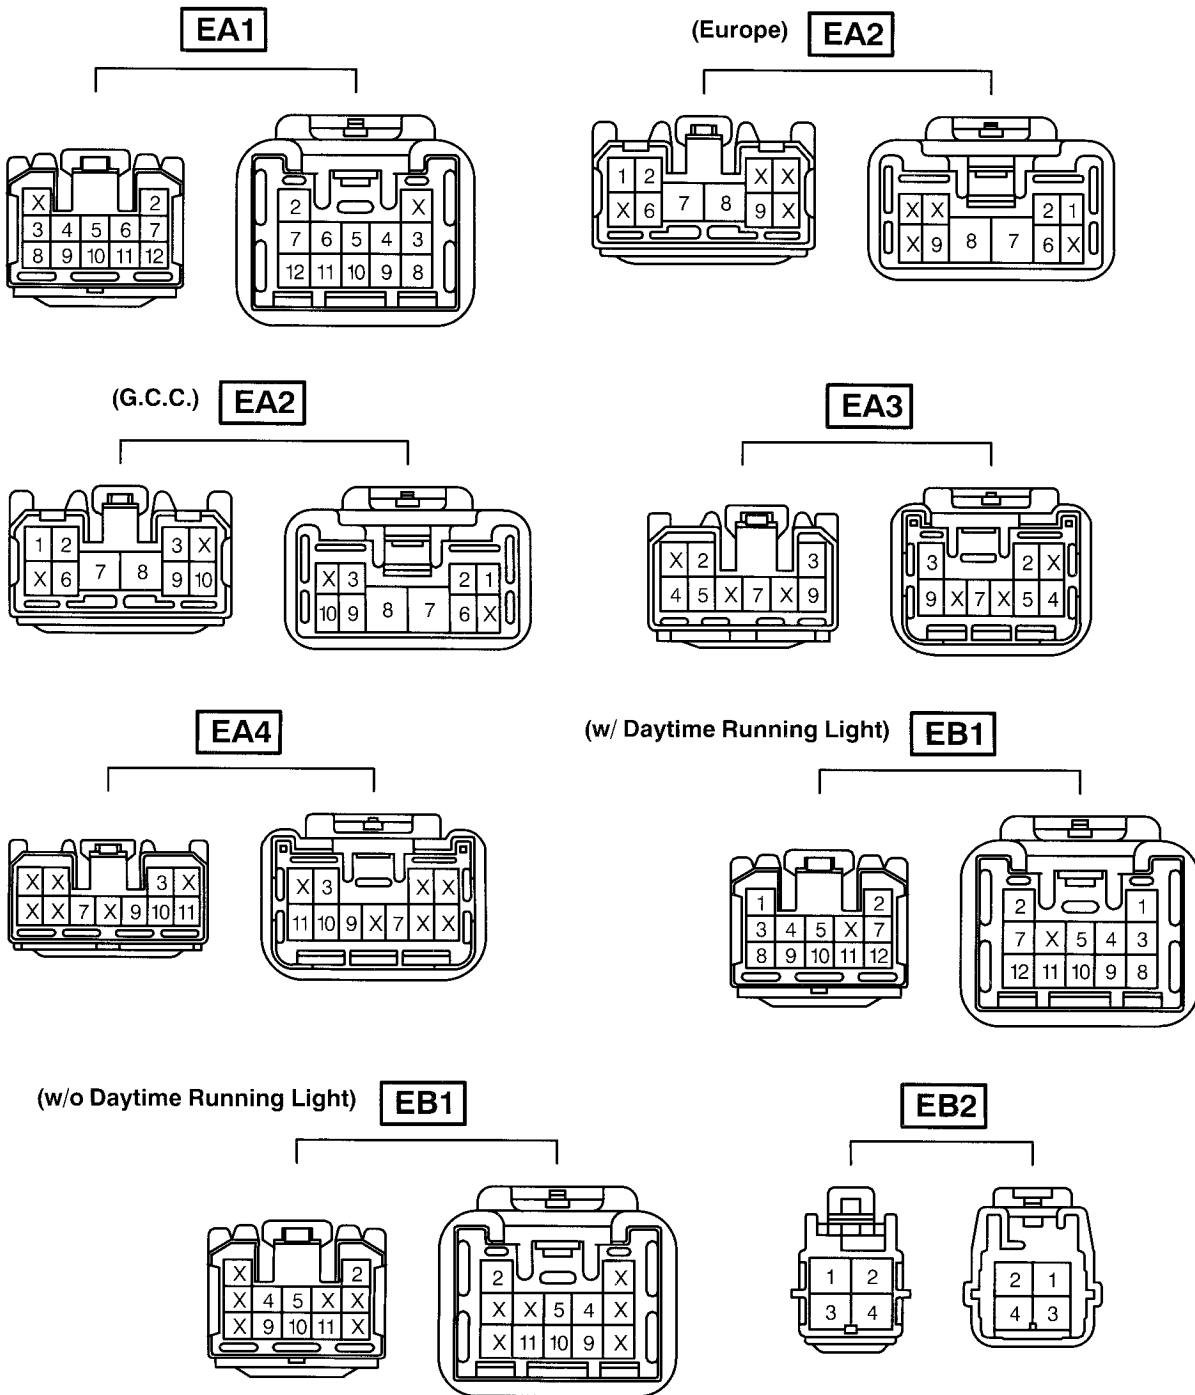

| Code | Joining Wire Harness and Wire Harness (Connector Location)          |
|------|---|
| EA1  | Engine Wire and Cowl Wire (Inside of the ECU Box)                   |
| EA2  |   |
| EA3  |   |
| EA4  |   |
| EB1  | Cowl Wire and Relay Block Wire (Inside of the Engine Room No.3 R/B) |
| EB2  |   |