


## WATER TEMPERATURE SWITCH REMOVAL

AC17E-01

1. REMOVE ENGINE UNDER COVER
2. DRAIN ENGINE COOLANT FROM RADIATOR

HINT:

It is not necessary to drain out all coolant

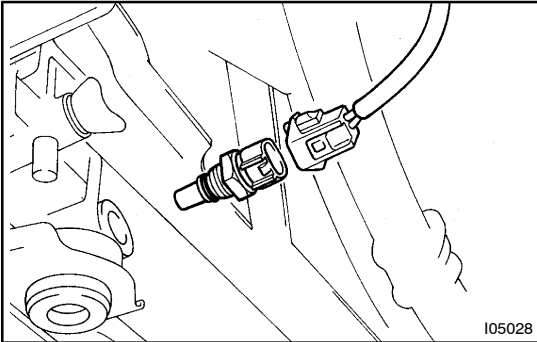

### 3. REMOVE WATER TEMPERATURE SWITCH

- (a) Disconnect the connector.
- (b) Remove the water temperature switch.  
**Torque: 7.4 N·m (75 kgf·cm, 65 in·lbf)**
- (c) Remove the O-ring from the switch.

HINT:

At the time of installation, please refer to the following item.  
Lubricate a new O-ring with soapy water and install the switch.