


REMOVAL

1. REMOVE DOOR INSIDE HANDLE BEZEL COVER

Using a screwdriver, pry upward the door inside handle bezel cover.

HINT:

Tape the screwdriver tip before use.

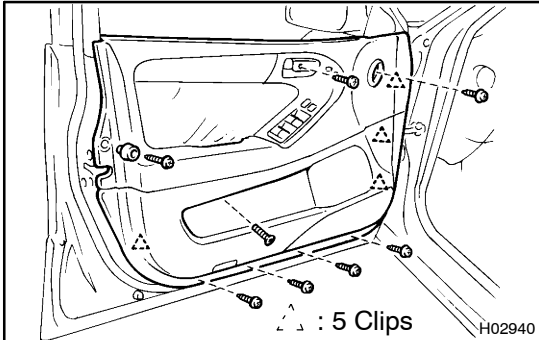


2. REMOVE DOOR TRIM

(a) Remove the 8 screws.

(b) Using a screwdriver, remove the door trim by pulling the whole trim up.

HINT:

Tape the screwdriver tip before use.

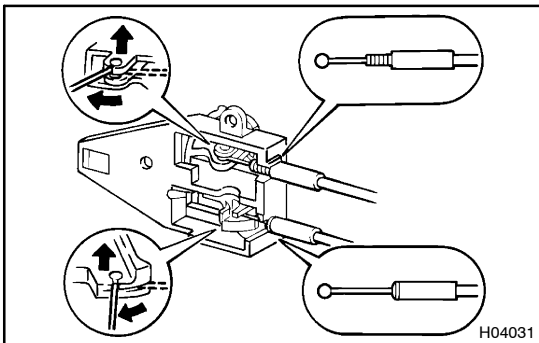


(c) Remove the 2 cables from the door inside handle.

(d) Disconnect the connector.

HINT:

At the time of reassembly, please refer to the following items.

- Check that the door lock knob moves securely to the LOCK and UNLOCK positions when moving the door lock knob.
- When the knob doesn't move to the LOCK and UNLOCK stop positions, move the locking cable installation position back and forth to adjust it.

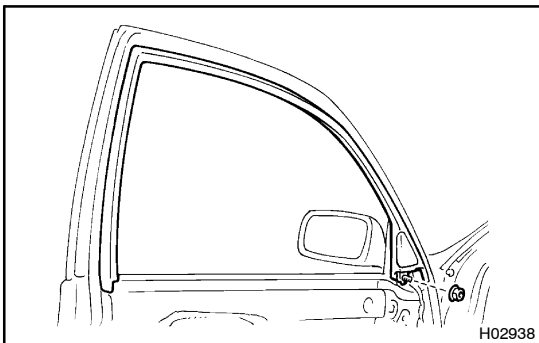

3. REMOVE DOOR FRAME GARNISH

Remove the nut and door frame garnish.

4. REMOVE TWEETER SPEAKER

Disconnect the connector and remove the tweeter speaker.

5. REMOVE OUTSIDE REAR VIEW MIRROR

Disconnect the connector, then remove the 3 bolts and outside rear view mirror.