


AIR CONDITIONER AMPLIFIER (Electrical Multi-Vision) REMOVAL

AC17B-01

1. REMOVE A/C CONTROL ASSEMBLY (See page AC-92)

2. REMOVE A/C AMPLIFIER

Remove the 8 bolts, 2 screws and 2 bracket, then remove the amplifier.

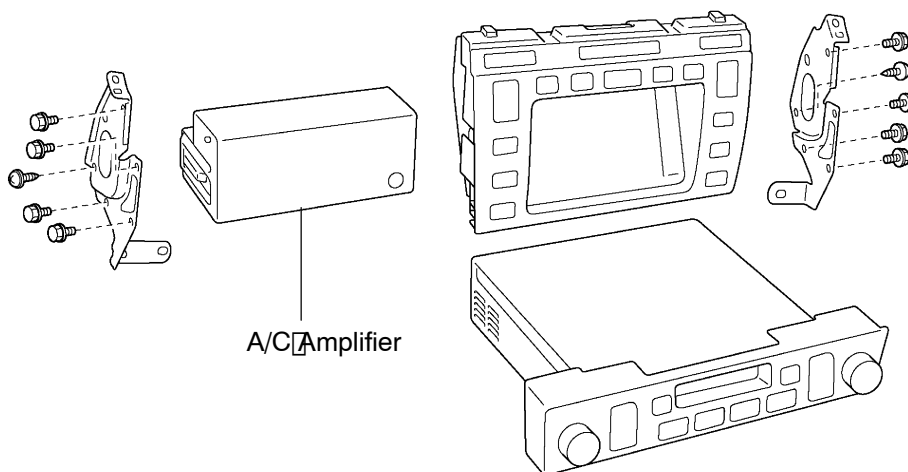

102319