

# CELLULAR MOBILE TELEPHONE

## SERVICE HINTS

### T8 (A) TELEPHONE TRANSCEIVER AND SPEAKER RELAY

- (A) 9-GROUND : Always approx. **12** volts  
 (A) 10-GROUND : Approx. **12** volts with ignition SW at **ON** or **ST** position  
 (A) 11-GROUND : Always continuity

## ○ : PARTS LOCATION

Code		See Page		Code		See Page		Code		See Page	
C15		72 (LHD)		J22		78 (LHD)		T4		74 (LHD)	
		86 (RHD)		J45		90 (RHD)				88 (RHD)	
C17	A	76 (LHD)		R15		78 (LHD)		T8	A	78 (LHD)	
		90 (RHD)		R16		92 (RHD)				92 (RHD)	
C18	B	76 (LHD)		S10	C	74 (LHD)		T9	B	78 (LHD)	
		90 (RHD)				88 (RHD)				92 (RHD)	
J7		74 (LHD)		S11	D	74 (LHD)					
J16		74 (LHD)				88 (RHD)					

## ○ : RELAY BLOCKS

Code	See Page	Relay Blocks (Relay Block Location)
1	54 (LHD)	Engine Room No.1 R/B (Engine Compartment Right)
	54 (RHD)	Engine Room No.1 R/B (Engine Compartment Left)

## ○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1E	58 (RHD)	Floor No.1 Wire and Driver Side J/B (Right Kick Panel)
1H	59 (LHD)	Cowl Wire and Driver Side J/B (Left Kick Panel)
2E	60 (LHD)	Floor No.1 Wire and Passenger Side J/B (Right Kick Panel)
2F	60 (LHD)	Cowl Wire and Passenger Side J/B (Right Kick Panel)

## □ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA1	108 (RHD)	Engine Room Main Wire and Cowl Wire (Near the Passenger Side R/B)
IC2	98 (LHD)	Floor No.2 Wire and Cowl Wire (Left Kick Panel)
ID2	108 (RHD)	Instrument Panel Wire and Cowl Wire (Right Side of the Blower Unit)
II4	100 (LHD)	Engine Room Main Wire and Cowl Wire (Near the Passenger Side R/B)
IJ3	100 (LHD)	Instrument Panel Wire and Cowl Wire (Left Side of the Blower Unit)
IL1	100 (LHD)	Floor No.1 Wire and Cowl Wire (Right Kick Panel)
IL2		
IL3		
IM1	110 (RHD)	
IM2		
IM3		
BA1	102 (LHD)	Rear Door LH Wire and Floor No.2 Wire (Under the Center Pillar LH)
BB1	112 (RHD)	Rear Door RH Wire and Floor No.1 Wire (Under the Center Pillar RH)


## ▽ : GROUND POINTS

Code	See Page	Ground Points Location
BM	102 (LHD)	Quarter Panel RH
	112 (RHD)	

## ○ : SPLICE POINTS

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
I8	100 (LHD)	Floor No.1 Wire	I11	110 (RHD)	Floor No.1 Wire

C15 BLACK

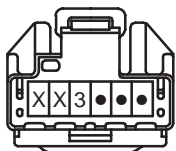


C17 (A)



C18 (B)




J7 GRAY

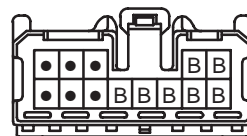


(Hint : See Page 7, 23, 39)

J16

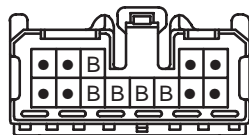


(Hint : See Page 7, 23, 39)

J22

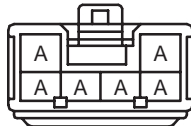

(Hint : See Page 7, 23, 39)

J45

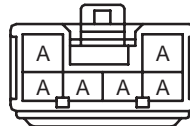

(Hint : See Page 7, 23, 39)


R15




R16




S10 (C)



(LHD) S11 (D)




(RHD) S11 (D)



T4



T8 (A)

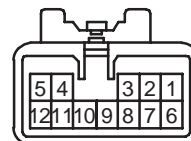

T9 (B)

