


# Power window switch circuit

## CIRCUIT DESCRIPTION

Power window switch circuit can be checked using DTC check. (Refer to [DI-836](#))

## WIRING DIAGRAM

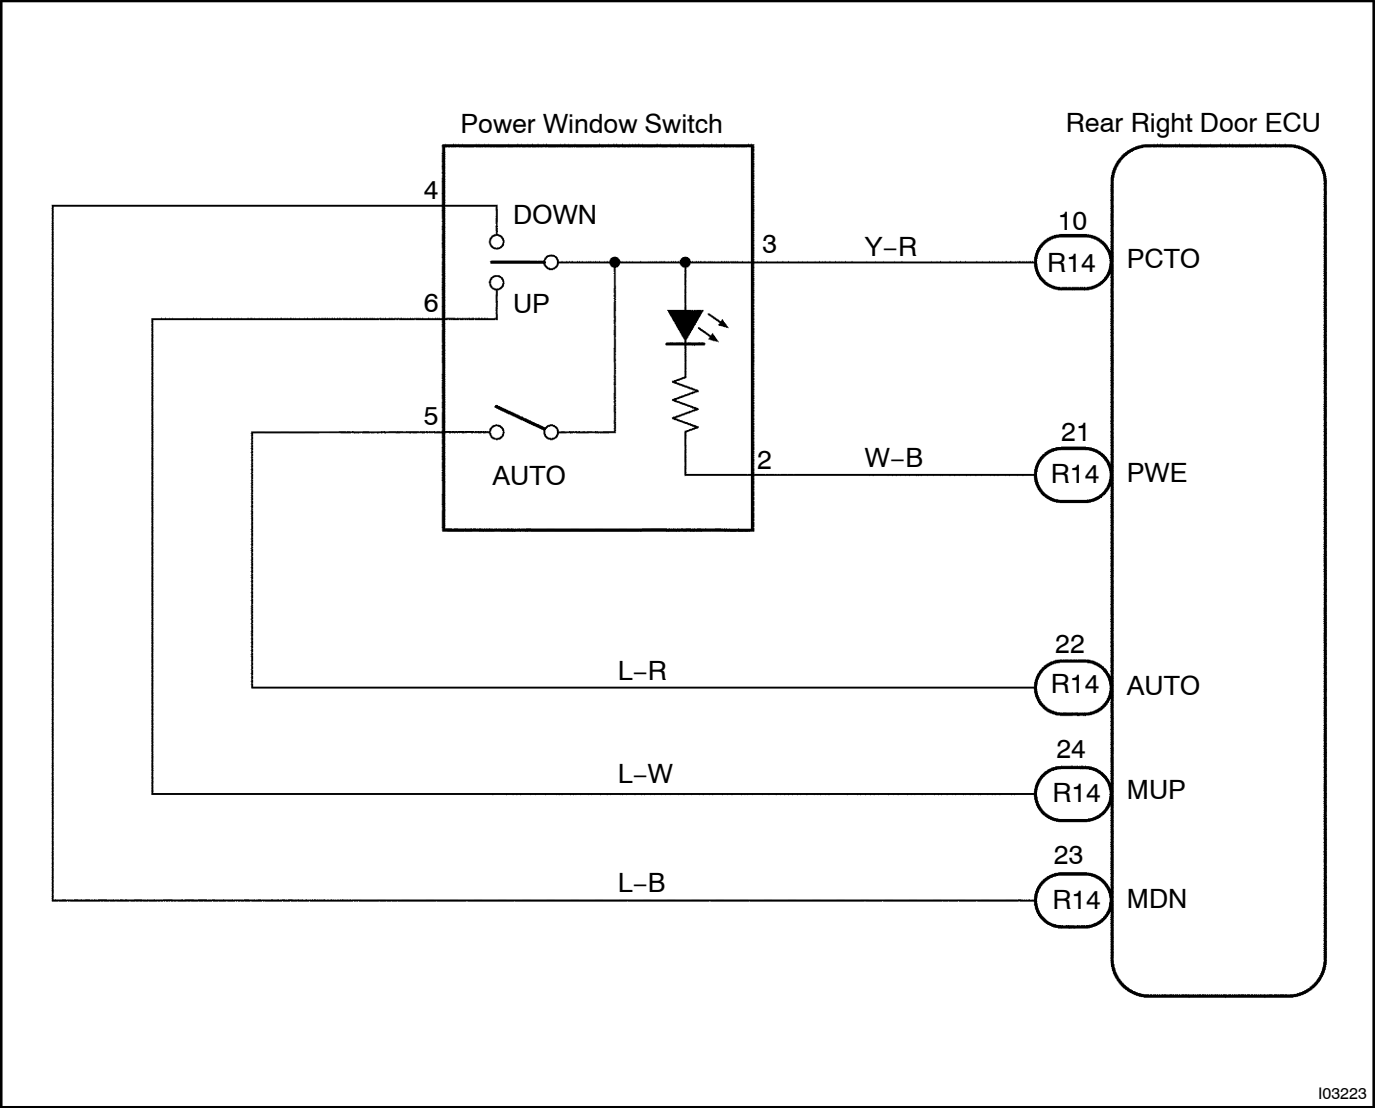

**INSPECTION PROCEDURE**

**1** Check the power window switch circuit using DTC check. (See page DI-836)

OK

Proceed to next circuit inspection shown on problem symptoms table. (See page DI-788)

OK

**2** Check the power window switch. (See page BE-134)

NG

Replace the power window switch.

OK

**3** Check wireharness and connector between power window switch and rear right door ECU.

NG

Repair or replace wireharness or connector.

OK

**4** Check wireharness and connector between power window switch and power window master switch.

NG

Repair or replace wireharness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table.  
(See page DI-788)