


Double lock switch circuit (Europe)

WIRING DIAGRAM

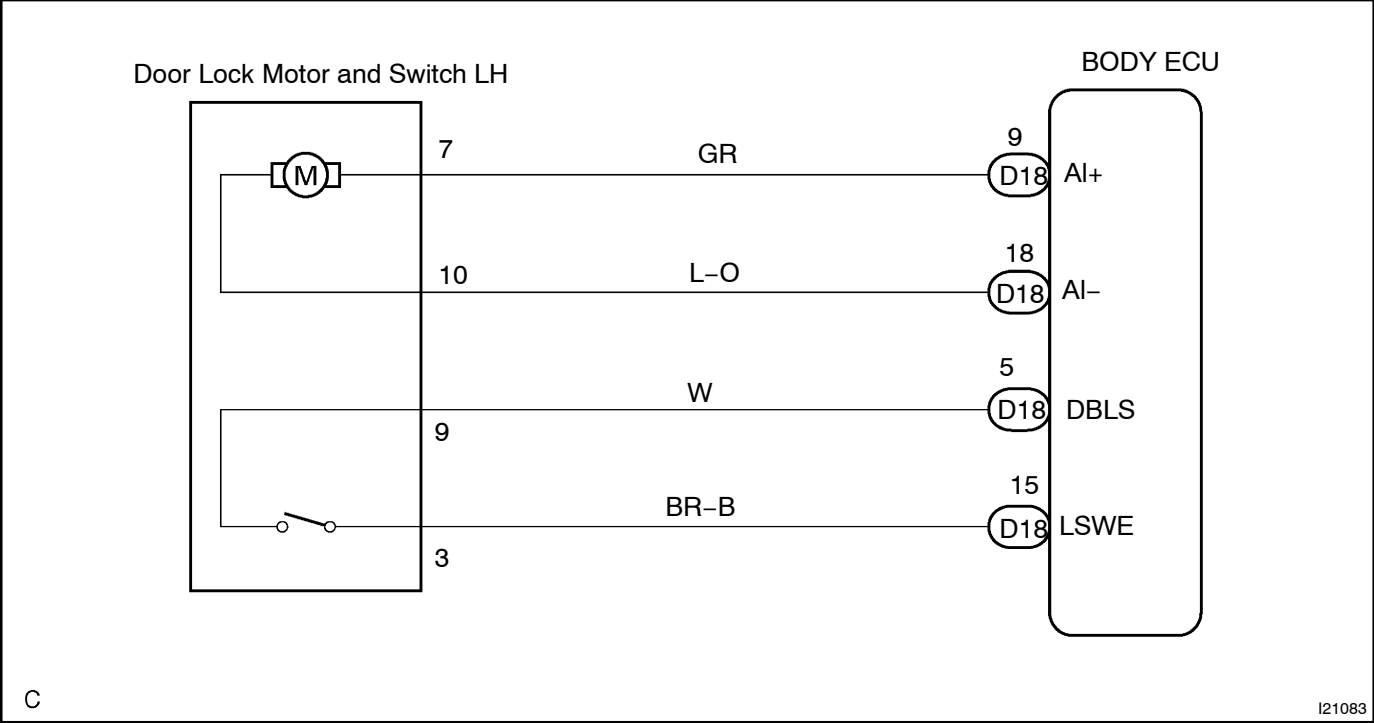

INSPECTION PROCEDURE

1 Check double lock switch (See page BE-18).

NG

Replace the double lock motor.

OK

2 Check wireharness and connector between double lock switch and driver ECU.

NG

Repair or replace wireharness or connector.

OK

Proceed to next circuit inspection shown on problem/symptoms table (See page DI-634).