

## ROOF HEADLINING REMOVAL

### PROCEDURE

#### 1. REMOVE TONNEAU COVER ASSEMBLY

- a. Remove the tonneau cover assembly.


#### 2. REMOVE REAR NO. 1 FLOOR BOARD

- a. Remove the rear No. 1 floor board.

#### 3. REMOVE DECK BOARD RETAINER

##### a. for LH Side:


- i. Disengage the clip and guide to remove the deck board retainer as shown in the illustration.

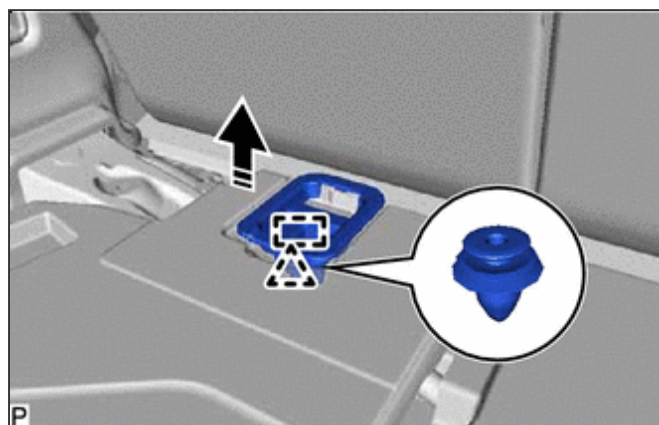

Remove in this Direction

##### b. for RH Side:


- i. Disengage the clip and guide to remove the deck board retainer as shown in the illustration.

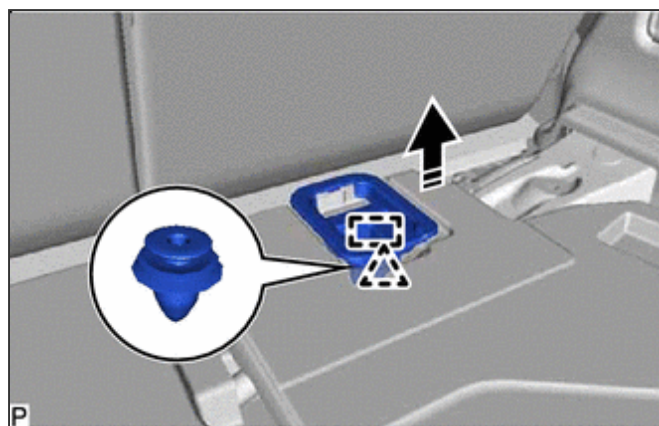

Remove in this Direction

#### 4. REMOVE DECK FLOOR BOX LH (w/o Spare Tire)


- a. Using a screwdriver with its tip wrapped with protective tape, while pulling the deck floor box LH as shown in the illustration, turn the clip to remove the deck floor box LH.

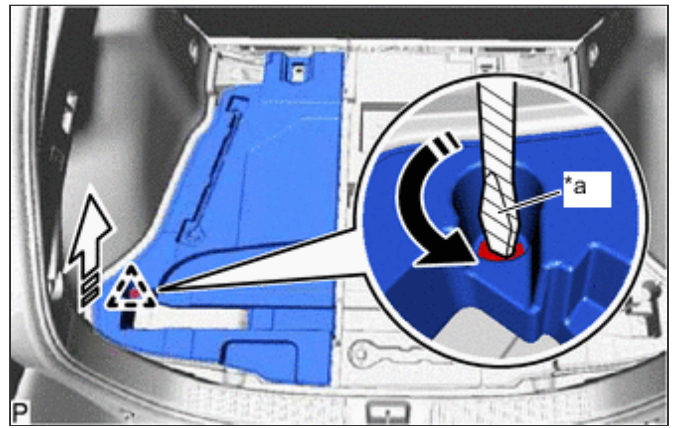

*a	Protective Tape
	Turn in this Direction
	Remove in this Direction

##### 5. REMOVE DECK FLOOR BOX RH (w/o Spare Tire)

- a. Using a screwdriver with its tip wrapped with protective tape, while pulling the deck floor box RH as shown in the illustration, turn the clip to remove the deck floor box RH.

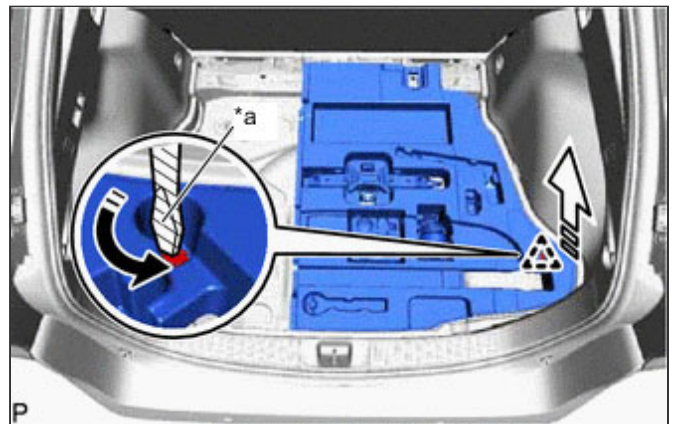

*a	Protective Tape
	Turn in this Direction
	Remove in this Direction


##### 6. REMOVE REAR DECK FLOOR BOX (w/ Compact Spare Tire)

- a. Remove the rear deck floor box.

##### 7. REMOVE DECK FLOOR BOX LH (w/ Compact Spare Tire)

- a. Using a screwdriver with its tip wrapped with protective tape, while pulling the deck floor box LH as


shown in the illustration, turn the clip to remove the deck floor box LH.

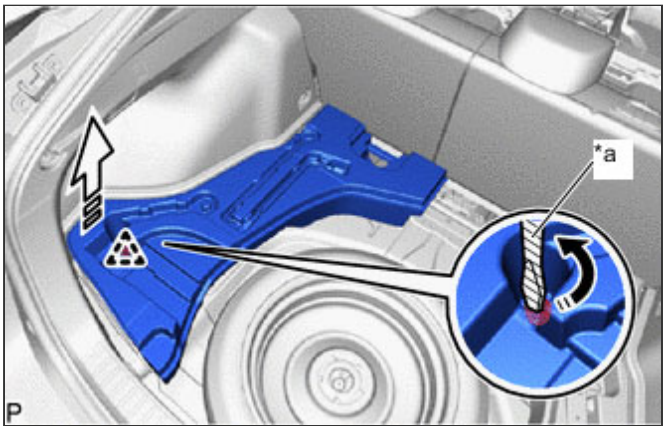

*a	Protective Tape
	Turn in this Direction
	Remove in this Direction

8. REMOVE DECK FLOOR BOX RH (w/ Compact Spare Tire)


- a. Using a screwdriver with its tip wrapped with protective tape, while pulling the deck floor box RH as shown in the illustration, turn the clip to remove the deck floor box RH.

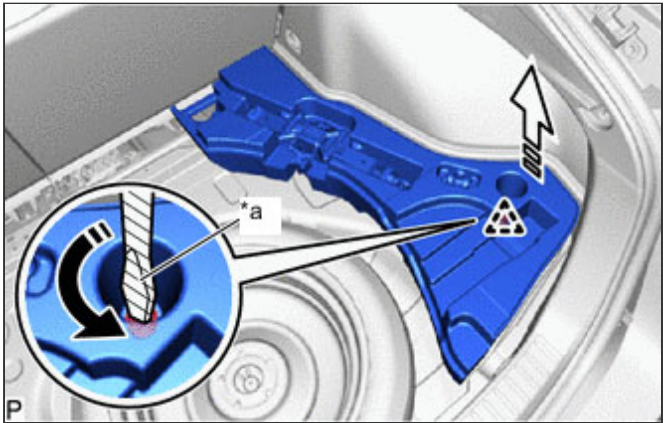

*a	Protective Tape
	Turn in this Direction
	Remove in this Direction

9. REMOVE DECK FLOOR BOX RH (w/ Full Size Spare Tire)


- a. Using a screwdriver with its tip wrapped with protective tape, while pulling the deck floor box RH as shown in the illustration, turn the clip to remove the deck floor box RH.

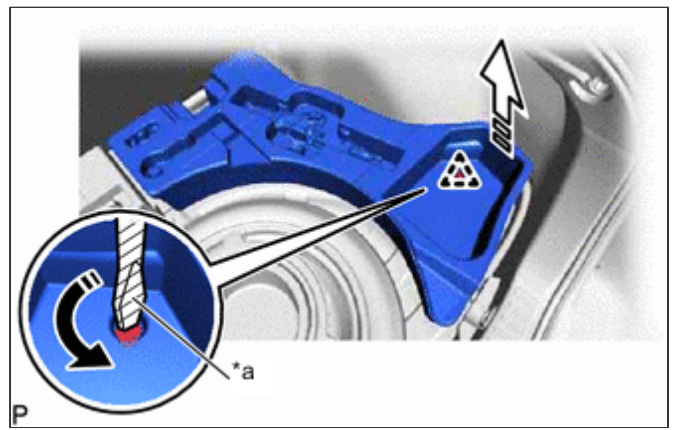

*a	Protective Tape
	Turn in this Direction
	Remove in this Direction

# 10. REMOVE DECK FLOOR BOX LH (w/ Full Size Spare Tire)

- a. Using a screwdriver with its tip wrapped with protective tape, while pulling the deck floor box LH as shown in the illustration, turn the clip to remove the deck floor box LH.

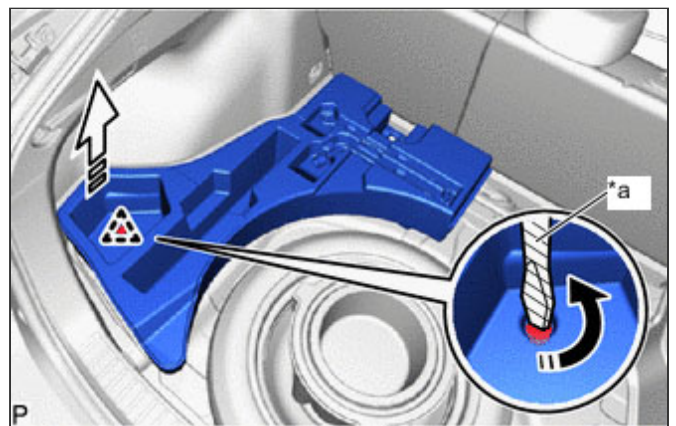

*a	Protective Tape
	Turn in this Direction
	Remove in this Direction

# 11. REMOVE DECK TRIM SERVICE HOLE COVER


[Click here](#)

# 12. REMOVE LUGGAGE HOLD BELT STRIKER ASSEMBLY (for Rear Side)

- a. Remove the 2 bolts.




- b. Disengage the 2 guides to remove the 2 luggage hold belt striker assemblies.

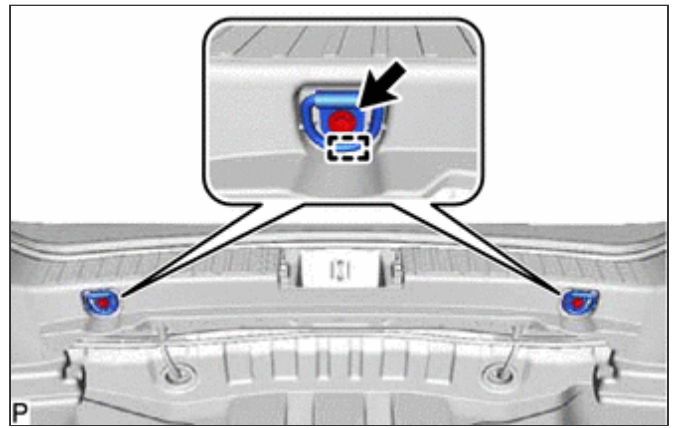

### 13. REMOVE REAR DECK TRIM COVER

- a. Disengage the 4 clips and 2 guides to remove the rear deck trim cover as shown in the illustration.

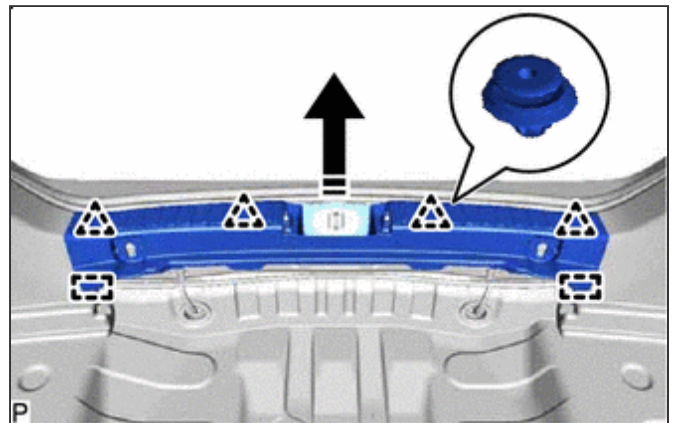


Remove in this Direction

### 14. REMOVE FRONT DOOR SCUFF PLATE LH

- a. Disengage the claw as shown in the illustration.

#### Tech Tips

Use the same procedure for the front side and rear side.

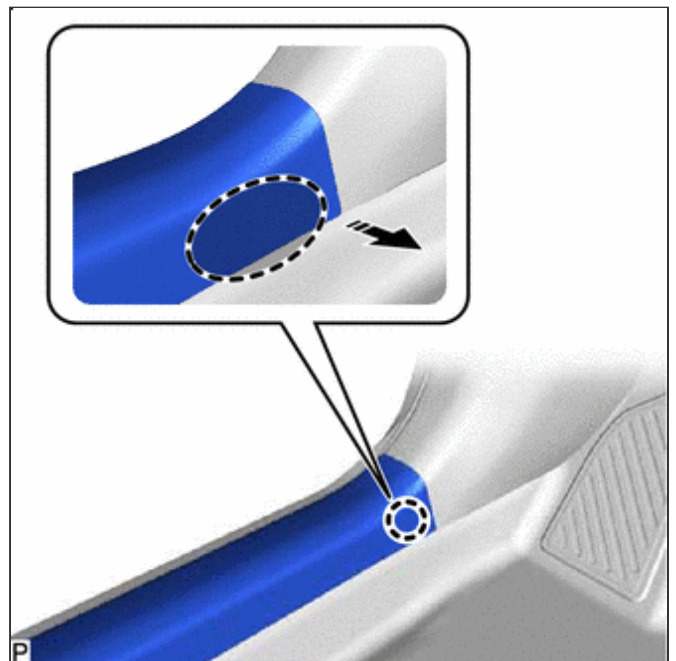


Place Hand Here



Remove in this Direction


- b. Disengage the 6 claws and 2 guides to remove the front door scuff plate LH as shown in the illustration.

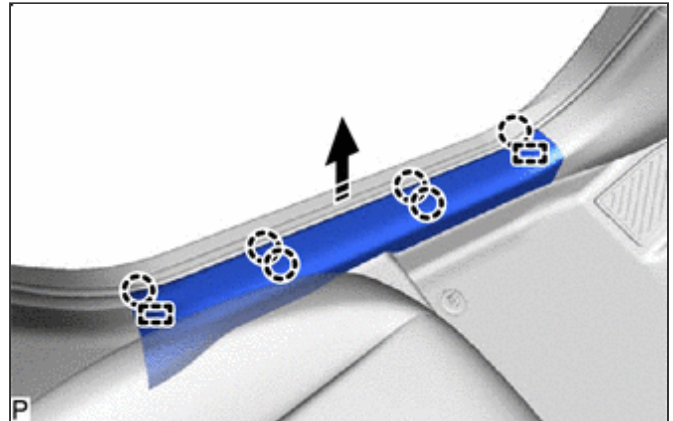

Remove in this Direction

**15. REMOVE COWL SIDE TRIM BOARD LH**

- a. Remove the clip.
- b. Disengage the 2 clips to remove the cowl side trim board LH as shown in the illustration.

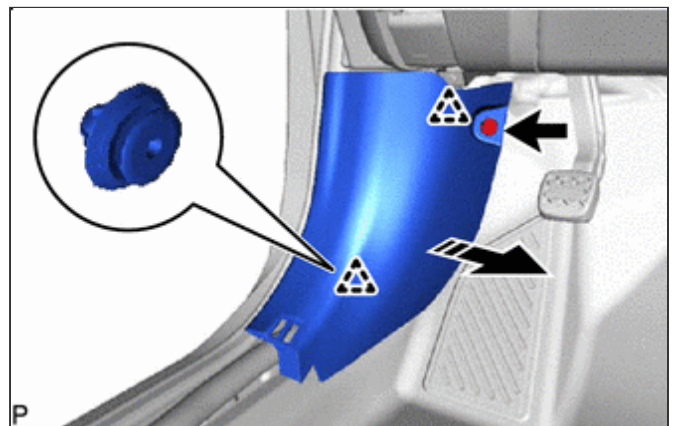


Remove in this Direction


**16. REMOVE FRONT DOOR OPENING TRIM WEATHERSTRIP LH**

[Click here](#)

**17. REMOVE FRONT PILLAR GARNISH LH**

- a. Apply protective tape around the front pillar garnish LH as shown in the illustration.

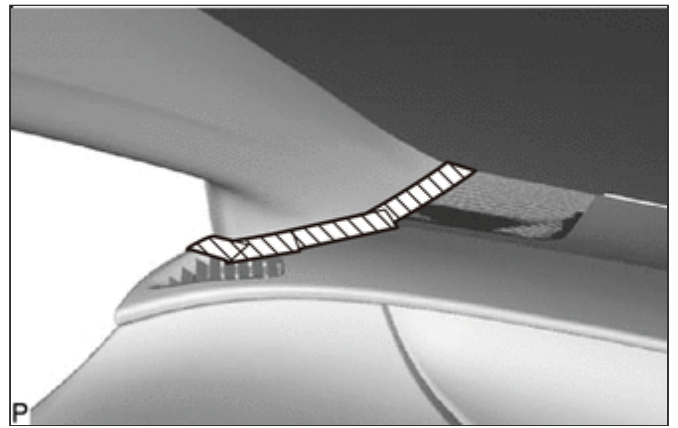




	Protective Tape
---	-----------------

- b. Pull the upper part of the front pillar garnish LH toward the inside of the cabin to disengage the clip and the front pillar garnish LH from the base of the front pillar garnish clip.**

### Tech Tips

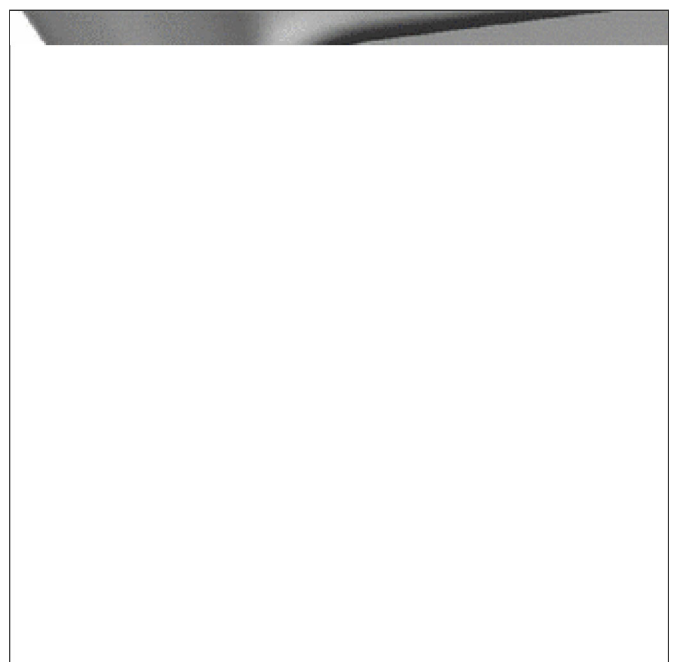Let the front pillar garnish LH hang from the front pillar garnish clip.




*1	Front Pillar Garnish Clip
	Place Hand Here
	Remove in this Direction

- c. While pushing the tabs of the front pillar garnish clip as shown in the illustration, disengage it.**

### Note

The front pillar garnish clip is reusable if it is not damaged.

- d. When the front pillar garnish clip cannot be removed using your fingers:**

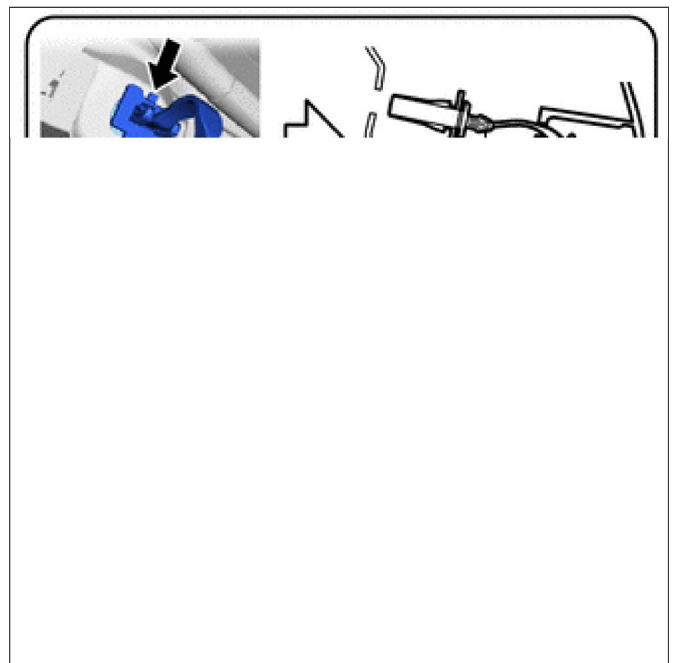

*1	Front Pillar Garnish Clip
	Remove in this Direction

- i. While pressing the part shown in the illustration with your finger, move the front pillar garnish clip in the direction indicated by the arrow (1) shown in the illustration.

	Lift in this Direction (1)
--	----------------------------

- ii. While pulling the front pillar garnish clip in the direction indicated by the arrow (2), push the part shown in the illustration with the end of a screwdriver and remove the front pillar garnish clip.

	Pull in this Direction (2)
--	----------------------------

### Note

If the front pillar garnish clip is damaged, replace it with a new one.

- e. Disengage the 2 guides to remove the front pillar garnish LH as shown in the illustration.

	Remove in this Direction
--	--------------------------

- f. Protect the curtain shield airbag assembly LH.

- i. Cover the curtain shield airbag assembly LH with a piece of cloth or nylon and secure the edges of the cover with tape as shown in the illustration.

*1	Curtain Shield Airbag Assembly LH
*a	Protective Cover
*b	Adhesive Tape

### Note



Cover the curtain shield airbag assembly LH with a protective cover as soon as the front pillar garnish LH is removed.


18.

REMOVE REAR DOOR SCUFF PLATE LH

a. Disengage the claw as shown in the illustration.

	Place Hand Here
	Remove in this Direction

b. Disengage the 6 claws and 3 guides to remove the rear door scuff plate LH as shown in the illustration.

	Remove in this Direction
---	--------------------------

19.

REMOVE REAR DOOR OPENING TRIM WEATHERSTRIP LH

[Click here](#)

20.

REMOVE LAP BELT OUTER ANCHOR COVER (for LH Side)

[Click here](#)

21.

DISCONNECT FRONT SEAT OUTER BELT ASSEMBLY LH

[Click here](#)

22.


REMOVE LOWER CENTER PILLAR GARNISH LH

a. Pull the lower center pillar garnish LH in the directions indicated by the arrows (1) shown in the illustration to disengage the 2 claws (A).

b. Pull the lower center pillar garnish LH in the direction indicated by the arrow (2) shown in the illustration to disengage the 2 claws (B).

*a	Claw (A)
*b	Claw (B)
	Place Hand Here
	Remove in this Direction (1)
	Remove in this Direction (2)

c. Disengage the 3 clips to remove the lower center pillar garnish LH as shown in the illustration.

	Place Hand Here



Remove in this Direction

## 23. REMOVE CENTER PILLAR GARNISH ASSEMBLY LH

a. Using a clip remover, remove the 2 clips.

b. Disengage the guide as shown in the illustration.



Place Hand Here



Remove in this Direction

c. Disengage the clip and 2 guides to remove the center pillar garnish assembly LH as shown in the illustration.



Place Hand Here



Remove in this Direction

## 24. REMOVE FRONT DOOR SCUFF PLATE RH

### Tech Tips

Use the same procedure as for the LH side.

## 25. REMOVE COWL SIDE TRIM BOARD RH

### Tech Tips

Use the same procedure as for the LH side.

## 26. REMOVE FRONT DOOR OPENING TRIM WEATHERSTRIP RH

### Tech Tips

Use the same procedure as for the LH side.

## 27. REMOVE FRONT PILLAR GARNISH RH

### Tech Tips

Use the same procedure as for the LH side.

## 28. REMOVE REAR DOOR SCUFF PLATE RH

### Tech Tips

Use the same procedure as for the LH side.

## 29. REMOVE REAR DOOR OPENING TRIM WEATHERSTRIP RH

### Tech Tips

Use the same procedure as for the LH side.

30.

REMOVE LAP BELT OUTER ANCHOR COVER (for RH Side)

**Tech Tips**  
Use the same procedure as for the LH side.

31.

DISCONNECT FRONT SEAT OUTER BELT ASSEMBLY RH

**Tech Tips**  
Use the same procedure as for the LH side.

32.

REMOVE LOWER CENTER PILLAR GARNISH RH

**Tech Tips**  
Use the same procedure as for the LH side.

33.

REMOVE CENTER PILLAR GARNISH ASSEMBLY RH

**Tech Tips**  
Use the same procedure as for the LH side.

34.


REMOVE REAR SEAT ASSEMBLY

[Click here](#)

35.

REMOVE REAR UNDER SIDE COVER LH

- a. Remove the 2 clips.
- b. Disengage the claw, 4 clips and guide to remove the rear under side cover LH as shown in the illustration.

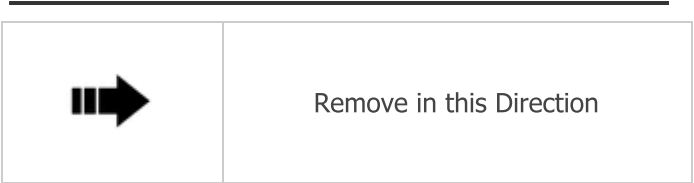

36.

REMOVE REAR SEATBACK HINGE SUB-ASSEMBLY LH

- a. Loosen the bolt to remove the rear seatback hinge sub-assembly LH.




37.

REMOVE REAR SEAT SIDE GARNISH LH

- a. Disengage the claw as shown in the illustration.



- b. Disengage the 2 clips and 2 guides to remove the rear seat side garnish LH as shown in the illustration.

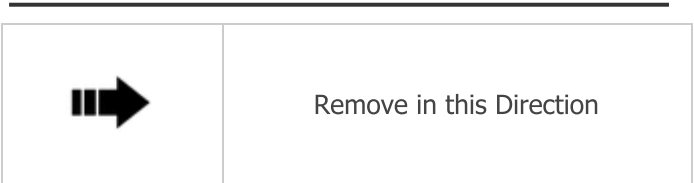

38.

REMOVE LUGGAGE HOLD BELT STRIKER ASSEMBLY (for LH Side)

- a. Remove the bolt.



b. Disengage the guide to remove the luggage hold belt striker assembly.

39. REMOVE NO. 1 TONNEAU COVER HOLDER CAP (for LH Side)

- a. Using a screwdriver with its tip wrapped with protective tape, disengage the 2 claws to remove the No. 1 tonneau cover holder cap as shown in the illustration.

*a	Protective Tape
	Insert Screwdriver Here
	Remove in this Direction

40. REMOVE TONNEAU COVER HOOK A (for LH Side)

- a. Using a screwdriver with its tip wrapped with protective tape, disengage the 2 claws to remove the tonneau cover hook A as shown in the illustration.

*a	Protective Tape
	Insert Screwdriver Here
	Remove in this Direction

41. REMOVE NO. 1 LUGGAGE COMPARTMENT LIGHT ASSEMBLY

[Click here](#)

42. REMOVE DECK TRIM SIDE PANEL ASSEMBLY LH

- a. Lower the No. 2 luggage compartment trim hook as shown in the illustration.

*1	No. 2 Luggage Compartment Trim Hook
----	-------------------------------------

- b. Using a screwdriver with its tip wrapped with protective tape, disengage the clip as shown in the illustration.


**Tech Tips**

Insert the screwdriver into the hole (A).

*1	No. 2 Luggage Compartment Trim Hook
*a	Protective Tape
*b	Hole (A)
*c	Clip
	Insert Screwdriver Here
	Push in this Direction


c. Remove the 2 screws.

d. Disengage the 5 claws, 2 clips and guide to remove the deck trim side panel assembly LH as shown in the illustration.

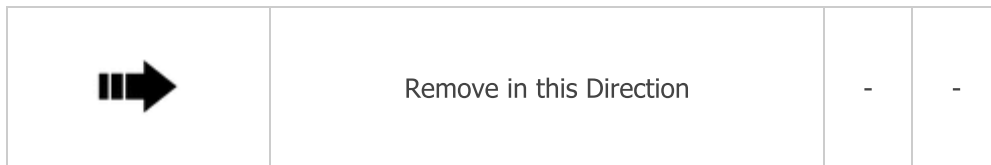

**43. REMOVE ROOF SIDE INNER GARNISH ASSEMBLY LH**

a. Disengage the 5 clips as shown in the illustration to remove the roof side inner garnish assembly LH.

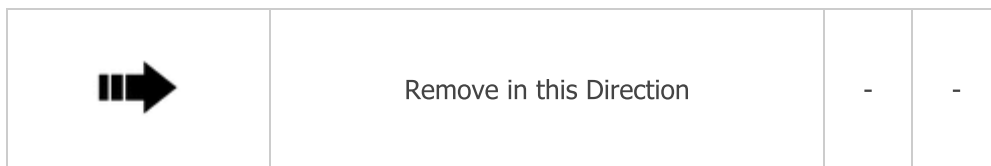

**44. REMOVE REAR UNDER SIDE COVER RH**

**Tech Tips**

Use the same procedure as for the LH side.

**45. REMOVE REAR SEATBACK HINGE SUB-ASSEMBLY RH**

**Tech Tips**

Use the same procedure as for the LH side.

**46. REMOVE REAR SEAT SIDE GARNISH RH**

**Tech Tips**

Use the same procedure as for the LH side.

**47. REMOVE LUGGAGE HOLD BELT STRIKER ASSEMBLY (for RH Side)**

**Tech Tips**

Use the same procedure as for the LH side.

**48. REMOVE NO. 1 TONNEAU COVER HOLDER CAP (for RH Side)**

**Tech Tips**

Use the same procedure as for the LH side.

**49. REMOVE TONNEAU COVER HOOK A (for RH Side)**

**Tech Tips**

Use the same procedure as for the LH side.

**50. REMOVE DECK TRIM SIDE PANEL ASSEMBLY RH**

**Tech Tips**

Use the same procedure as for the LH side.

**51. REMOVE ROOF SIDE INNER GARNISH ASSEMBLY RH**



## Tech Tips

Use the same procedure as for the LH side.

### 52. REMOVE ROOF CONSOLE BOX ASSEMBLY

[Click here](#)

### 53. REMOVE NO. 1 ROOM LIGHT ASSEMBLY

[Click here](#)

### 54. REMOVE SENSOR COVER (w/ Humidity Sensor)

[Click here](#)

### 55. REMOVE AIR CONDITIONING THERMISTOR ASSEMBLY (w/ Humidity Sensor)

[Click here](#)

### 56. REMOVE RAIN SENSOR COVER (w/ Rain Sensor)

[Click here](#)

### 57. REMOVE RAIN SENSOR (w/ Rain Sensor)

[Click here](#)

### 58. REMOVE INNER REAR VIEW MIRROR STAY HOLDER COVER (w/ Inner Rear View Mirror Stay Holder Cover)

[Click here](#)

### 59. REMOVE NO. 2 FORWARD RECOGNITION COVER (w/ Toyota Safety Sense)

[Click here](#)

### 60. REMOVE NO. 1 FORWARD RECOGNITION COVER (w/ Toyota Safety Sense)

[Click here](#)

### 61. REMOVE ASSIST GRIP ASSEMBLY

## Tech Tips

Use the same procedure for all assist grip assemblies.


- a. Using a screwdriver with its tip wrapped with protective tape, disengage the 2 claws and remove the assist grip cover LH.

## Tech Tips

Use the same procedure for the RH side and LH side.

- b. Disengage the 2 clips as shown in the illustration to remove the assist grip assembly.

- c. Remove the 2 clips from the vehicle body.

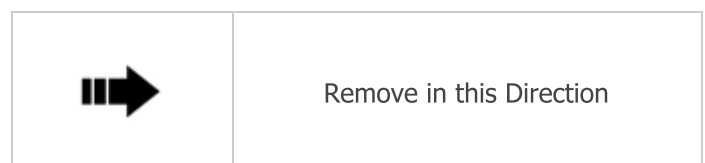

### 62. REMOVE REAR ASSIST GRIP ASSEMBLY LH

## Tech Tips

Use the same procedure as for the assist grip assembly.


### 63. REMOVE REAR ASSIST GRIP ASSEMBLY RH

## Tech Tips

Use the same procedure as for the assist grip assembly.

### 64. REMOVE VISOR BRACKET COVER (for LH Side)

- a. Using a moulding remover, disengage the 4 claws as shown in the illustration and remove the visor bracket cover.

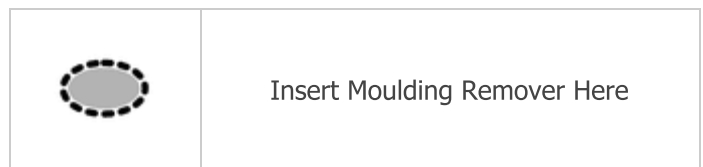


### 65. REMOVE VISOR ASSEMBLY LH

- a. Remove the 2 screws.
- b. Pull the visor assembly LH in the direction indicated by the arrow (1) shown in the illustration to disconnect it from the visor holder.
- c. Pull the visor assembly LH in the direction indicated by the arrow (2) shown in the illustration to remove it.



### 66. REMOVE VISOR HOLDER LH

- a. Turn the visor holder approximately 45° and pull it out as indicated by the arrows, in the order shown in the illustration.
- b. Disengage the 2 claws to remove the visor holder.

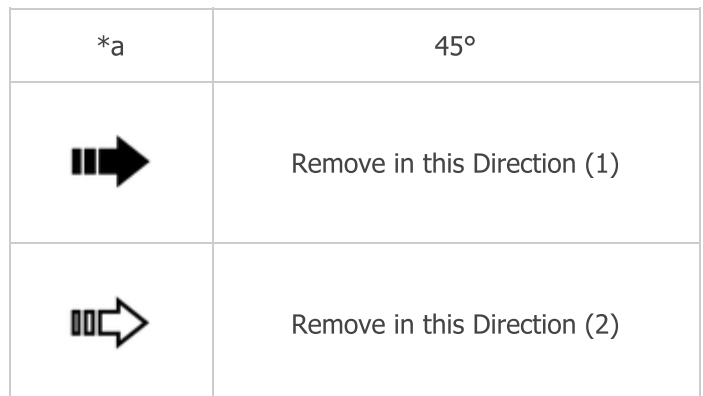

### 67. REMOVE VISOR BRACKET COVER (for RH Side)

## Tech Tips

Use the same procedure as for the LH side.

### 68. REMOVE VISOR ASSEMBLY RH

## Tech Tips

Use the same procedure as for the LH side.

### 69. REMOVE VISOR HOLDER RH

## Tech Tips

Use the same procedure as for the LH side.

### 70. REMOVE ROOF HEADLINING ASSEMBLY

**a. for Windshield Glass Side:**

- i. Disconnect each connector.

**b. for Front Pillar LH Side:**

- i. Remove the protective cover.
- ii. Using a clip remover, disengage the 4 clamps.
- iii. Disconnect the 2 connectors.
- iv. Install the protective cover.

**c. for Front Pillar RH Side:**

- i. Remove the protective cover.
- ii. Using a clip remover, disengage the 3 clamps.
- iii. Disconnect each connector.
- iv. Install the protective cover.

**d. for Rear Pillar RH Side:**

- i. Disconnect the 2 connectors.

**e. for Roof Side (w/o Sliding Roof):**

*A	w/ Television Antenna	-	-
----	-----------------------	---	---

**i. w/ Television Antenna:**

1. Disconnect the connector.

- ii. Using a clip remover, remove the 3 clips.

**f. for Roof Side (w/ Sliding Roof):**

*a	Fastener	*b	Guide
*c	Clamp	-	-

- i. Using a clip remover, disengage the clamp.
- ii. Disconnect each connector.
- iii. Using a clip remover, remove the 3 clips.
- iv. Disengage the 6 fasteners and guide.

**g. Remove the roof headlining assembly from the vehicle through the back door as shown in the illustration.**

**Note**

Do not damage the roof headlining assembly or vehicle interior.

