


AIR CONDITIONER CONTROL ASSEMBLY REMOVAL

AC178-01

- (c) No.2 register
- (d) Cluster finish panel
- (See page BO-91)

Except Electrical Multi Vision:

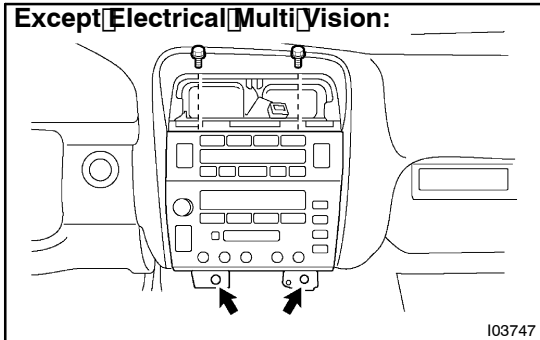


I03747

1. REMOVE A/C CONTROL ASSEMBLY WITH RADIO

Remove the 4 bolts and pull out the A/C control assembly, then disconnect the connectors.

Electrical Multi Vision:

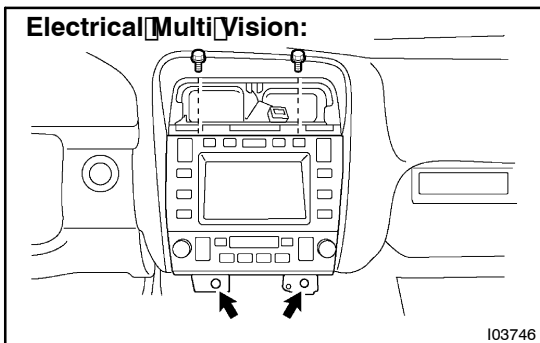


I03746


2. REMOVE A/C CONTROL ASSEMBLY FROM RADIO

Remove the 8 bolts, 2 screw and 2 brackets, then remove the A/C control assembly.

Except Electrical Multi Vision:

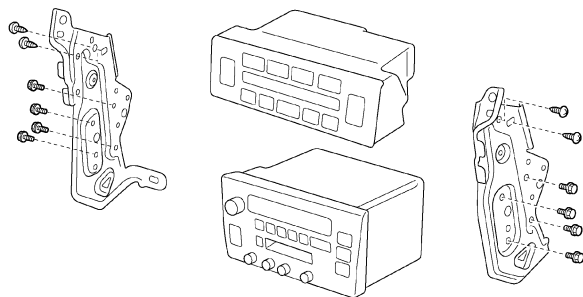

Electrical Multi Vision:

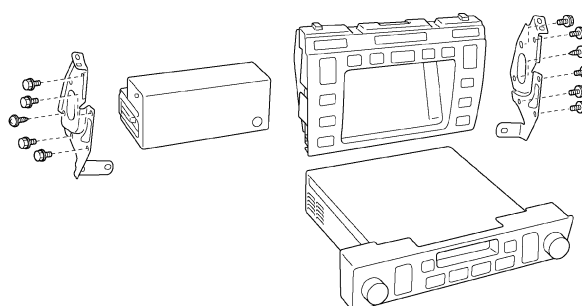

I04720