


E ELECTRICAL WIRING ROUTING

Position of Parts in Instrument Panel

[LHD]

*1 : 3UZ-FE

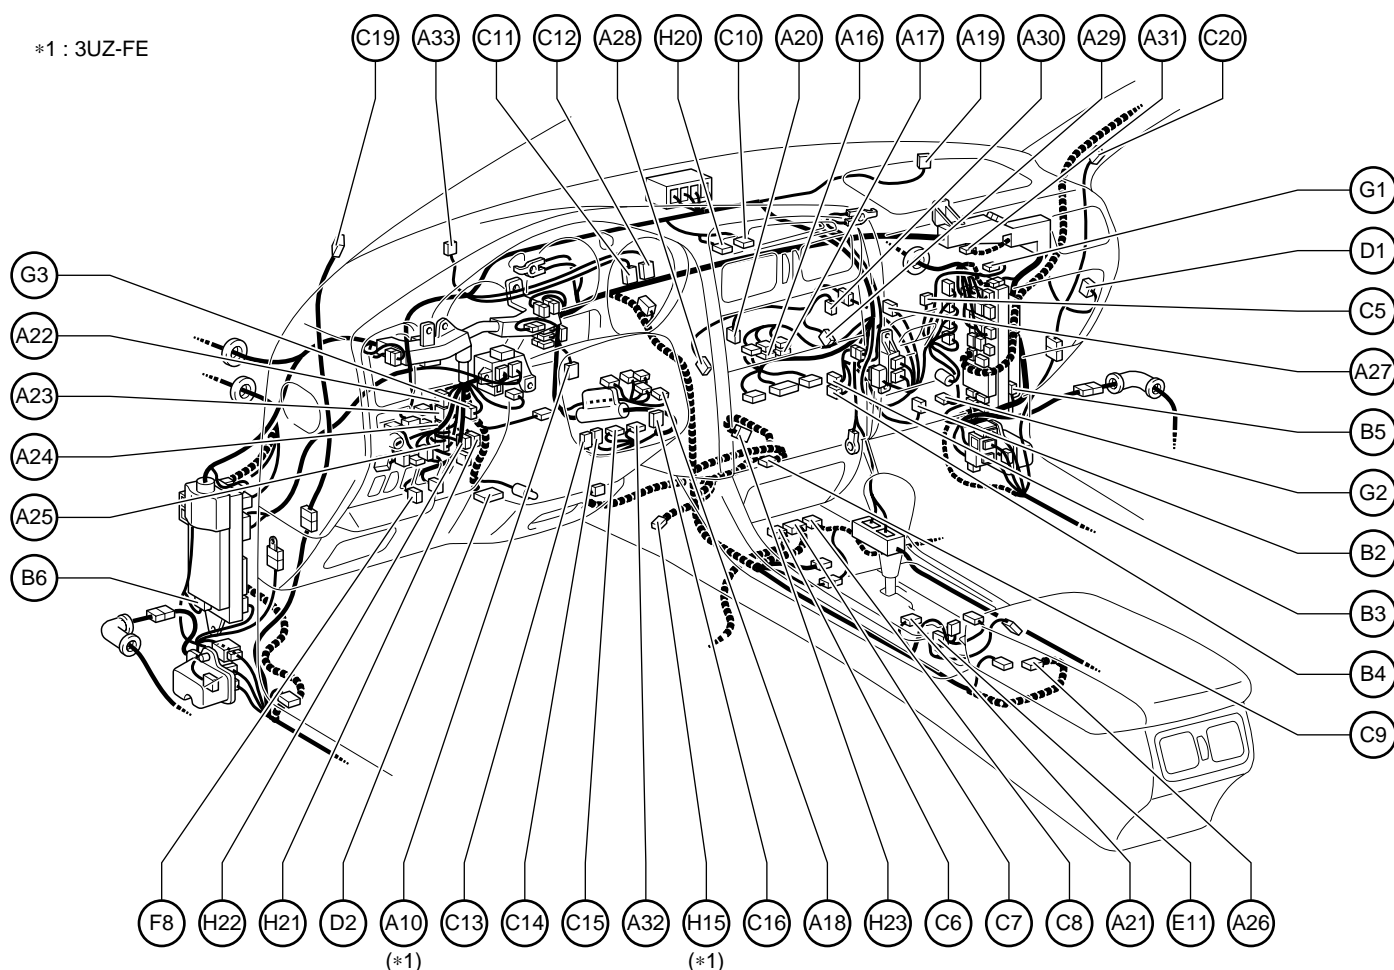

A10 Accel Position Sensor
 A16 A/C Control Assembly
 A17 A/C Control Assembly
 A18 A/C Room Temp. Sensor
 A19 A/C Solar Sensor
 A20 A/C Thermistor
 A21 A/T Shift Position Illumination
 A22 ABS & TRC & VSC ECU
 A23 ABS & TRC & VSC ECU
 A24 ABS & TRC & VSC ECU
 A25 ABS & TRC & VSC ECU
 A26 ABS Deceleration Sensor
 A27 Air Inlet Control Servo Motor
 A28 Air Mix Control Servo Motor (Driver Side)
 A29 Air Mix Control Servo Motor (Front Passenger Side)
 A30 Air Vent Mode Control Servo Motor
 A31 Airbag Squib (Front Passenger Airbag Assembly)
 A32 Airbag Squib (Steering Wheel Pad)
 A33 Automatic Light Control Sensor

B 2 Blower Motor
 B 3 Blower Motor Controller
 B 4 Blower Motor Controller
 B 5 Body ECU No.1
 B 6 Body ECU No.2

C 5 CD Automatic Changer
 C 6 Center Airbag Sensor Assembly
 C 7 Center Airbag Sensor Assembly

C 8 Center Airbag Sensor Assembly
 C 9 Cigarette Lighter
 C10 Clock
 C11 Combination Meter
 C12 Combination Meter
 C13 Combination SW
 C14 Combination SW
 C15 Combination SW
 C16 Combination SW
 C19 Curtain Shield Airbag Squib LH
 C20 Curtain Shield Airbag Squib RH

D 1 Daytime Running Light Relay
 D 2 DLC3

E 11 ECT Pattern Select SW

F 8 Fuel Lid Opener SW

G 1 Glove Box Light
 G 2 Glove Box Light SW
 G 3 Gateway ECU

H15 Heated Oxygen Sensor (Bank 1 Sensor 2)
 H20 Hazard SW
 H21 Headlight Beam Level Control SW
 H22 Headlight Cleaner SW
 H23 Heated Oxygen Sensor (Bank 2 Sensor 2)