


RELAY INSPECTION

AC172-01

1. INSPECT HEATER MAIN RELAY (Marking: HTR) CONTINUITY

| Condition | Tester connection | Specified condition |
|-------------------------------------|-------------------|---------------------|
| Constant | 2 - 4 1 - 3 | Continuity |
| Apply B+ between terminals 1 and 3. | 5 - 4 | Continuity |


If continuity is not as specified, replace the relay.

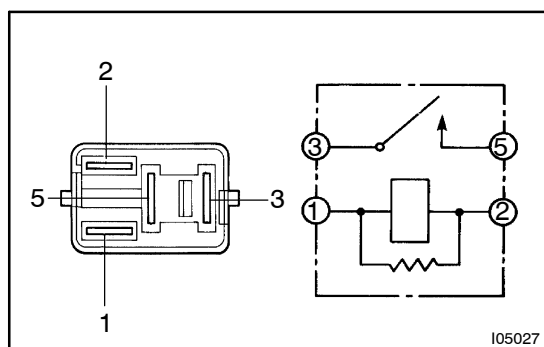

2. INSPECT MAGNETIC CLUTCH RELAY (Marking: A/C COMP) CONTINUITY

| Condition | Tester connection | Specified condition |
|-------------------------------------|-------------------|---------------------|
| Constant | 1 - 2 | Continuity |
| Apply B+ between terminals 1 and 2. | 3 - 5 | Continuity |

If continuity is not as specified, replace the relay.

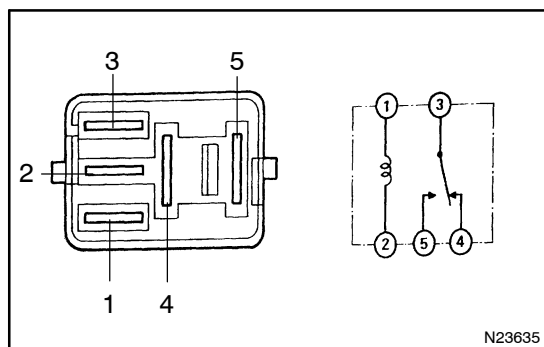

3. INSPECT No.2 COOLING FAN RELAY (Marking: FAN NO.2) CONTINUITY

| Condition | Tester connection | Specified condition |
|-------------------------------------|-------------------|---------------------|
| Constant | 1 - 2 3 - 4 | Continuity |
| Apply B+ between terminals 1 and 2. | 3 - 5 | Continuity |

If continuity is not as specified, replace the relay.

4. INSPECT No.3 COOLING FAN RELAY (Marking: FAN NO.3) CONTINUITY

Check the relay in the same way as for "MAGNETIC CLUTCH RELAY".