


## Connector Joining Wire Harness and Wire Harness

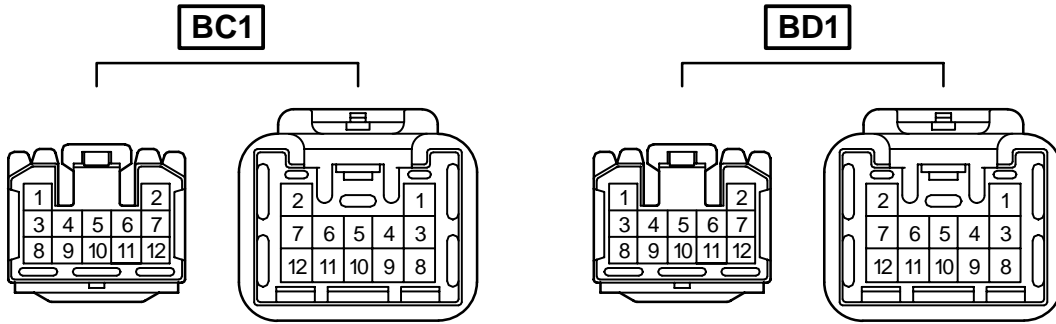

Code	Joining Wire Harness and Wire Harness (Connector Location)
BC1	Floor No.2 Wire and Front Seat LH Wire (Under the Front Passenger's Seat)
BD1	Floor No.1 Wire and Front Seat RH Wire (Under the Driver's Seat)