

SERVICE HINTS

F8 FUEL LID OPENER SW

2-1 : Closed with fuel lid opener SW on

○ : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
F8	72 (LHD)	F14	76 (LHD)	J21	78 (LHD)
	86 (RHD)		90 (RHD)	J44	90 (RHD)

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1F	58 (LHD)	Cowl Wire and Driver Side J/B (Left Kick Panel)
	58 (RHD)	Cowl Wire and Driver Side J/B (Right Kick Panel)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IC3	98 (LHD)	Floor No.2 Wire and Cowl Wire (Left Kick Panel)
	108 (RHD)	


▽ : GROUND POINTS

Code	See Page	Ground Points Location
BJ	102 (LHD)	Rear Floor Partition Panel LH
	112 (RHD)	
BK	102 (LHD)	Quarter Panel LH
	112 (RHD)	


F8 GREEN



F14 BLACK

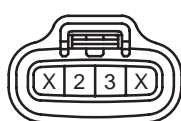

J21

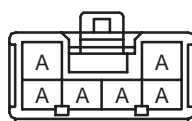

(Hint : See Page 7, 23, 39)

J44



(Hint : See Page 7, 23, 39)