


■ UNDER-FLOOR AIRFLOW RECTIFIER ITEMS

The under-floor airflow rectifier items described in the following table are provided by destination. Together with the engine undercover and the fairings that are located ahead of the front and rear tires, the under-floor airflow rectifier items guide the airflow smoothly under the floor. As a result, the air resistance and the under-floor wind noise have been reduced, thus improving the comfort during high-speed driving.

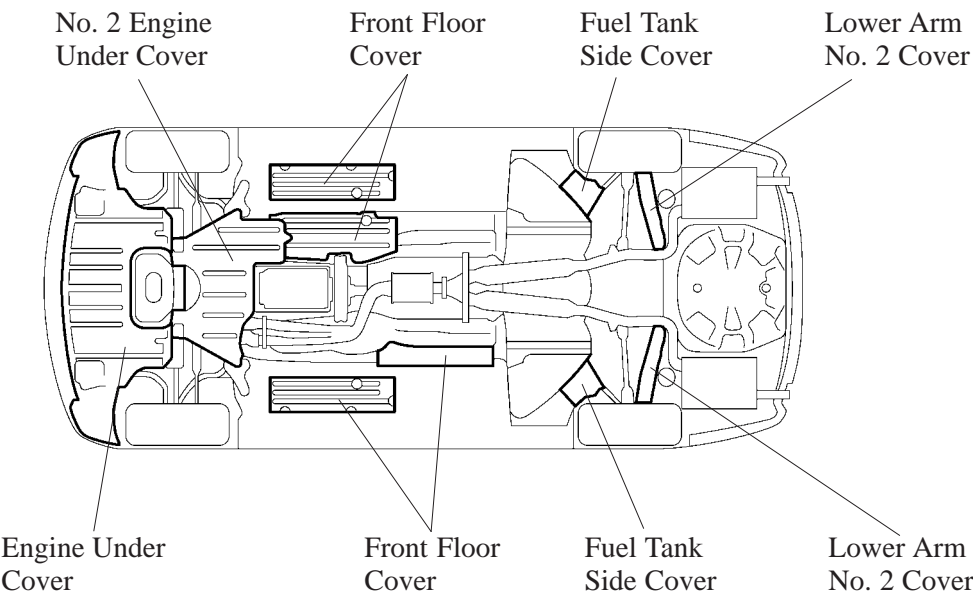

143BO06

BO

Destination Item	Europe	Australia	G.C.C. Countries
No. 2 Engine Under Cover	○	—	○
Fuel Tank Side Cover	○	○	○
Front Floor Cover	○	—	○
Lower Arm No. 2 Cover	○	—	○