


INSTALLATION

NOTICE:

- **Never use SRS parts from another vehicle. When replacing parts, replace them with new ones.**
- **Never reuse the side and curtain shield airbag sensor assembly involved in a collision when the airbag has deployed.**
- **Never repair a sensor in order to reuse it.**

HINT:

For step 3 to 6, refer to page RS-28.

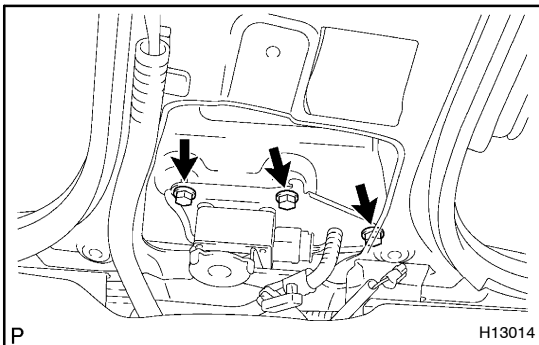

1. INSTALL SIDE AND CURTAIN SHIELD AIRBAG SENSOR ASSEMBLY

- (a) Install the side and curtain shield airbag sensor assembly with 3 bolts.

Torque: 20 N·m (205 kgf·cm, 15 ft·lbf)

- (b) Connect the connector.

NOTICE:

- **Connection of the connector is done after the sensor assembly has been installed.**
- **Make sure the sensor assembly is installed with the specified torque.**
- **If the sensor assembly has been dropped, or there are cracks, dents or other defects in the case, bracket or connector, replace the sensor assembly with a new one.**
- **When installing the sensor assembly, take care that the SRS wiring does not interfere with other parts and is not pinched between other parts.**
- **After installation, shake the sensor assembly to check that there is no looseness.**

2. INSTALL RETRACTOR COVER

3. INSTALL RETRACTOR OF FRONT SEAT OUTER BELT

Torque:

Upper bolt: 7.5 N·m (75 kgf·cm, 67 in·lbf)

Lower bolt: 42 N·m (428 kgf·cm, 31 ft·lbf)

4. INSTALL CENTER PILLAR LOWER GARNISH

5. INSTALL FRONT DOOR SCUFF PLATE

6. INSTALL REAR DOOR SCUFF PLATE