


Door lock control switch circuit

CIRCUIT DESCRIPTION

Door lock control switch circuit can be checked using DTC check. (Refer to DI-836)

WIRING DIAGRAM

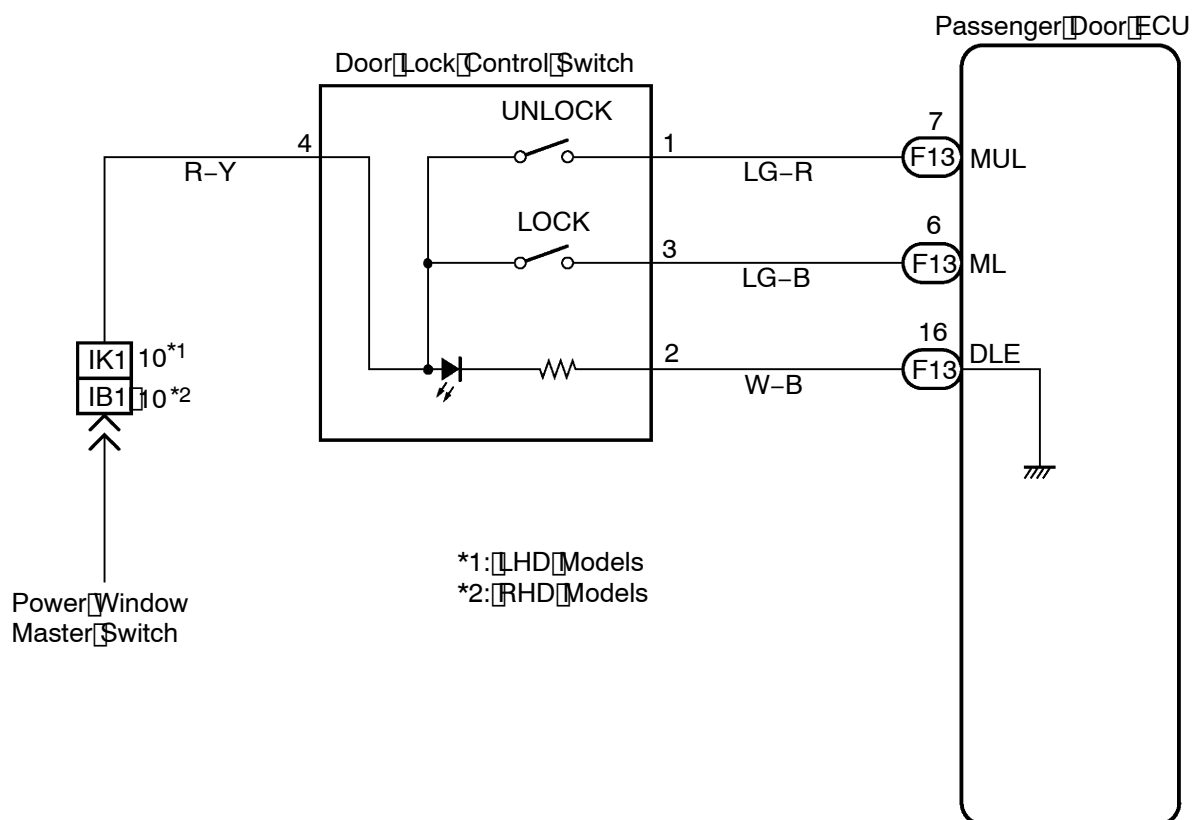

I05632

INSPECTION PROCEDURE

1

Check the door lock control switch circuit using DTC check. (See page DI-836)

OK

Proceed to next circuit inspection shown on problem symptoms table. (See page DI-616)

OK

2

Check the door lock control switch. (See page BE-148)

NG

Replace the door lock control switch.

OK

3

Check wireharness and connector between door lock control switch and passenger door ECU.

NG

Repair or replace wireharness or connector.

OK

4

Check wireharness and connector between door lock control switch and power window master switch.

NG

Repair or replace wireharness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table. (See page DI-616)