


## INSTALLATION

1. **INSTALL WASHER NOZZLE**
2. **INSTALL WIPER MOTOR**

Install the wiper motor with the 2 screws to the wiper link.

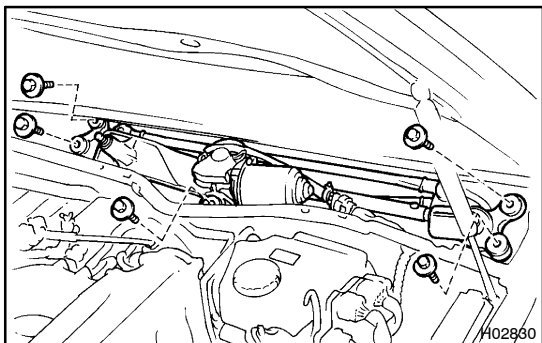

### 3. **INSTALL WIPER LINK ASSEMBLY**


- (a) Install the wiper link assembly with the 5 bolts to the body.

**Torque: 5.4 N·m (55 kgf·cm, 48 in·lbf)**

- (b) Connect the connector.

### 4. **INSTALL THESE PARTS:**

- (a) Cowl Louver
- (b) Weatherstrip

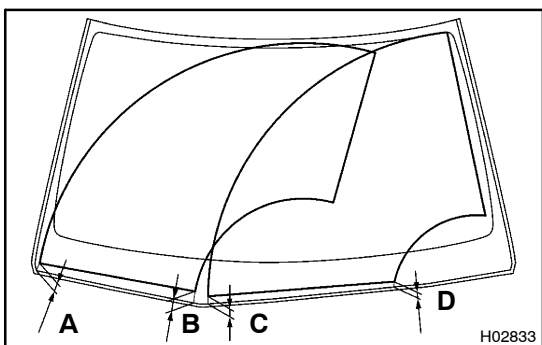

### 5. **INSTALL WIPER ARMS**

- (a) Install the wiper arms and tighten the nuts by hand. Operate the wipers once and turn the wiper switch OFF.

- (b) Adjust the installation positions of the wiper arms to the positions as shown in the illustration.

**A: Approx. 29.0 mm (1.142 in.)**

**B: Approx. 38.5 mm (1.516 in.)**

**C: Approx. 25.0 mm (0.984 in.)**

**D: Approx. 17 mm (0.669 in.)**

- (c) Torque the 2 nuts.

**Torque: 22 N·m (220 kgf·cm, 16 ft·lbf)**