


DISPOSAL

HINT:


When scrapping vehicles equipped with an SRS or disposing of a front passenger airbag assembly, always first deploy the airbag in accordance with the procedure described below. If any abnormality occurs with the airbag deployment, contact the SERVICE DEPT. of the DISTRIBUTOR. When disposing of a front passenger airbag assembly with an airbag deployed in a collision, follow the same procedure given in step 1–(g) in "DISPOSAL".

CAUTION:

- **Never dispose of front passenger airbag assembly which has an undeployed airbag.**
- **The airbag produces a sizeable exploding sound when it deploys, so perform the operation out of doors and where it will not create a nuisance to nearby residents.**

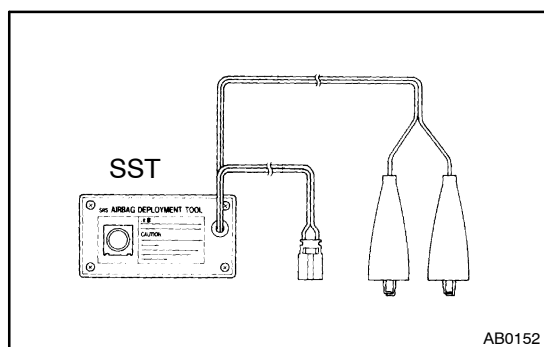

- **When deploying the airbag, always use the specified SST (SRS Airbag Deployment Tool). Perform the operation in place away from electrical noise.**
SST 09082-00700, 09082-00760
- **When deploying an airbag, perform the operation at least 10 m (33 ft) away from the front passenger airbag assembly.**
- **The front passenger airbag is very hot when the airbag is deployed, so leave it alone for at least 30 minutes after deployment.**
- **Use gloves and safety glasses when handling the front passenger airbag assembly with the deployed airbag.**
- **Always wash your hands with water after completing the operation.**
- **Do not apply water etc. to the front passenger airbag assembly with the deployed airbag.**

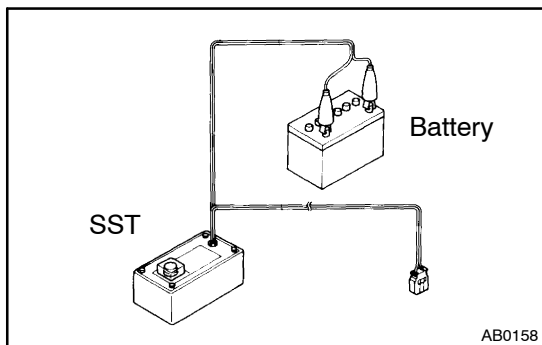

1. AIRBAG DEPLOYMENT WHEN SCRAPPING VEHICLE


HINT:

Have a battery ready as the power source to deploy the airbag.

- (a) Check functioning of SST.

(See page RS-17)

SST 09082-00700, 09082-00760

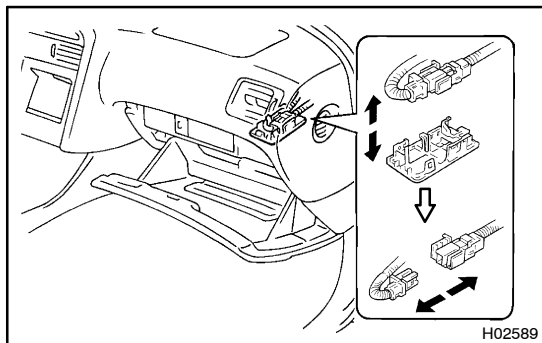


- (b) Disconnect the airbag connector.

- (1) Using a screwdriver, remove the glove compartment door finish plate.

HINT:

Tape the screwdriver tip before use.

- (2) Remove the airbag connector from the plate.
(3) Disconnect the airbag connector.

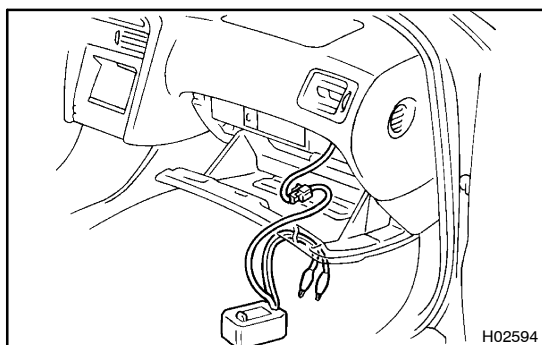


- (c) Install the SST.

- (1) Connect the 2 SST each other, then connect them to the airbag connector of the spiral cable.

SST 09082-00700, 09082-00760

NOTICE:

To avoid damage to the SST connector and wire harness, do not lock the secondary lock of the twin lock.

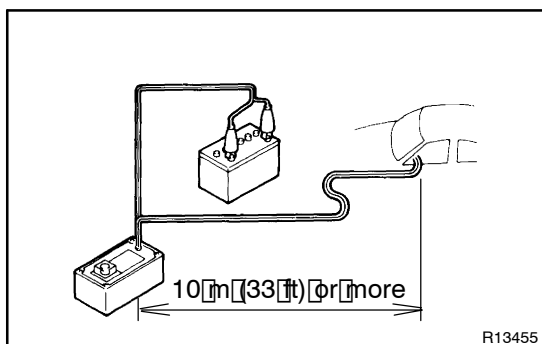


- (2) Move the SST at least 10 m (33 ft) away from the front of the vehicle.
(3) Close all the doors and windows of the vehicle.

NOTICE:

Take care not to damage the SST wire harness.

- (4) Connect the SST red clip to the battery positive (+) terminal and the black clip to the battery negative (-) terminal.

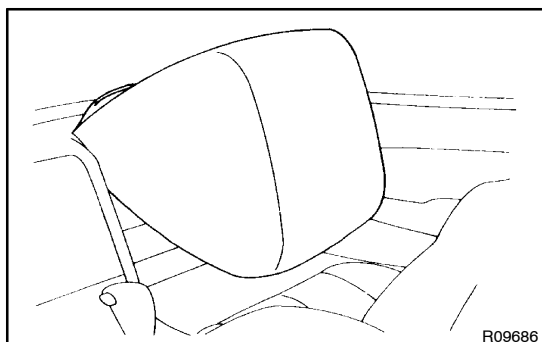

- (d) Deploy the airbag.

- (1) Check that no one is inside the vehicle or within 10 m (33 ft) area around the vehicle.
(2) Press the SST activation switch and deploy the airbag.

HINT:

The airbag deploys simultaneously as the LED of the SST activation switch lights up.

(e) Dispose of front passenger airbag assembly.

CAUTION:

- The front passenger airbag assembly is very hot when the airbag is deployed, so leave it alone for at least 30 minutes after deployment.
- Use gloves and safety glasses when handling a front passenger airbag assembly with the deployed airbag.
- Do not apply water etc., to a front passenger airbag assembly with the deployed airbag.
- Always wash your hands with water after completing the operation.

When scrapping a vehicle, deploy the airbag and scrap the vehicle with the front passenger airbag assembly still installed.

2. DEPLOYMENT WHEN DISPOSING OF FRONT PASSENGER AIRBAG ASSEMBLY

NOTICE:


- When disposing of the front passenger airbag assembly only, never use the customer's vehicle to deploy the airbag.
- Be sure to follow the procedure given below when deploying the airbag.

HINT:

Have a battery ready as the power source to deploy the airbag.


(a) Remove the front passenger airbag assembly.

(See page RS-28)

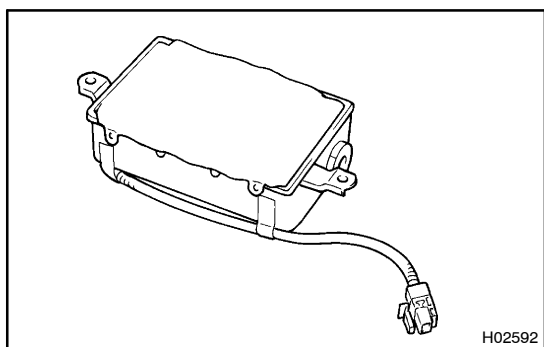

CAUTION:

Store the front passenger airbag assembly with the airbag deployment side facing up.

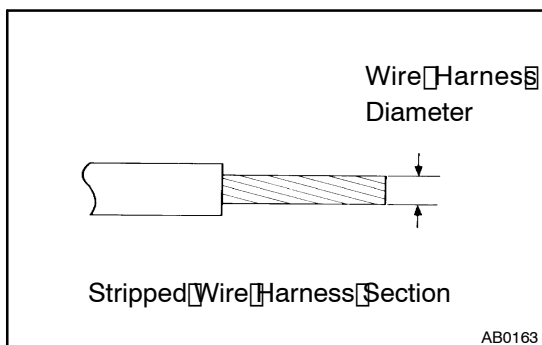

(b) Fix the front passenger airbag assembly.

- (1) Use a service-purpose wire harness tie down the front passenger airbag assembly.

Wire harness: Stripped wire harness section
1.25 mm² or more (0.0019 in² or more)


HINT:

To calculate the square of the stripped wire harness section:
 Square = $3.14 \times (\text{Diameter})^2 \div 4$

CAUTION:

If a wire harness which is too thin or some other thing is used to tie down the front passenger airbag assembly, it may be snapped by the shock when the airbag is deployed. This is highly dangerous. Always use a wire harness for vehicle use which is at least 1.25 mm² (0.0019 in²).

- (2) Wind the wire harness around the mount brackets.

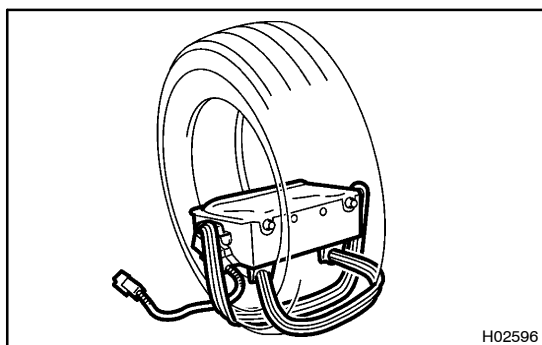

- (3) Position the front passenger airbag assembly inside the tire with the airbag deployment side facing inside.


Tire size: Must exceed the following dimensions—
Width 185 mm (7.28 in.)
Inner diameter 360 mm (14.17 in.)

CAUTION:

- Make sure the wire harness is tight. It is very dangerous when a loose wire harness results in the front passenger airbag assembly coming free due to the shock from the airbag deploying.
- Always tie down the front passenger airbag assembly with the airbag deployment side facing inside.

NOTICE:

The tire will be marked by the airbag deployment, so use the spare tire.

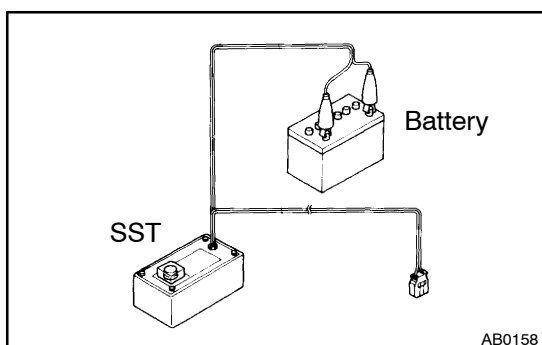

- (c) Check functioning of SST.

(See page RS-17)

SST 09082-00700, 09082-00760


- (d) Install the SST.

Connect the SST connector to the front passenger airbag assembly connector.


SST 09082-00700, 09082-00760

NOTICE:

To avoid damage to the SST connector and wire harness, do not lock the secondary lock of the twin lock.

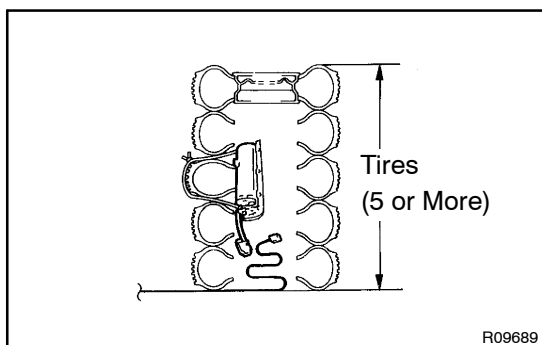

- (e) Place the tires
- (1) Place at least 2 tires under the tire to which the front passenger airbag assembly is tied.
 - (2) Place at least 2 tires over the tire to which the front passenger airbag assembly is tied. The top tier should have the wheel installed.

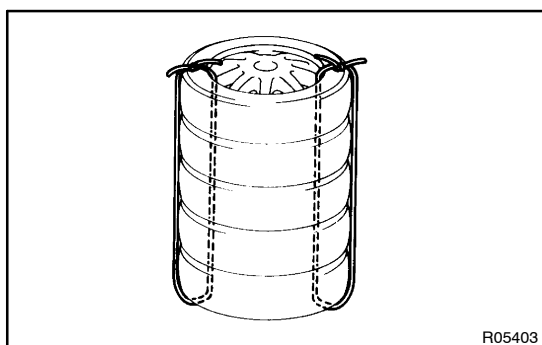


- (3) Tie the tires together with 2 wire harness.

CAUTION:

Make sure that the wire harness is tight. It is very dangerous when loose wire harness results in the tires coming free due to the shock from the airbag deploying.

HINT:


Place the SST connector and wire harness inside tires. Secure at least 1 m (3 ft) of slack for the wire harness.

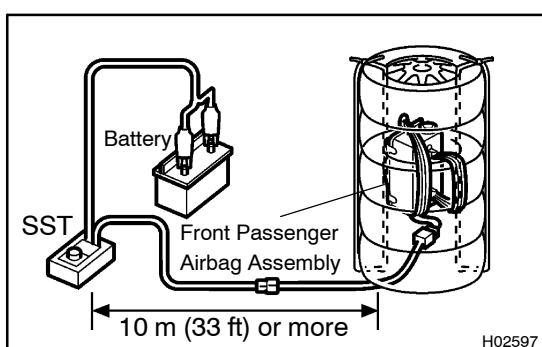

- (f) Deploy the airbag.
- (1) Connect the SST red clip to the battery positive (+) terminal and the black clip to the battery negative(-) terminal.
 - (2) Check that no one is within 10 m (33 ft) area around the tire which the front passenger airbag assembly is tied to.
 - (3) Press the SST activation switch and deploy the airbag.

HINT:

The airbag deploys simultaneously as the LED of the SST activation switch lights up.

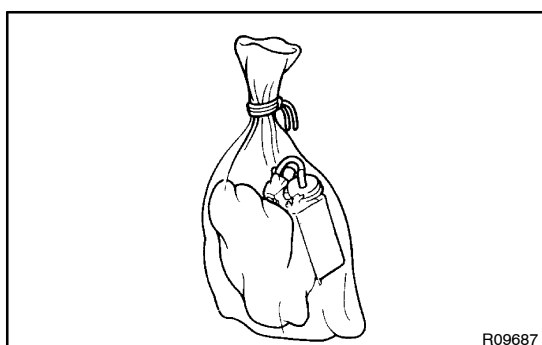

- (g) Dispose of front passenger airbag assembly.

CAUTION:

- The front passenger airbag assembly is very hot when the airbag is deployed, so leave it alone for at least 30 minutes after deployment.
- Use gloves and safety glasses when handling a front passenger airbag assembly with the deployed airbag.
- Always wash your hands with water after completing the operation.

- **Do not apply water, etc. to a front passenger airbag assembly with the deployed airbag.**
 - (1) Remove the front passenger airbag assembly from the tire.
 - (2) Place the front passenger airbag assembly in a vinyl bag, tie the end tightly and dispose of it in the same way as other general parts disposal.