

F02900



REASSEMBLY

Reassembly is in the reverse order of disassembly (See [page BR-15](#)).

INSTALL ACCUMULATOR BRACKET

When installing the accumulator bracket, adjust to ensure that clearance (A, B, D and E) shown in the illustration on the left corresponds to each value in the graphs below and are within the C range, using a thickness gauge.

C Range: 0.1 – 0.4 mm (0.004 – 0.016 in.)

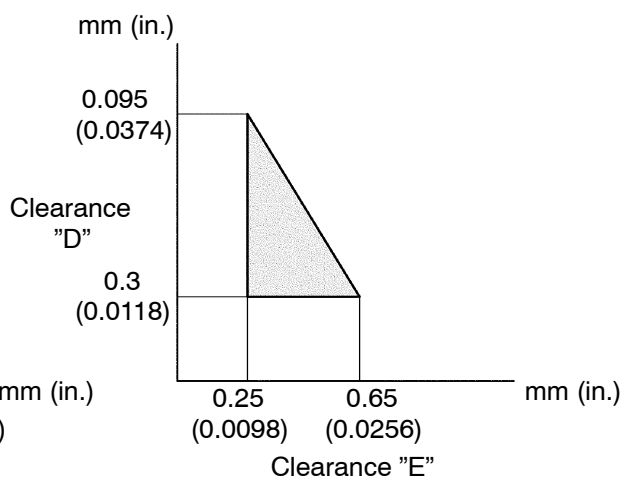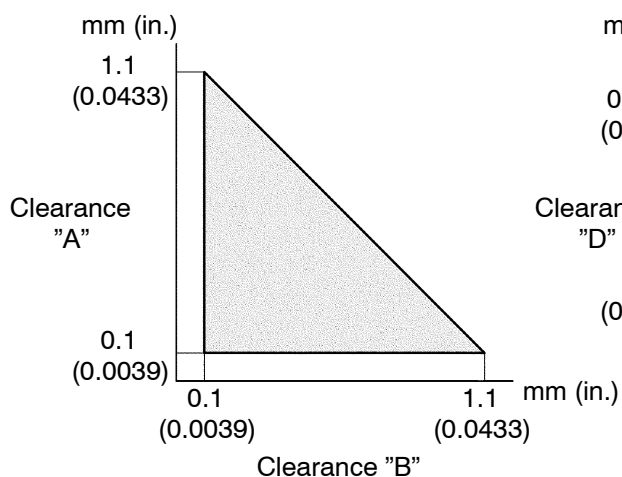

F02901