


EXTENSION HOUSING DISASSEMBLY

AT05F-01


1. REMOVE OIL SEAL EXTENSION HOUSING

Using a screwdriver, remove the oil seal.

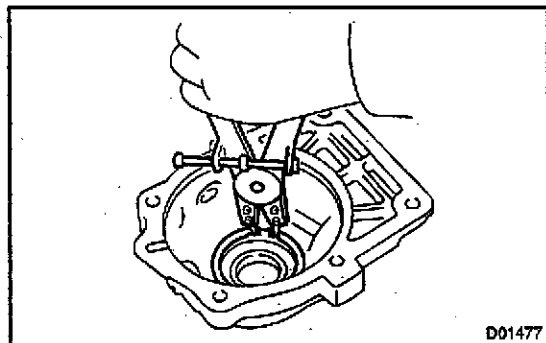

2. REMOVE EXTENSION HOUSING BEARING


- (a) Using snap ring pliers, remove the snap ring.
- (b) Remove the bearing from the extension housing.

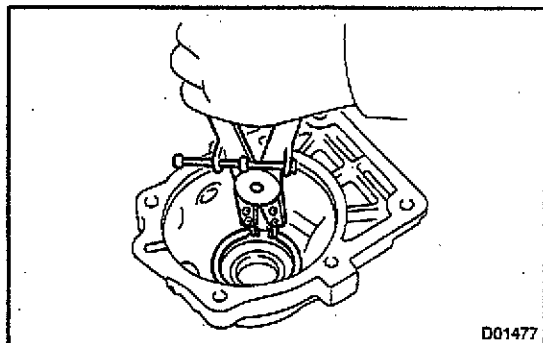

REASSEMBLY

1. INSTALL EXTENSION HOUSING BEARING

- (a) Install the bearing to the extension housing.
- (b) Using snap ring pliers, install the snap ring.

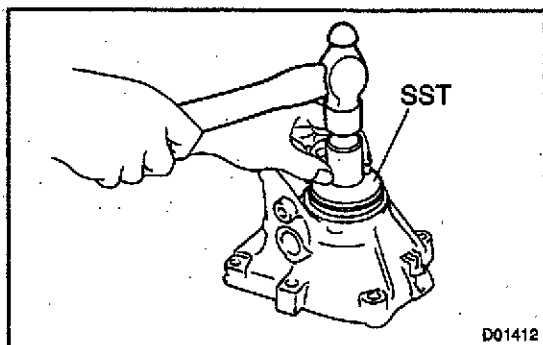

2. INSTALL OIL SEAL TO EXTENSION HOUSING

Using SST, install the new oil seal.

SST 09350-30020 (09350-20013)