


Position of Parts in Body

[LHD]

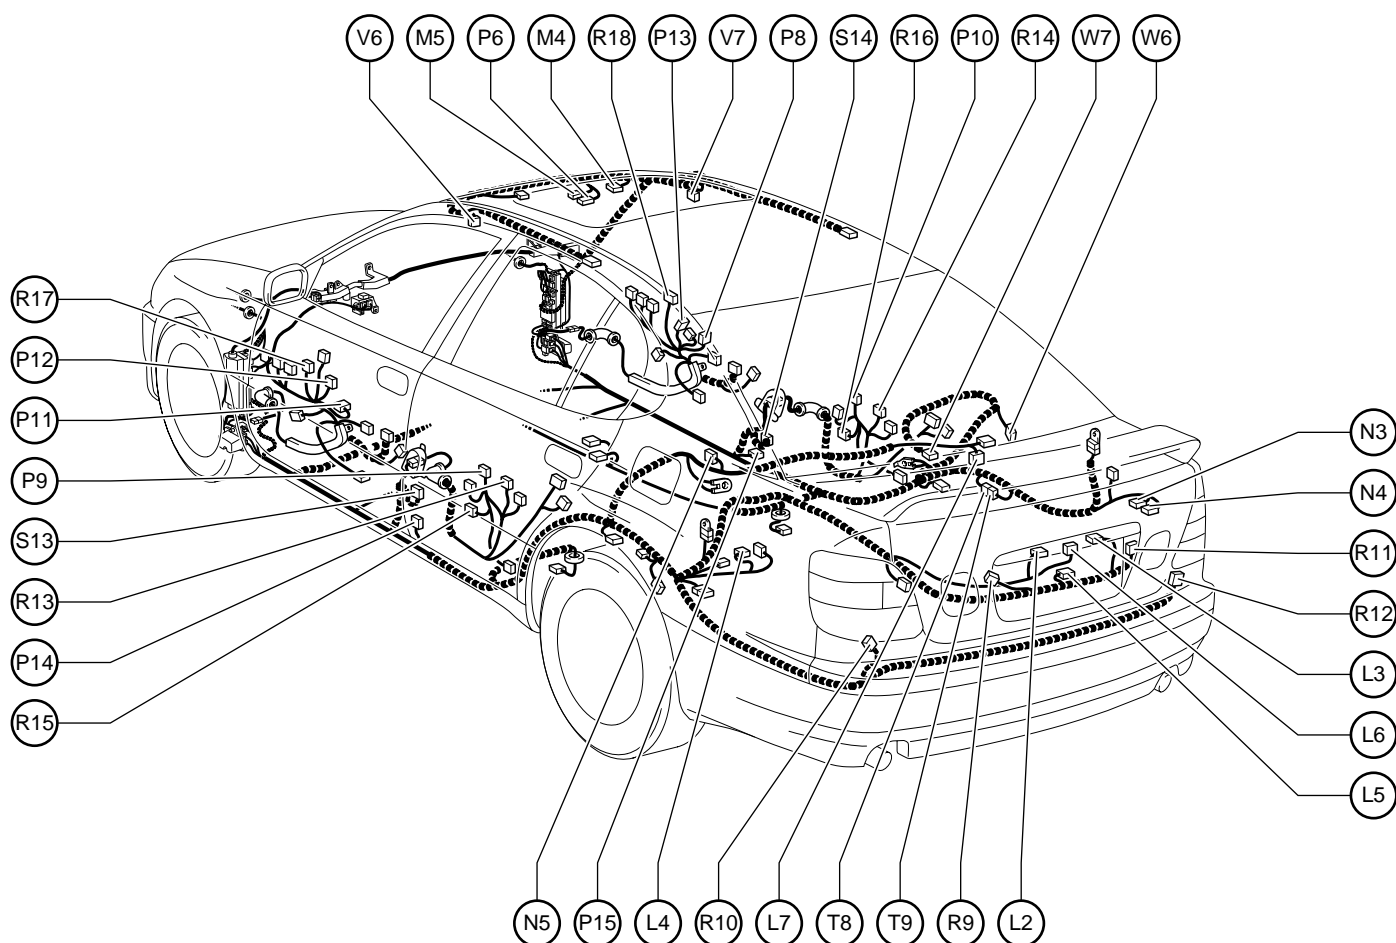

- L 2 License Plate Light LH
- L 3 License Plate Light RH
- L 4 Light Failure Sensor
- L 5 Luggage Compartment Door Courtesy SW and Opener Motor
- L 6 Luggage Compartment Door Key Unlock SW
- L 7 Luggage Compartment Light

- M 4 Moon Roof Control ECU
- M 5 Moon Roof Control SW

- N 3 Navigation ECU
- N 4 Navigation ECU
- N 5 Noise Filter (Rear Window Defogger)

- P 6 Personal Light
- P 8 Power Window Control SW Front RH
- P 9 Power Window Control SW Rear LH
- P10 Power Window Control SW Rear RH
- P11 Power Window Master SW
- P12 Power Window Motor Front LH
- P13 Power Window Motor Front RH
- P14 Pretensioner LH
- P15 Pretensioner RH

- R 9 Rear Combination Light LH
- R10 Rear Combination Light LH
- R11 Rear Combination Light RH
- R12 Rear Combination Light RH
- R13 Rear Door LH ECU
- R14 Rear Door RH ECU
- R15 Rear Door Speaker LH
- R16 Rear Door Speaker RH
- R17 Remote Control Mirror LH
- R18 Remote Control Mirror RH

- S13 Side Airbag Sensor LH
- S14 Side Airbag Sensor RH

- T 8 Telephone Transceiver and Speaker Relay
- T 9 Telephone Transceiver and Speaker Relay

- V 6 Vanity Light LH
- V 7 Vanity Light RH

- W 6 Wireless Door Lock Control ECU
- W 7 Woofer (Speaker)